

leggett & platt®

fashion bed™

5950 West 51st Street – Chicago, IL 60638


Sycamore Duo Parts List

DUO CARTON


- (7) GRILL-1
- (8) LEG EXTENSION-2
- (9) DUO POST-2
- (10) FINIAL-2

HARDWARE BAG FOR DUO ASSEMBLY


- (1) 6MM X 55MM COUNTER SUNK ALLEN HEAD SCREW-10
- (2) 6MM HEX NUT-4
- (3) 6.5MM OD FLAT WASHER-4
- (4) 3/4" OD METAL CAP-8
- (5) ALLEN WRENCH-1
- (6) PLASTIC GLIDE-2
- (11) OPEN WRENCH-1

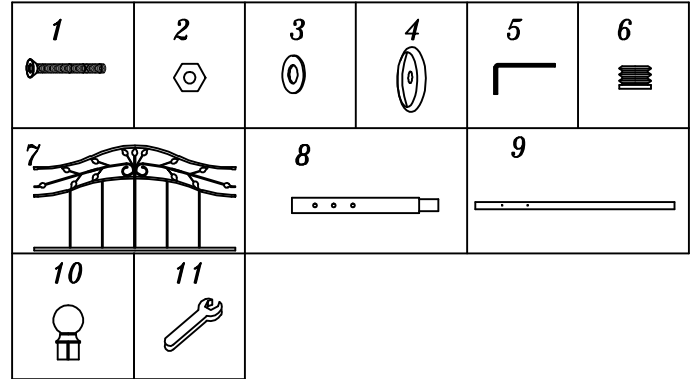

PRODUCT FULLY ASSEMBLED

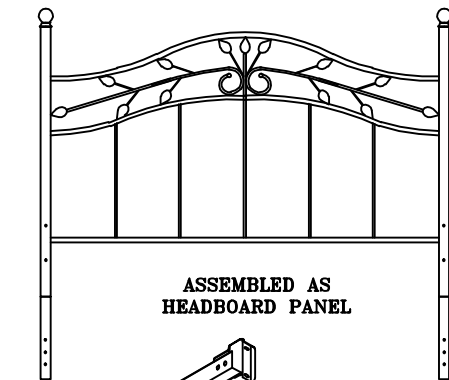


ASSEMBLED AS
HEADBOARD PANEL

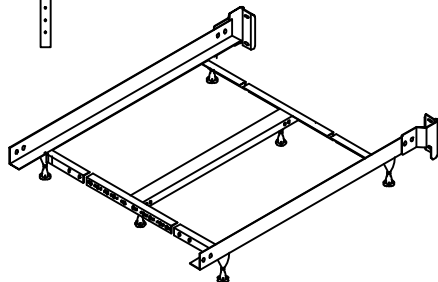


QUEEN – KING HEADBOARD ONLY FRAME FULLY ASSEMBLED FRAMES

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
FOR FRAME ASSEMBLY

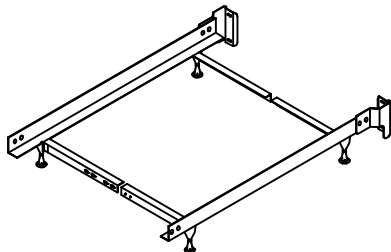


TWIN – FULL HEADBOARD ONLY FRAME FULLY ASSEMBLED

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
FOR FRAME ASSEMBLY

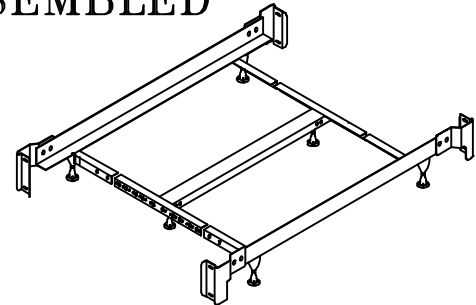

QUEEN – KING BED FRAME FULLY ASSEMBLED

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
FOR FRAME ASSEMBLY

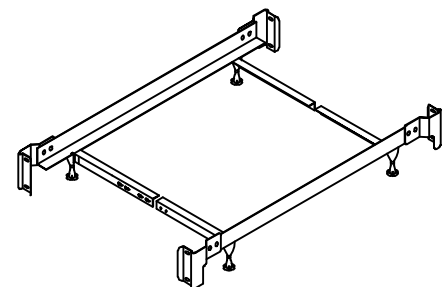



TWIN – FULL BED FRAME FULLY ASSEMBLED

NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
FOR FRAME ASSEMBLY

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS
PRODUCT. CALL OUR HELP DESK AT
1-800-324-3415, BETWEEN 8:30 AM & 4:30 PM
CENTRAL TIME MONDAY THRU FRIDAY. PLEASE
HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU
CALL. (STYLE # OR NAME CAN BE FOUND ON
PACKING CARTON OR SALES RECEIPT.)
OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN
GOOD CONDITION. IF YOUR FURNITURE APPEARS
TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU
ARE IN NEED OF REPLACEMENT PARTS PLEASE
CONTACT THE DEALER FROM WHOM YOU
PURCHASED THE PRODUCT.

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

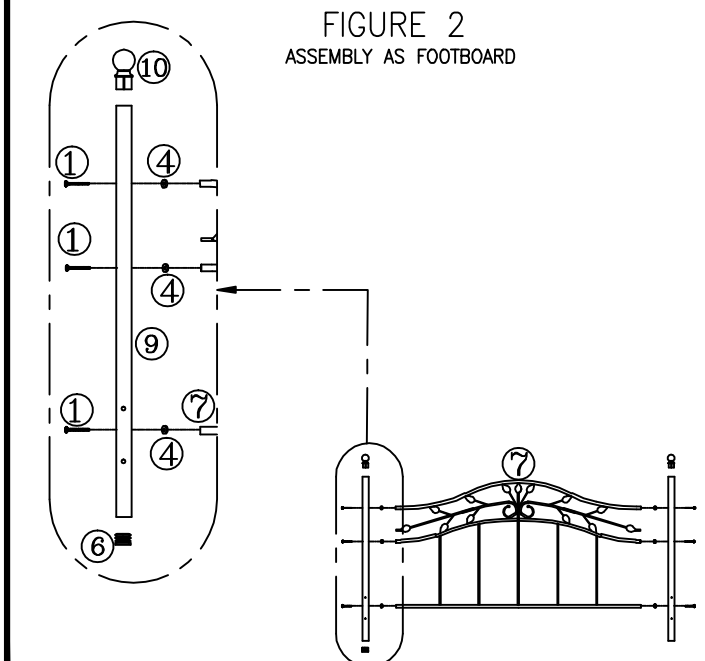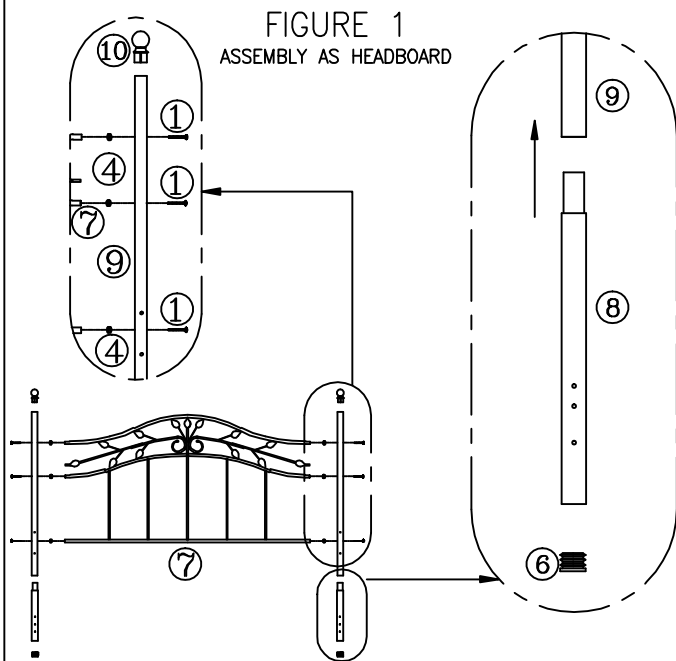

NOTE: This product can be used as Headboard or as Footboard

For Headboard assembly

- Align grill (7) rail ends with holes in post (9). See Figure 1
- Secure post (9) to grill (7) with screws (1) and metal caps (4). See Figure 1
- Repeat on other side of panel.
- Tighten all screws securely using the Allen wrench.
- Align top reduction of extension legs (8) with bottom of headboard posts. (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (8) into bottom of panel posts (9).
- Insert plastic glides (6) into legs (8). See Figure 1
- Push in finials (10) on top of posts (9).

For Footboard assembly

- Discard leg extensions (8) for footboard attachment to frame.
- Align grill (7) rail ends with holes in post (9). See Figure 1
- Secure post (9) to grill (7) with screws (1) and metal caps (4). See Figure 1
- Repeat on other side of panel.
- Tighten all screws securely using the Allen wrench .
- Insert plastic glides (6) into post (9). See Figure 1

Headboard attachment to frame

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in leg (8). (See Figure 3)
- Align bed frame bracket over screws.
- Place a flat washer (3) first and then a nut (2) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (5) and open wrench (11).

Footboard attachment to Frame

- Place 2 screws (1) through holes located in post (9). (See Figure 4)
- Align bed frame bracket over screws.
- Place a flat washer (3) first and then a nut (2) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of footboard.
- Tighten all screws securely using the Allen wrench (5) and open wrench (11).

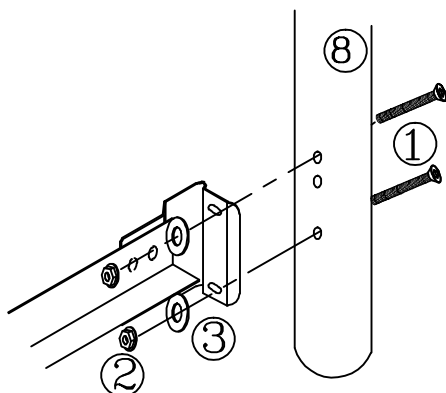


FIGURE 3

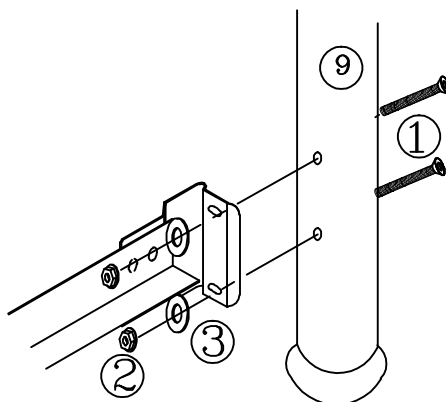


FIGURE 4