

FASHION BED GROUP®

A *Legett & Platt* COMPANY


6755 W. 65th Street-Bedford Park, IL 60638

Parts List For Sanford Twin Bed



BED CARTON

(7) HEADBOARD PANEL
(8) FOOTBOARD PANEL
PART #352301 HARDWARE BAG FOR BED
ATTACHMENT TO FRAME

- (1) 1/4-20 2" COUNTER SUNK ALLEN HEAD SCREW-4
(2) 1/4-20 1" FLAT ALLEN HEAD SCREW-4
(3) 5/8" OD FLAT WASHER-8
(4) 1/4-20 HEX NUT-4
(5) ALLEN WRENCH
(8) LEG EXTENSION-2


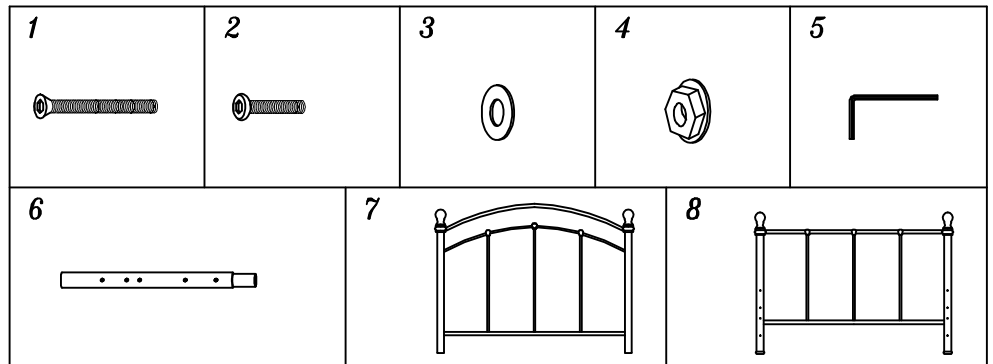


PRODUCT FULLY ASSEMBLED

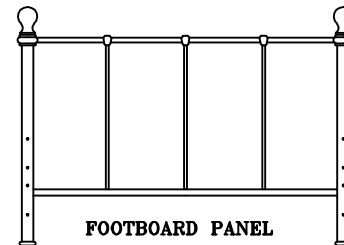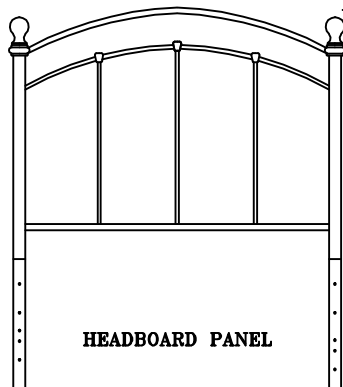


Twin Size Options

- 1st. USE LINK SPRING (UPPER CONNECTION) FOR TRUNDLE
APPLICATION (ONLY A MATTRESS).
2nd. USE FRAME (LOWER CONNECTION) W/BOX SPRING AND
MATTRESS.

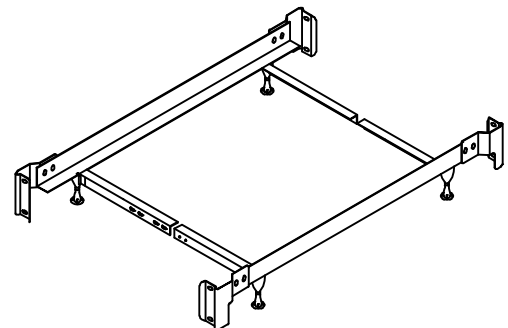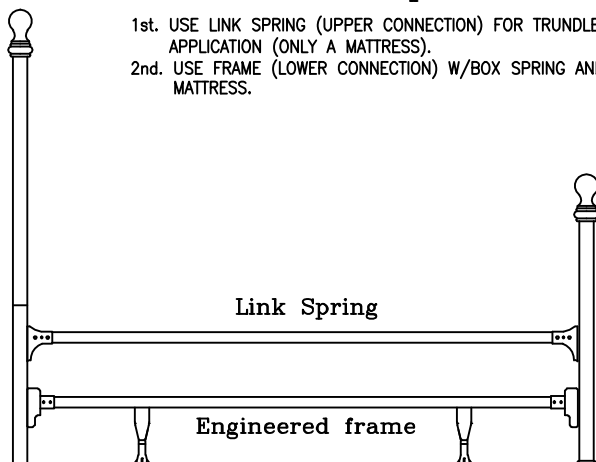


TWIN - FULL FRAME FULLY ASSEMBLED
NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON
FOR FRAME ASSEMBLY

OPTIONAL

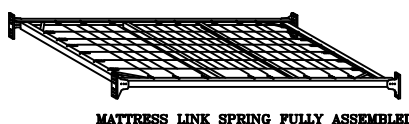

OPTIONAL

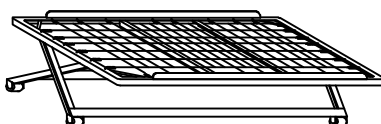

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS
PRODUCT. CALL OUR HELP DESK AT
1-800-324-3415, BETWEEN 8:30 AM & 4:30 PM
CENTRAL TIME MONDAY THRU FRIDAY. PLEASE
HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU
CALL. (STYLE # OR NAME CAN BE FOUND ON
PACKING CARTON OR SALES RECEIPT.)
OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN
GOOD CONDITION. IF YOUR FURNITURE APPEARS
TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU
ARE IN NEED OF REPLACEMENT PARTS PLEASE
CONTACT THE DEALER FROM WHOM YOU
PURCHASED THE PRODUCT.

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1


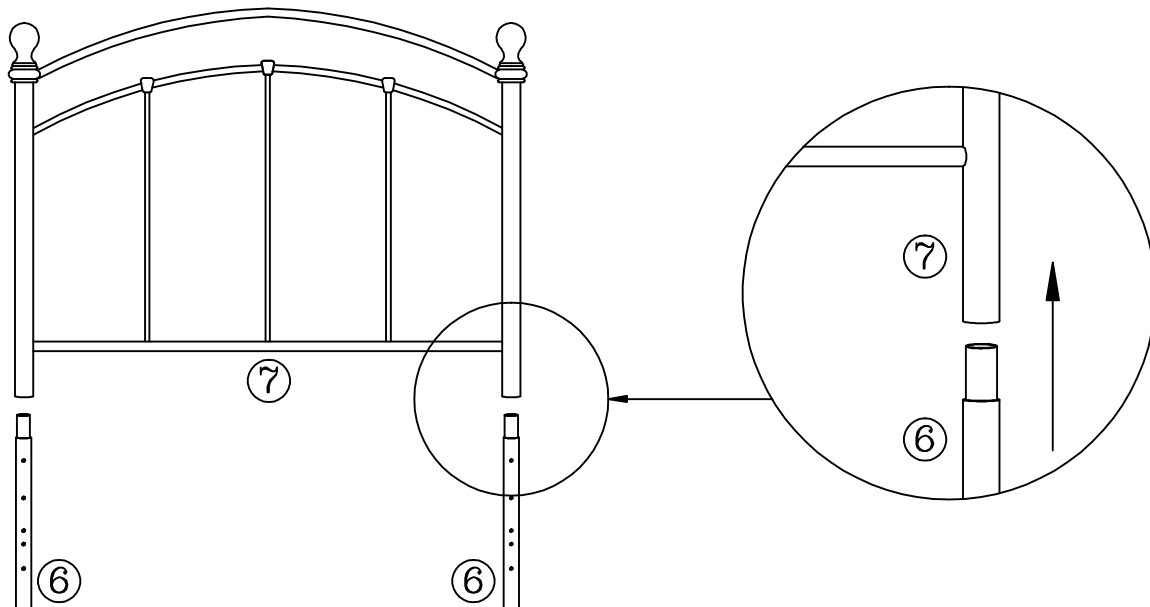


FIGURE 2

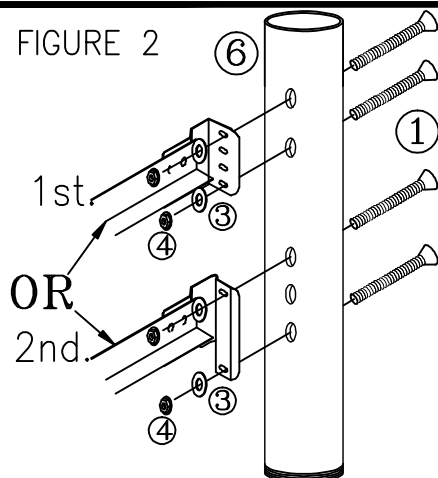


Step 1

- Align top reduction of extension legs (6) with bottom of headboard posts. (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (6) into bottom of headboard (7) posts.

Step 2

- Note: YOU HAVE TWO ASSEMBLY OPTIONS WITH A TWIN SIZE:
1st. USE UPPER ASSEMBLY IF USING AS A TRUNDLE UNIT WITH MATTRESS ONLY.
2nd. USE LOWER FRAME ASSEMBLY IF USING BOX SPRING & MATTRESS.
- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in extension leg (6). (See Fig. 2)
- Align bed frame bracket over screws.
- Place a washer (3) and then a nut (4) on each screw.
- Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (5).

FIGURE 3

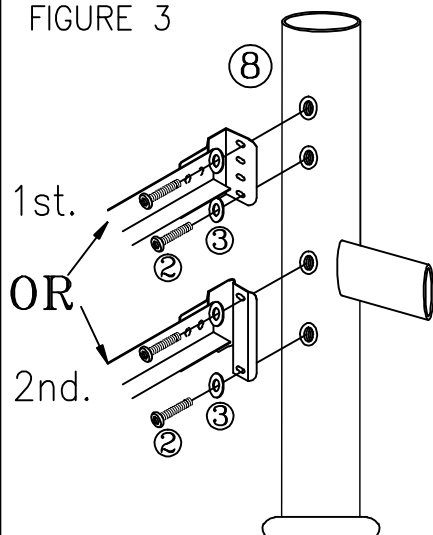

Step 3

- Position footboard panel (8) and align holes in the post with holes in the frame bracket. (See Fig. 3)
Note: Use the same hole position that you used for the headboard attachment of to the frame or link spring.
- Place washer (3) on each screw (2).
Insert through bracket and into footboard post. (See Fig. 3)
Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of footboard panel.
- Tighten all screws securely using the Allen wrench (5).