



# ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



*Fine Furniture for every stage of life*

**306021Q(B1&B2)**  
**Queen Bed**

# ITEM: 306021Q(B1&B2)



## ASSEMBLY INSTRUCTIONS

### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

30 MINUTES

## PARTS IDENTIFICATION

### B1 (BOX1)

A HEADBOARD PANEL

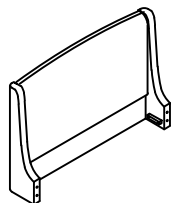

1PC


B HEADBOARD LEG



2PCS

### B2 (BOX2)

C FOOTBOARD PANEL

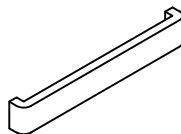


1PC

D FOOTBOARD LEG




2PCS

E BED RAIL

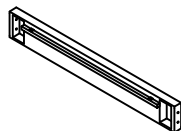


2PCS

F CENTER RAIL

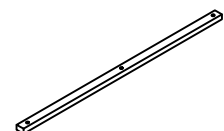

1PC

G ROLL SLAT  
(13PCS)

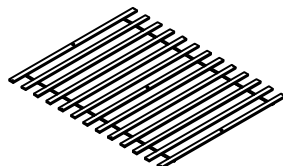


1SET

H CENTER RAIL SUPPORT  
WITH LEVELER




3PCS

HB 306021Q(B1)  
FROM BOX1  
HEADBOARD  
COMPLETE

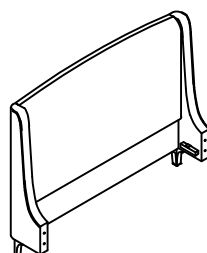

1PC

FB 306021Q(B2)  
FROM BOX2  
HEADBOARD  
COMPLETE

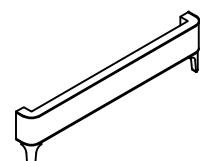

1PC

# ITEM: 306021Q(B1&B2)



## ASSEMBLY INSTRUCTIONS


### ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



### WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

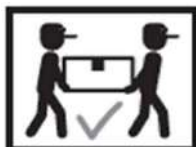





ASSEMBLY TIME









30 MINUTES

## HARDWARE IDENTIFICATION

### Z-B1 (BOX1) - HARDWARE PACK IS LOCATED IN 306021Q(B1)

1	<b>BOLT</b> (Ø5/16" x 50mm - RBW)		4PCS	2	<b>FLAT WASHER</b> (Ø5/16"-RBW)		4PCS
3	<b>LOCK WASHER</b> (Ø5/16"-RBW)		4PCS	4	<b>ALLEN WRENCH</b> (5mm - RBW)		1PC

### Z-B2 (BOX2) - HARDWARE PACK IS LOCATED IN 306021Q(B2)

5	<b>SHORT BOLT</b> (Ø5/16"x50mm-RBW)		4PCS	6	<b>FLAT WASHER</b> (Ø5/16" - RBW)		12PCS
7	<b>LOCK WASHER</b> (Ø5/16" - RBW)		12PCS	8	<b>ALLEN WRENCH</b> (5mm - RBW)		1PC
9	<b>LONG BOLT</b> (Ø5/16" x 100mm - RBW)		8PCS	10	<b>HEX NUT</b> (Ø5/16" - RBW)		8PCS
11	<b>WRENCH</b> (12mm - RBW)		1PC	12	<b>PAN HEAD SCREW</b> (M4 x 35mm - RBW)		8PCS


### NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


# ITEM: 306021Q(B1&B2)

## ASSEMBLY INSTRUCTIONS

### STEP 1

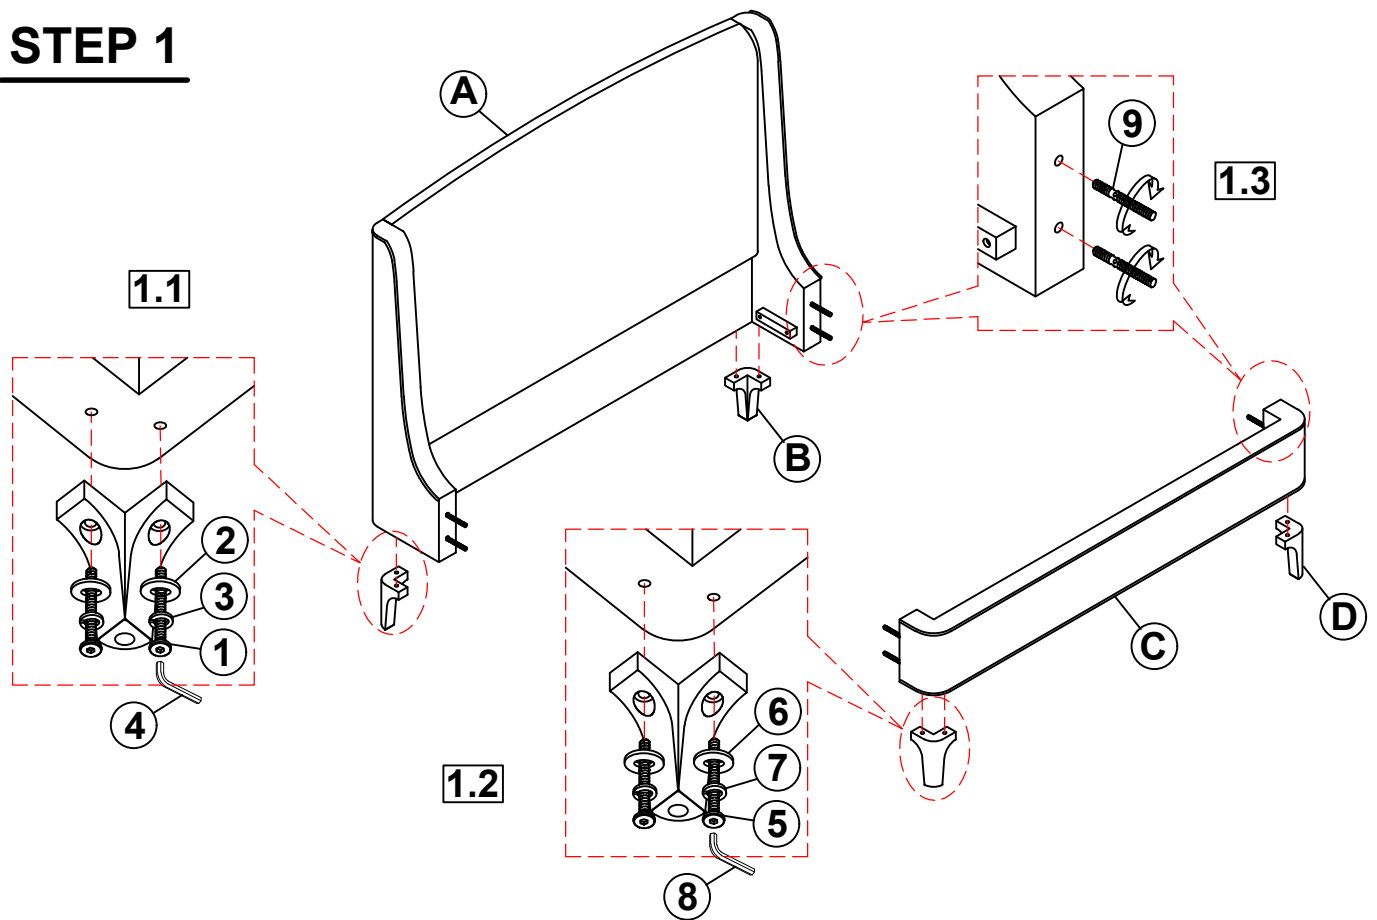

### STEP 2

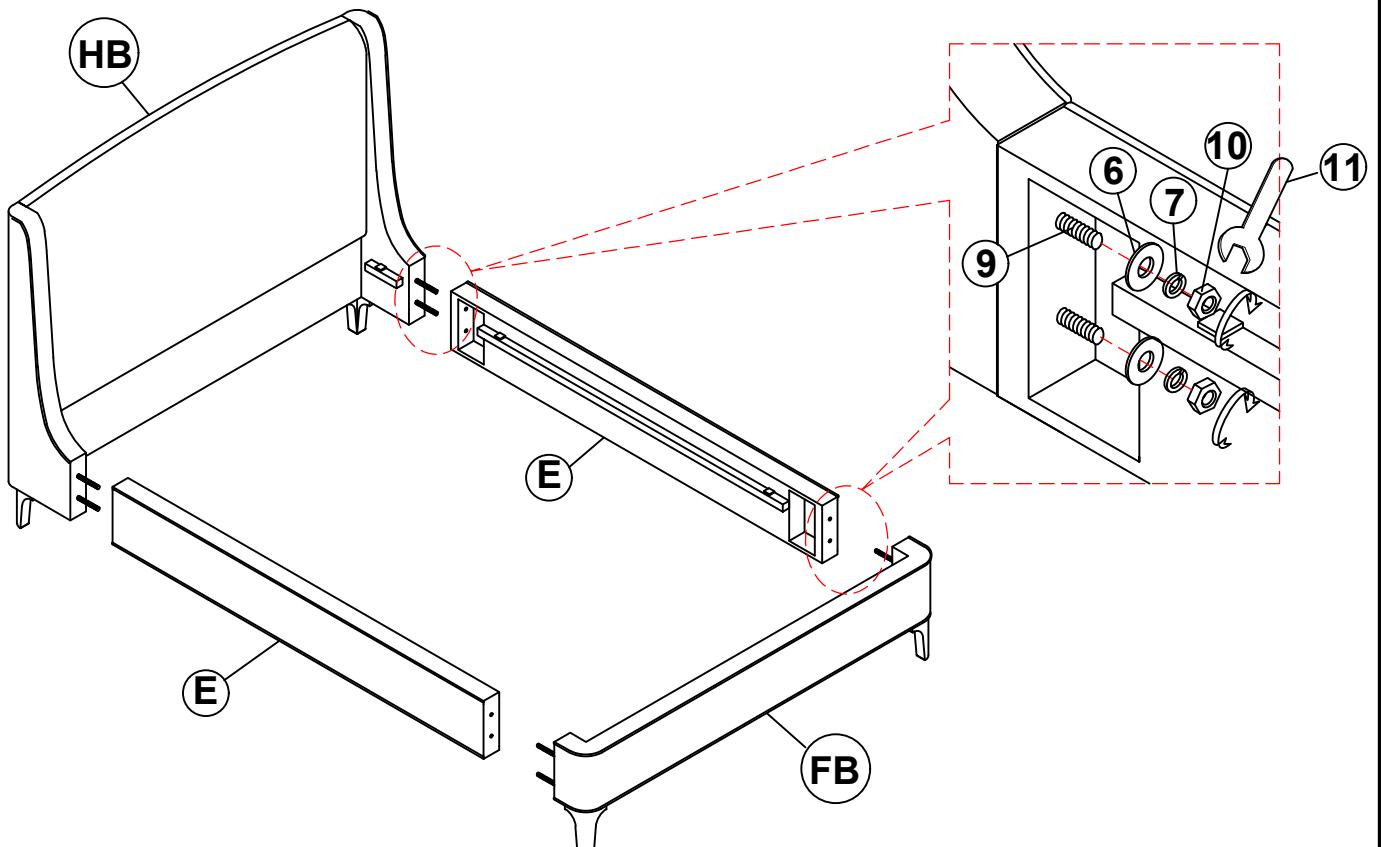


# ITEM: 306021Q(B1&B2)




## ASSEMBLY INSTRUCTIONS



### STEP 3

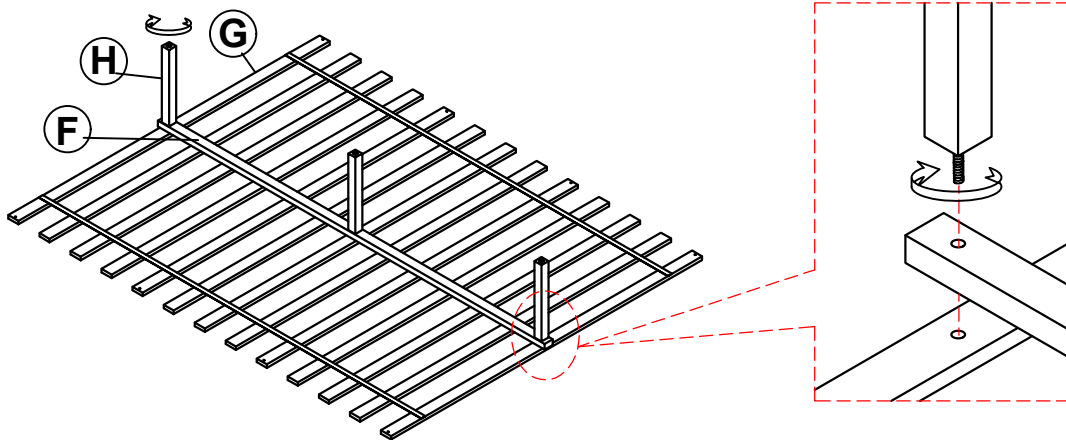

### STEP 4

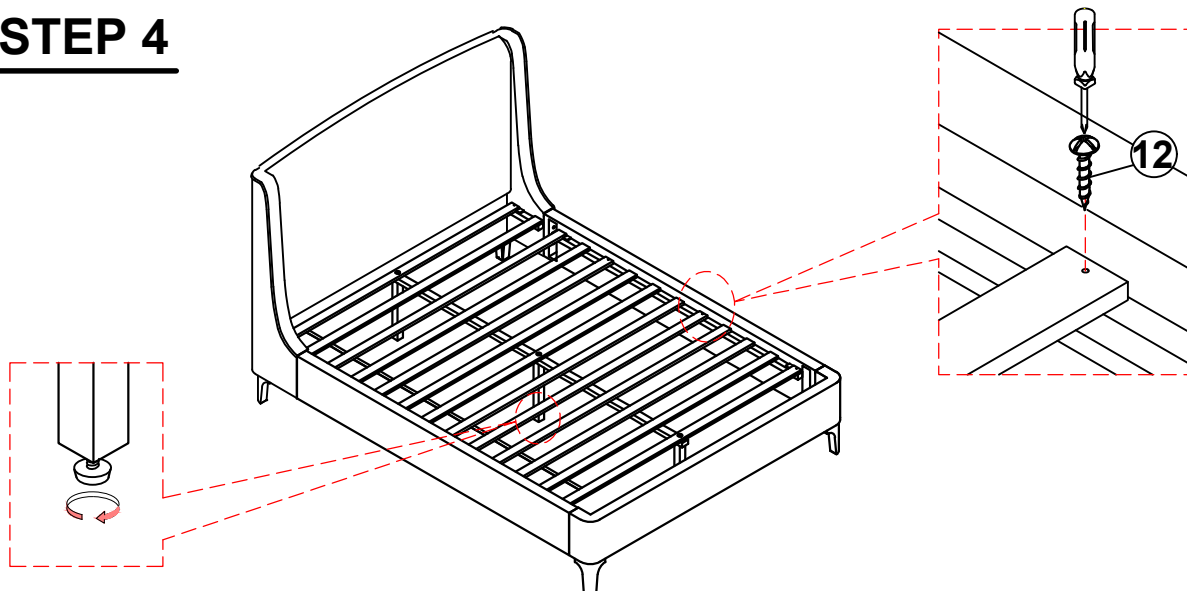


### STEP 5 **COMPLETE**

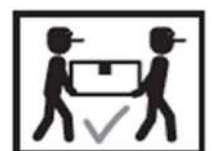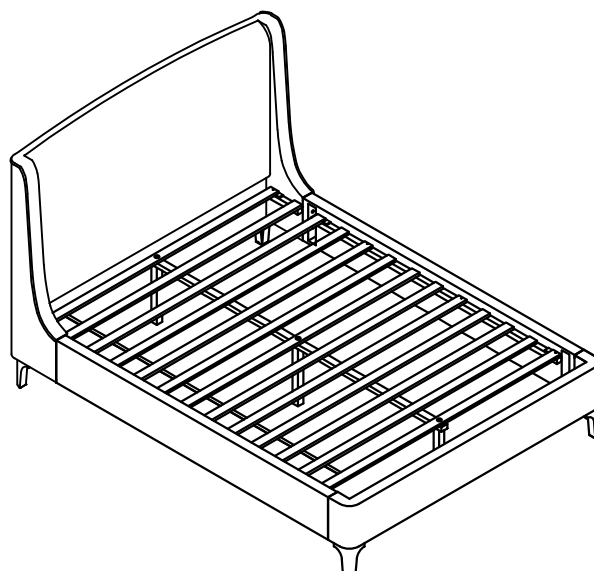

ITEM: 306021Q(B1&B2)



Inner Size: 61.00"W X 81.25"D

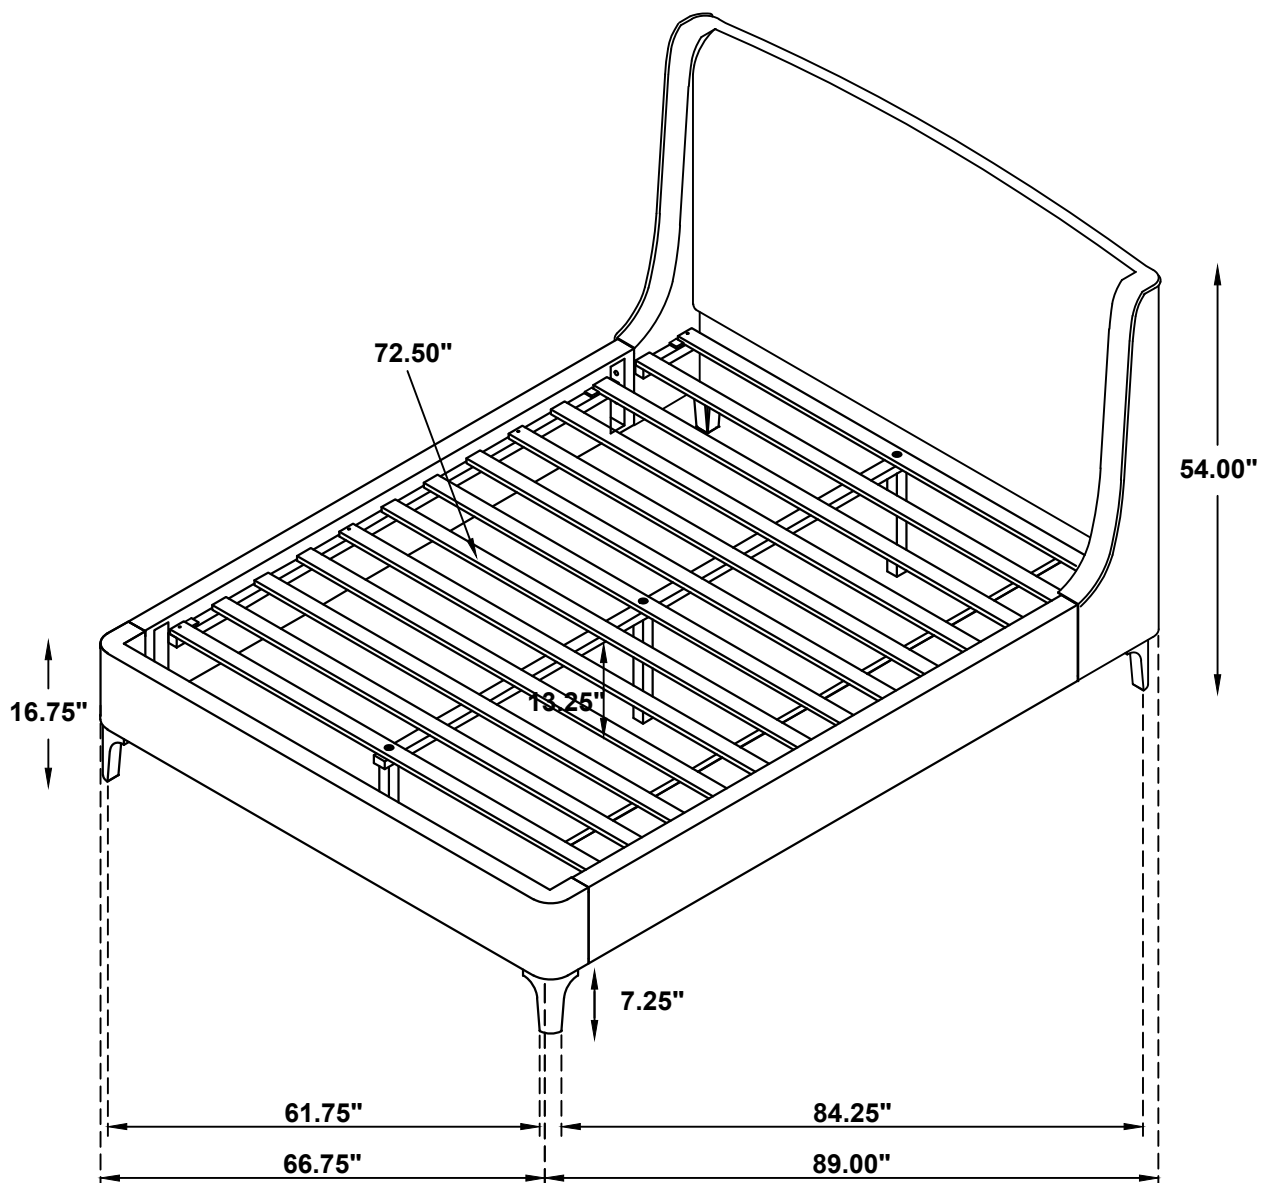

Note :Dimension tolerance  $\pm 5\%$