

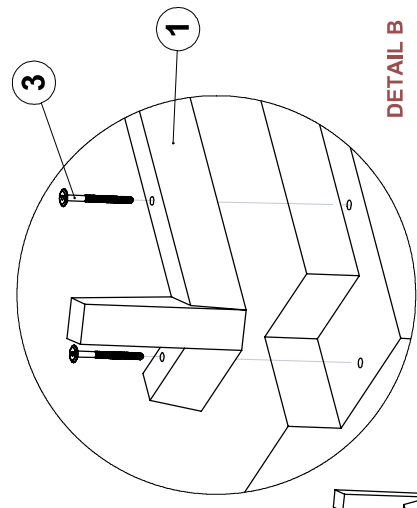


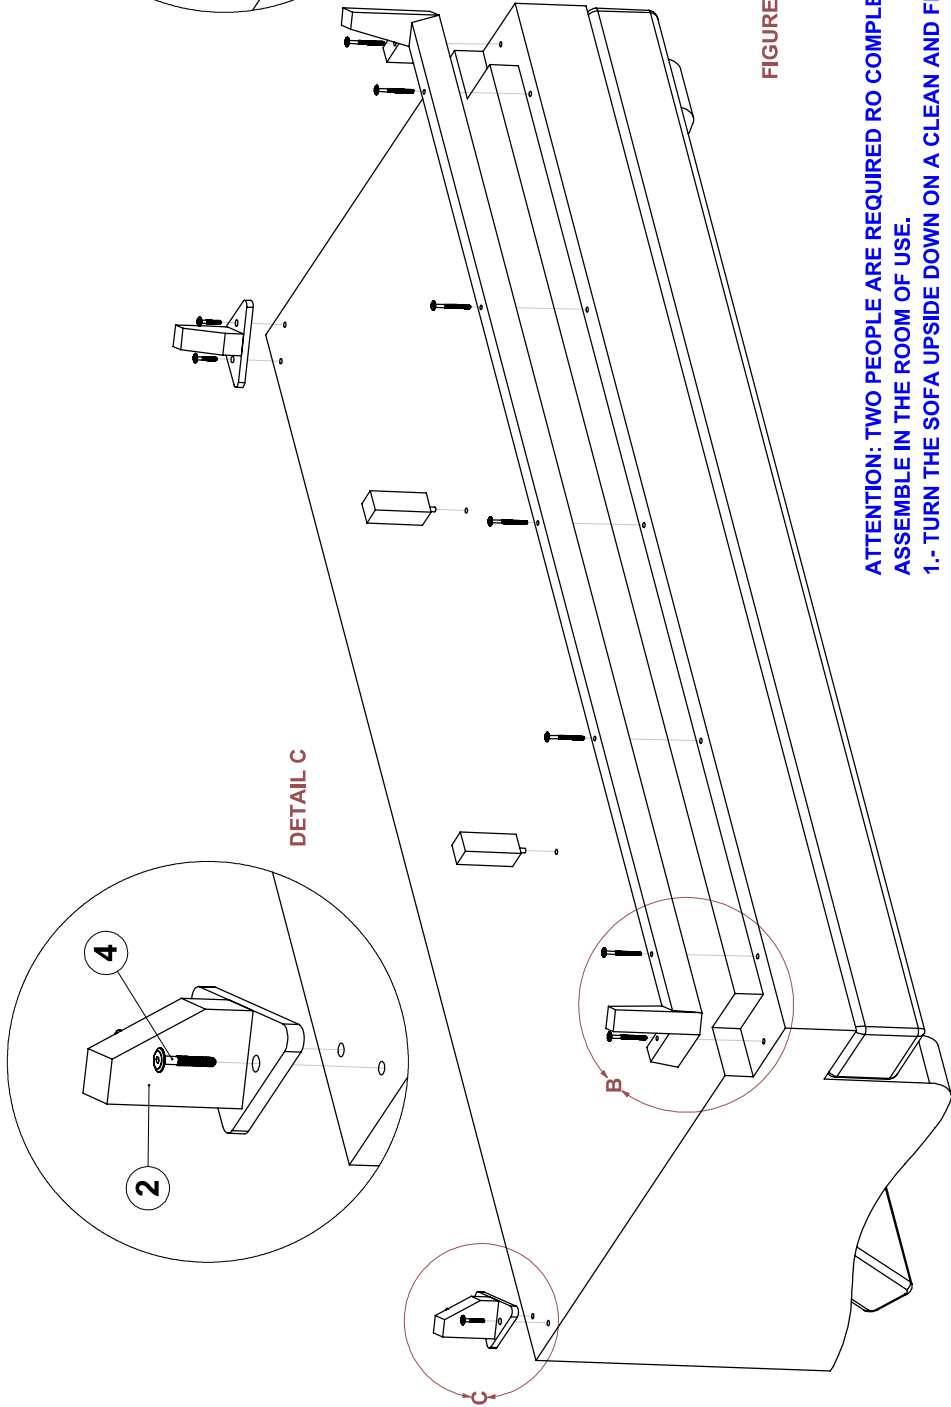

DETAIL B

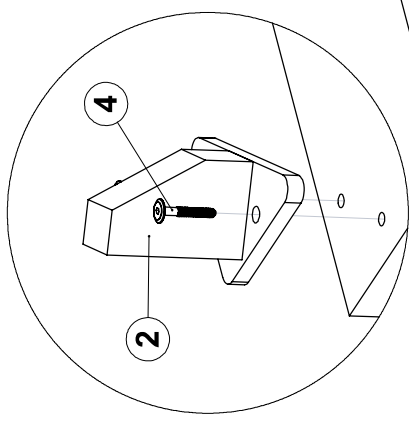


DETAIL C

FIGURE A

ATTENTION: TWO PEOPLE ARE REQUIRED TO COMPLETE THE ASSEMBLY. ASSEMBLE IN THE ROOM OF USE.

- 1.- TURN THE SOFA UPSIDE DOWN ON A CLEAN AND FLAT SURFACE.
- 2.- PLACE THE SOLID WOOD RAIL WITH LEGS AS SHOWN IN THE FIGURE A.
- 3.- ALIGN THE LEGS WITH THE BOLT HOLES, DETAIL B.
- 4.- PLACE THE UNION BOLT IN EACH HOLE OF THE WOODEN RAIL UNTIL YOU FIND THE INSERT NUT.
- 5.- TIGHTEN THE UNION BOLT WITH THE ALLEN KEY 5/32" UNTIL THE WOODEN RAIL FEELS FIRM.
- 6.- ALIGN THE REAR LEGS WITH THE INSERT NUT.
- 7.- PLACE THE UNION BOLT AS SHOWN IN DETAIL C.
- 8.- USE THE ALLEN KEY 5/32", TIGHTEN THE SCREW UNTIL THE LEG FEELS FIRM.
- 9.- ONCE THE LEGS ARE INSTALLED, MOVE THE SOFA BACK TO ITS ORIGINAL POSITION.

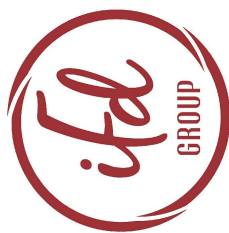

ASSEMBLING INSTRUCTIONS

I-IUP-635

ITEM #	DESCRIPTION	#
1	FRONT LEGS	1
2	REAR LEGS	2
3	UNION BOLT 70mm	7
4	UNION BOLT 40mm	4
5	ALLEN KEY 5/32"	1

IUP635-ACH

ITEM	DESCRIPTION	#
1TOR059	TORNILLO PERNO UNION 1/4 x 70 mm BRONCE	5
1TOR094	TORNILLO PERNO UNION 1/4 x 40 mm COBRE ANTIGUJO	4
1HER250	LLAVE ALLEN 5/32 (MUEBLE)	1

IUP635-LOV

ITEM	DESCRIPTION	#
1TOR059	TORNILLO PERNO UNION 1/4 x 70 mm BRONCE	6
1TOR094	TORNILLO PERNO UNION 1/4 x 40 mm COBRE ANTIGUJO	4
1HER250	LLAVE ALLEN 5/32 (MUEBLE)	1

IUP635-SOF

ITEM	DESCRIPTION	#
1TOR059	TORNILLO PERNO UNION 1/4 x 70 mm BRONCE	7
1TOR094	TORNILLO PERNO UNION 1/4 x 40 mm COBRE ANTIGUJO	4
1HER250	LLAVE ALLEN 5/32 (MUEBLE)	1



ASSEMBLING INSTRUCTIONS

I-IUP-635