




ITEM NO: I3401-412 Queen Panel HB
I3401-402 Queen Rails
I3401-403 Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

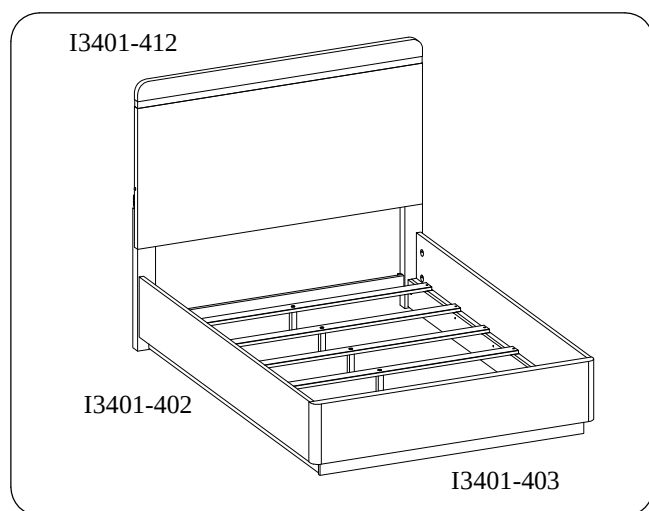

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I3401-412

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16" x 3/4"		8 PCS
D	Allen Wrench 5/16"		1 PC

HARDWARE LIST: I3401-402

No.	Description	Sketch	Quantity
E	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
F	Half Moon Washer Ø5/16"		8 PCS
G	Hex Nut Ø5/16"		8 PCS
H	Hex Wrench 13mm		1 PC
I	Wood Screw #4 x 1"		12 PCS

COMPONENTS LIST: I3401-412

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC

COMPONENTS LIST: I3401-402

No.	Description	Sketch	Quantity
1	Bed Rail		2 PCS
2	Slat		6 PCS

COMPONENTS LIST: I3401-403


No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Support Leg (for slats)		6 PCS

FOR INDOOR USE ONLY




ITEM NO: I3401-412 Queen Panel HB
I3401-402 Queen Rails
I3401-403 Queen Low Profile FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C). Do not completely tighten bolts.

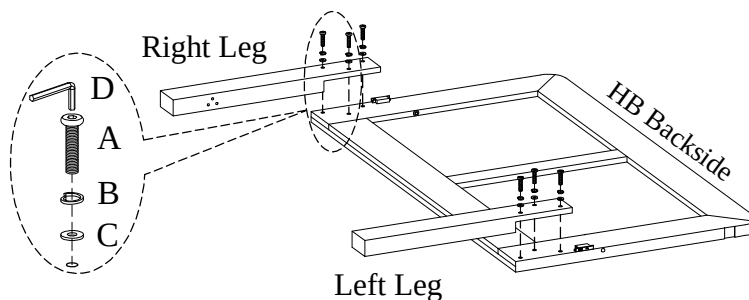

STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C) with an allen wrench(D). Completely tighten all bolts.

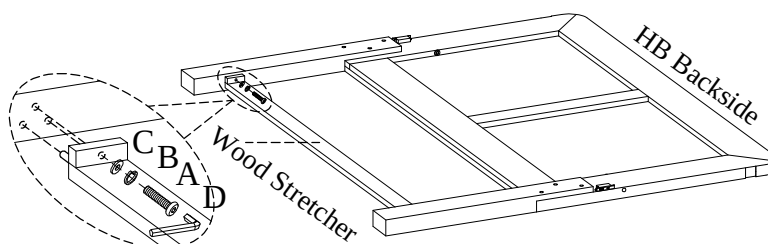

STEP 3: Screw the bolts(E) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washers(F) and hex nuts (G). Use the Hex wrench (H) provided to tighten all the nuts.

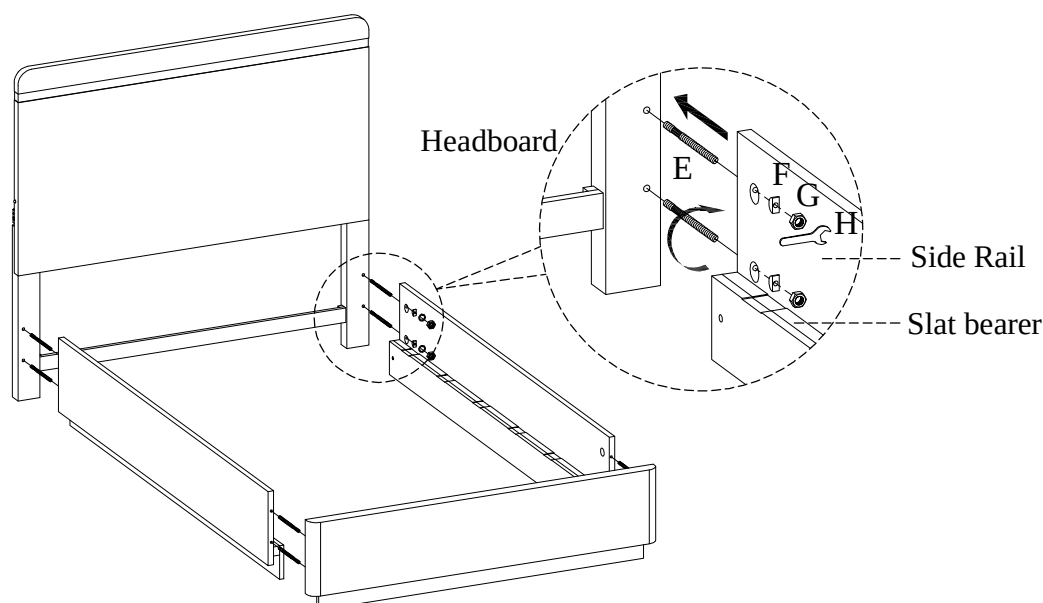




ITEM NO: I3401-412 Queen Panel HB
I3401-402 Queen Rails
I3401-403 Queen Low Profile FB



STEP 4: For LED light strips, plug the male connectors into the female connectors as shown below.

Note: Connect the adapter to wall outlet, touch the switches on sides to check if all lights are on.

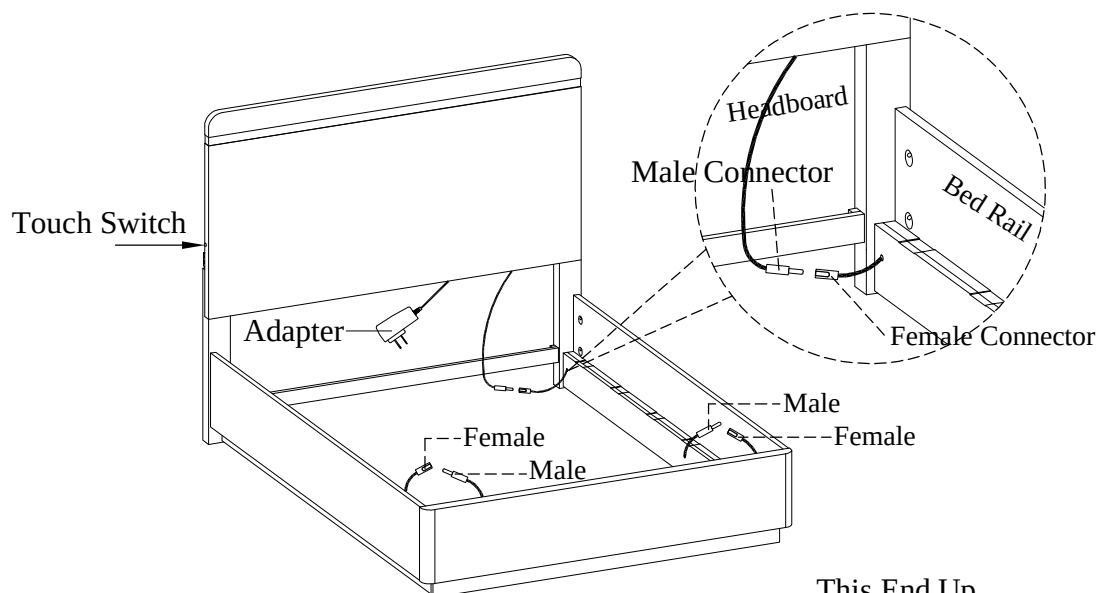

STEP 5: Attach the support legs to the slats as shown right.


STEP 6: Arrange slats on the slat bearers. Make sure the slats are placed within the notches of each bearer and secured completely with wood screws (I).

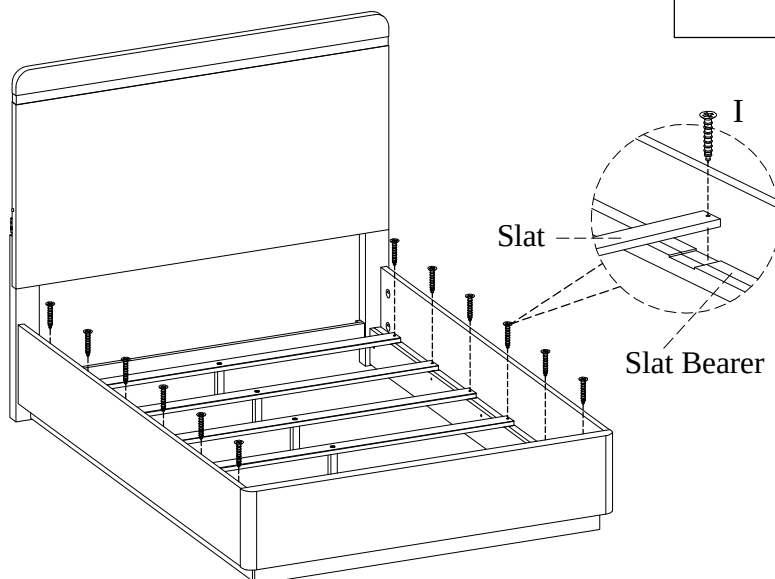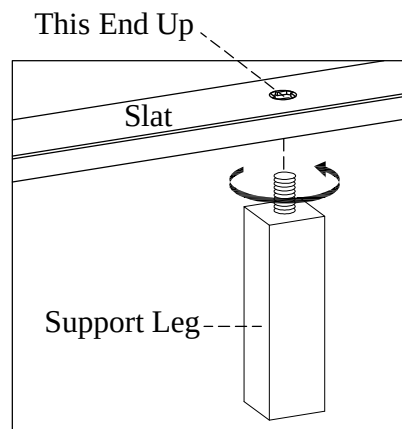



ITEM NO: I3401-412 Queen Panel HB
I3401-402 Queen Rails
I3401-403 Queen Low Profile FB

FUNCTIONALITY INSTRUCTION

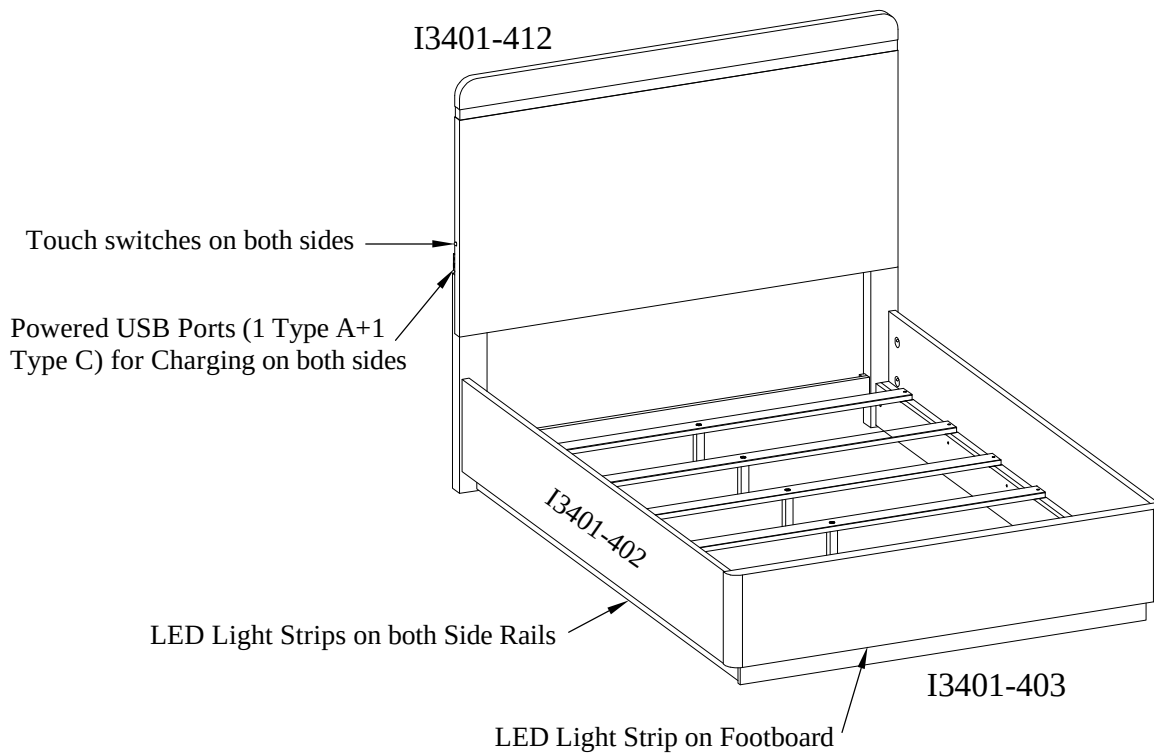




ITEM NO: I3401-415 King Panel HB
I3401-406 King Rails
I3401-410 Cal King Rails
I3401-407 King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.

WARNING! Before using this product, please read, understand, and follow these instructions. Failure to follow each of these assembly instructions precisely may result in damage to the product and / or injury to the consumer.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

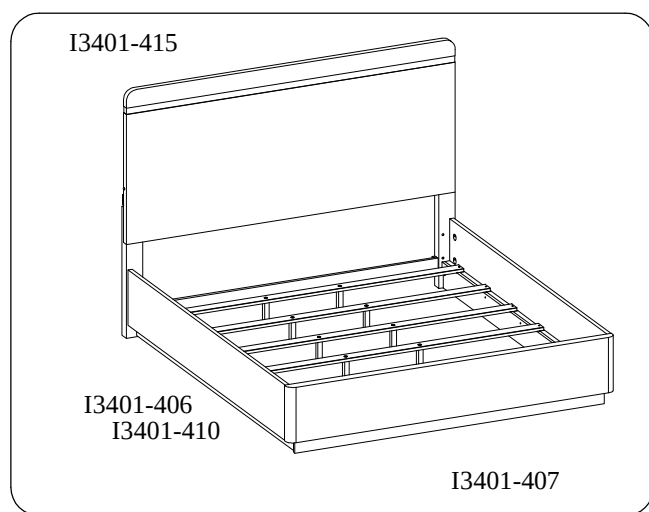

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

HARDWARE LIST: I3401-415

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 1-3/4"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16" x 3/4"		8 PCS
D	Allen Wrench 5/16"		1 PC

HARDWARE LIST: I3401-406/410

No.	Description	Sketch	Quantity
E	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
F	Half Moon Washer Ø5/16"		8 PCS
G	Hex Nut Ø5/16"		8 PCS
H	Hex Wrench 13mm		1 PC
I	Wood Screw #4 x 1"		12 PCS
J	Wood Cap (Only for-410)		8 PCS

COMPONENTS LIST: I3401-415

No.	Description	Sketch	Quantity
1	Headboard (HB)		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC

COMPONENTS LIST: I3401-406

No.	Description	Sketch	Quantity
1	Bed Rail		2 PCS
2	Slat		6 PCS

COMPONENTS LIST: I3401-410

No.	Description	Sketch	Quantity
1	Bed Rail		2 PCS
2	Slat		6 PCS

COMPONENTS LIST: I3401-407


No.	Description	Sketch	Quantity
1	Footboard (FB)		1 PC
2	Support Leg (for slats)		12 PCS

FOR INDOOR USE ONLY




ITEM NO: I3401-415 King Panel HB
I3401-406 King Rails
I3401-410 Cal King Rails
I3401-407 King Low Profile FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 6 bolts(A), lock washers(B) and flat washers(C). Do not completely tighten bolts.

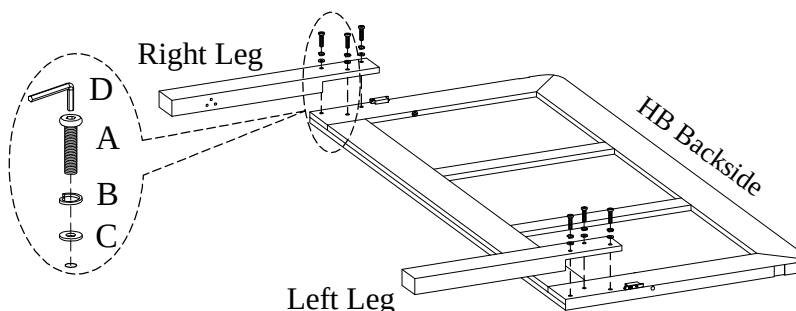

STEP 2: Attach the wood stretcher to the legs by using 2 bolts(A), lock washers(B) and flat washers(C) with an allen wrench(D). Completely tighten all bolts.

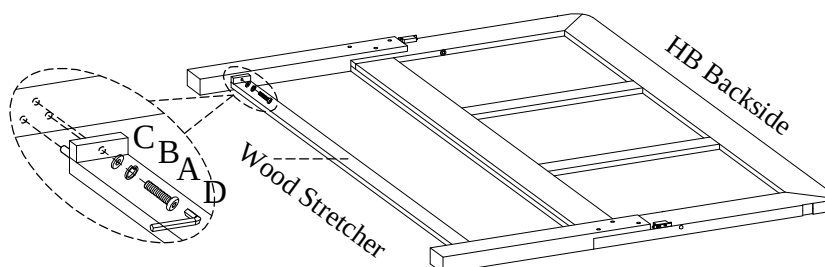

STEP 3: Screw the bolts(E) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using half moon Washers(F) and hex nuts (G). Use the Hex wrench (H) provided to tighten all the nuts.

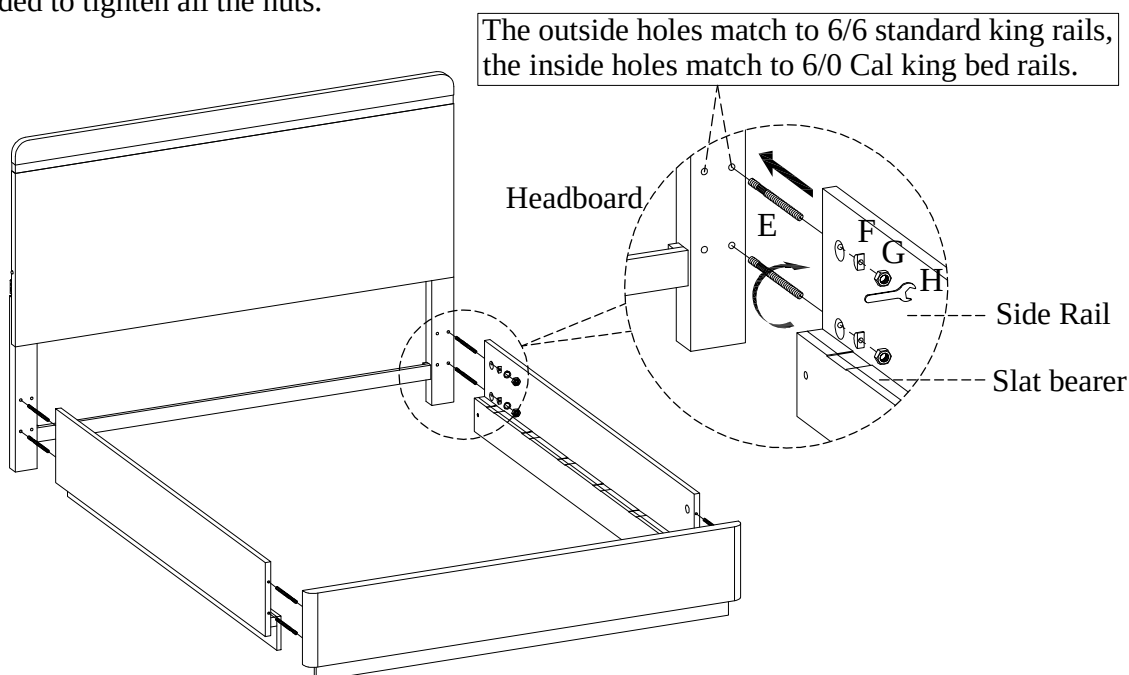




ITEM NO: I3401-415	King Panel HB
I3401-406	King Rails
I3401-410	Cal King Rails
I3401-407	King Low Profile FB



STEP 4: For LED light strips, plug the male connectors into the female connectors as shown below.

Note: Connect the adapter to wall outlet, touch the switches on sides to check if all lights are on.

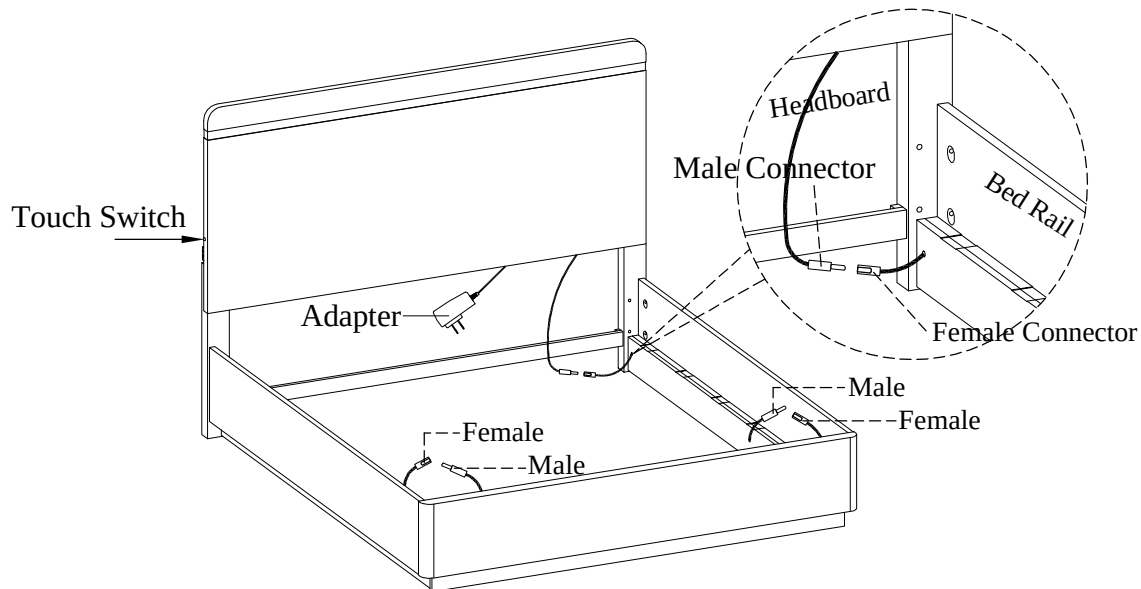

STEP 5: Attach the support legs to the slats as shown right.


STEP 6: Arrange slats on the slat bearers. Make sure the slats are placed within the notches of each bearer and secured completely with wood screws (I).

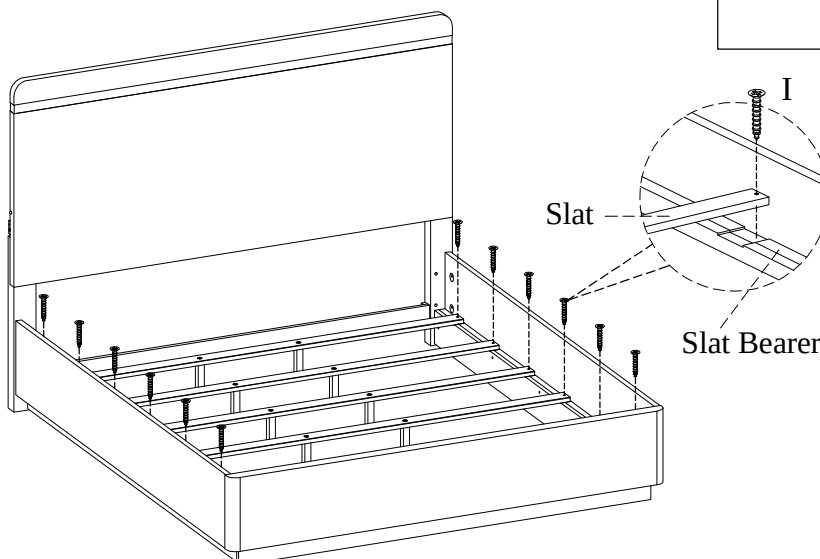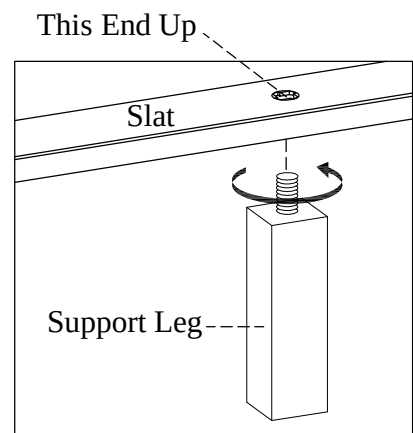



ITEM NO: I3401-415	King Panel HB
I3401-406	King Rails
I3401-410	Cal King Rails
I3401-407	King Low Profile FB

STEP 7: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

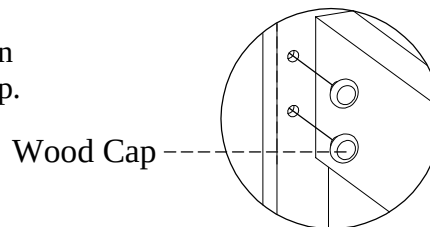

FUNCTIONALITY INSTRUCTION

