




ITEM NO: I206-412 Queen Panel HB
I206-402 Queen Rails
I206-403 Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

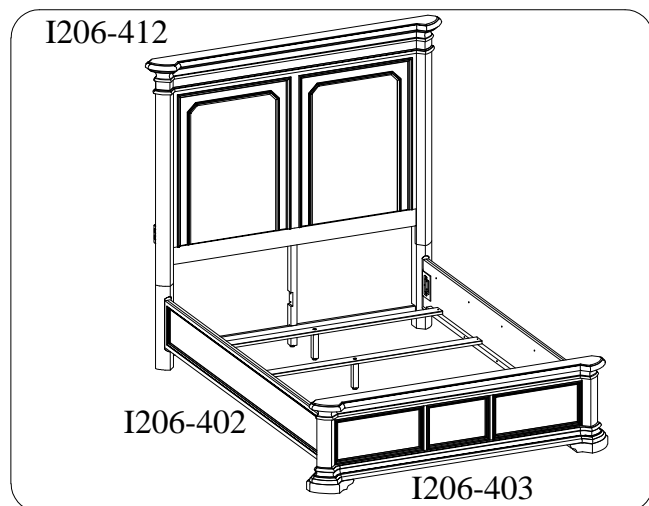

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I206-412

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 2"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16" x 3/4"		8 PCS
D	Allen Wrench M4		1 PC
E	Bolt Ø1/4" x 1-3/8"		8 PCS
F	Lock Washer Ø1/4"		8 PCS
G	Flat Washer Ø1/4" x 3/4"		8 PCS

HARDWARE LIST: I206-402

No.	Description	Sketch	Quantity
H	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
I	Flat Washer Ø5/16" x 1/2"		8 PCS
J	Lock Washer Ø5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 12mm		1 PC
M	Wood Screw M4 x 1-1/2"		8 PCS

COMPONENTS LIST: I206-412

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I206-402

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS

COMPONENTS LIST: I206-403

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for slats)		4 PCS

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY




aspenhome®

Distributed by Furniture Values International, LLC


ASSEMBLY INSTRUCTIONS

ITEM NO: I206-412 Queen Panel HB
I206-402 Queen Rails
I206-403 Queen Low Profile FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 8 bolts(A), lock washers(B) and flat washers(C). Do not completely tighten bolts.

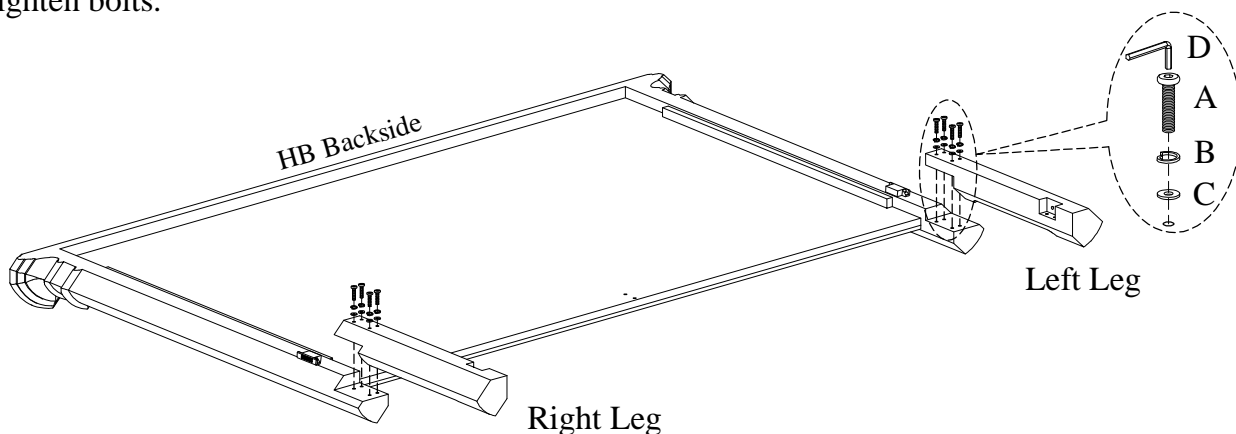

STEP 2: Attach the wood stretcher to the legs by using 4 bolts(E), lock washers(F) and flat washers(G). Completely tighten all bolts.

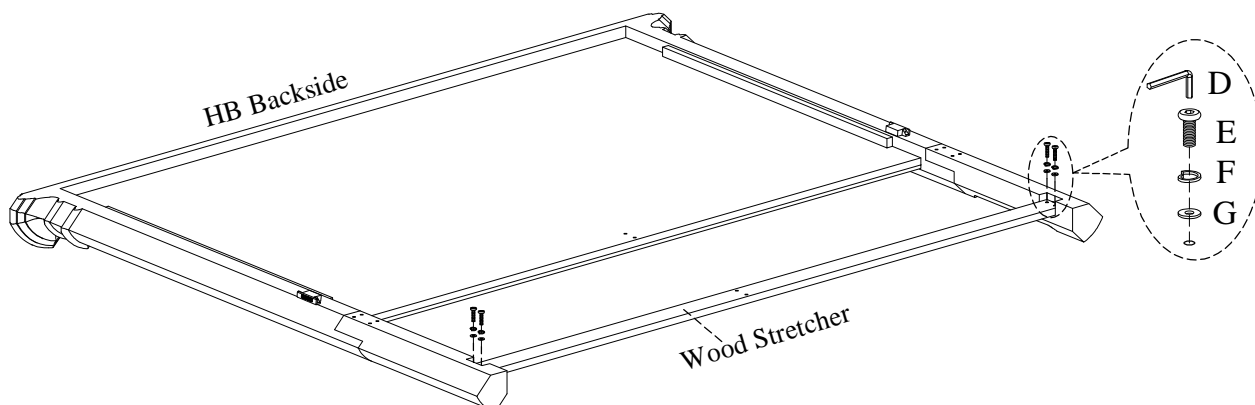


STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(E), lock washers(F) and flat washers(G).

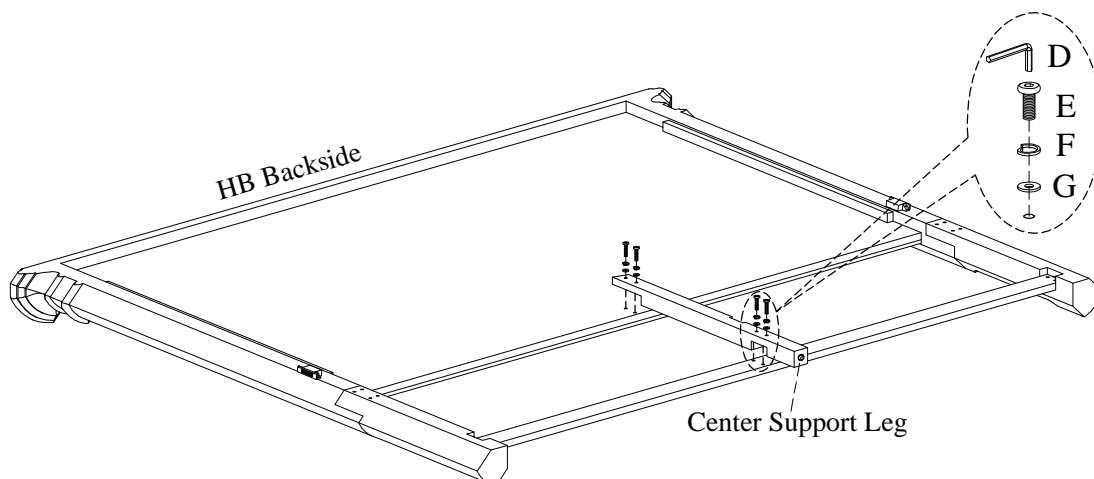




ITEM NO: I206-412 Queen Panel HB
I206-402 Queen Rails
I206-403 Queen Low Profile FB


STEP 4: The slat bearers have been attached in position (b) approximately 2" from the top of the side rails for use with a storage footboard. The slat bearers must be moved into position (a) based on this bed configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in position (a) with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

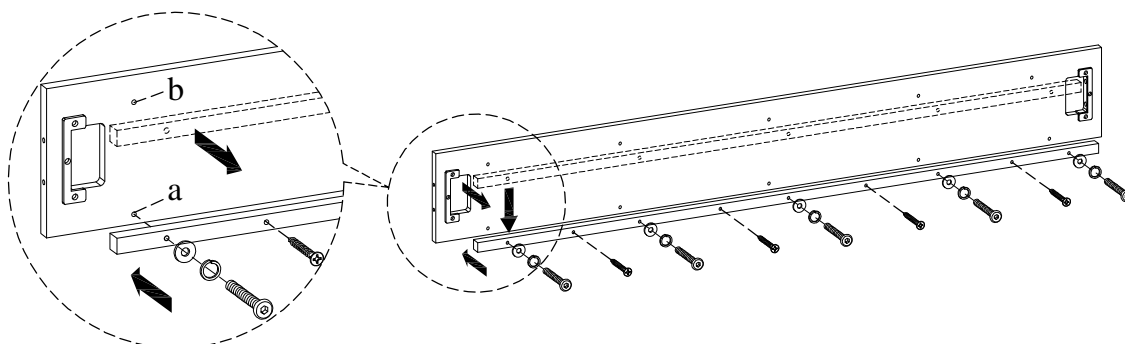

STEP 5: Screw the bolts(H) into HB & FB. Make sure the slat bearer is in the position (a). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using Flat Washer (I), lock washers(J) and nuts (K). Then use a hex wrench to tighten all the nuts.

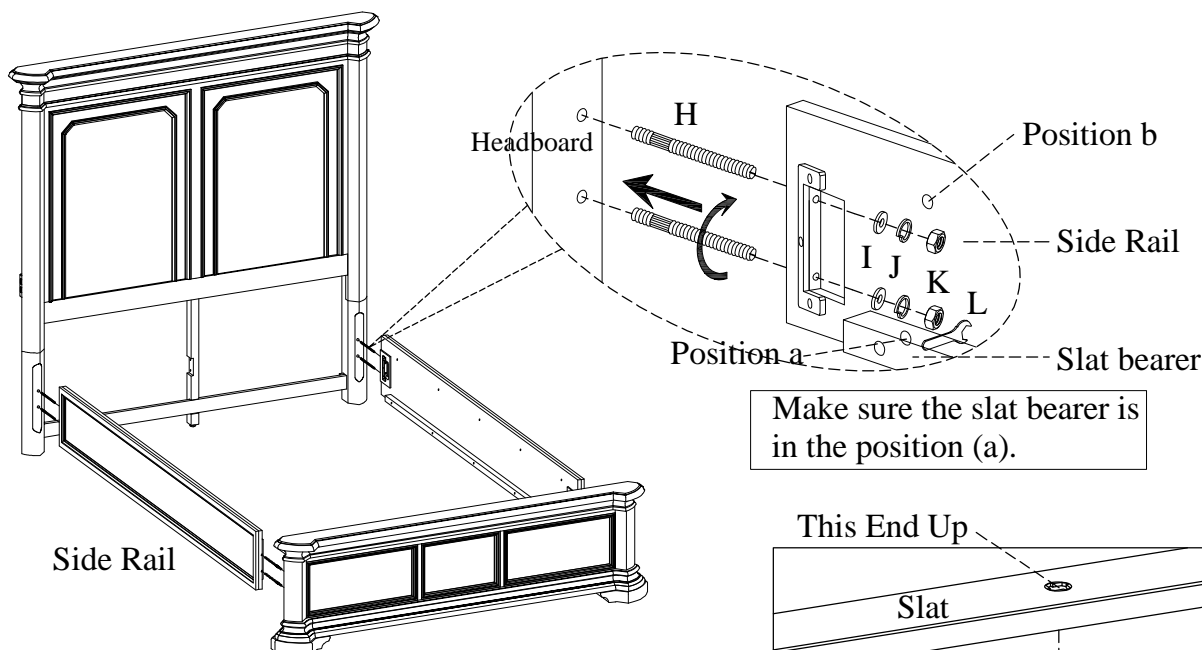


STEP 6: Attach the support legs with levelers to the slats. Adjust the levelers on bottom of support legs when necessary.

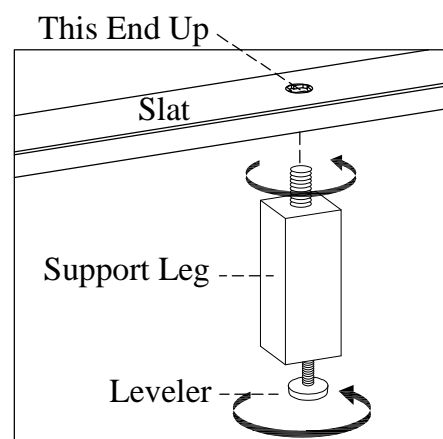




ITEM NO: I206-412 Queen Panel HB
I206-402 Queen Rails
I206-403 Queen Low Profile FB

STEP 7: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (M).

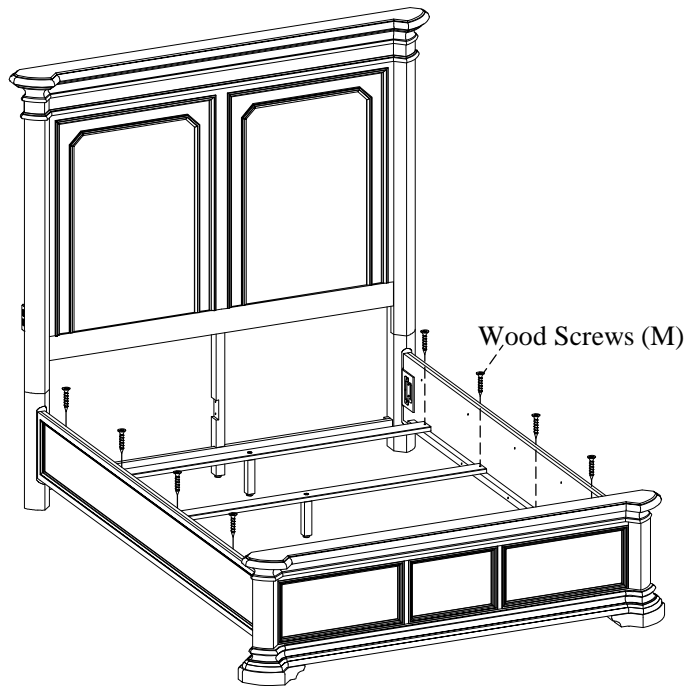

FUNCTIONALITY INSTRUCTION

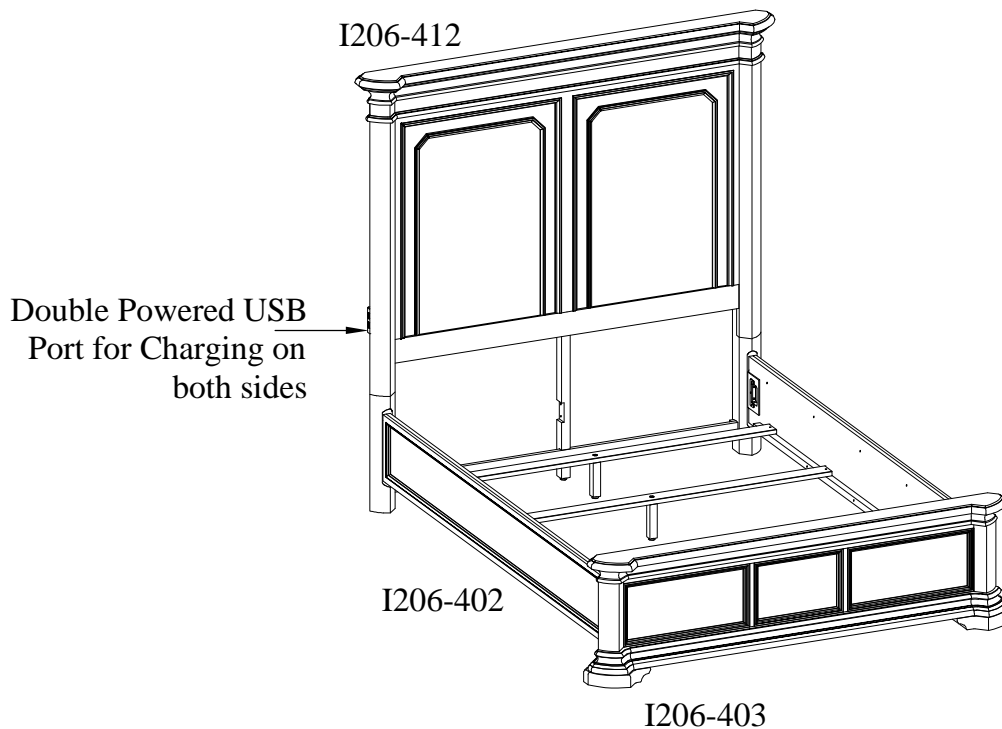




ITEM NO: I206-412 Queen Panel HB
I206-402 Queen Rails
I206-403D Queen Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

I206-412

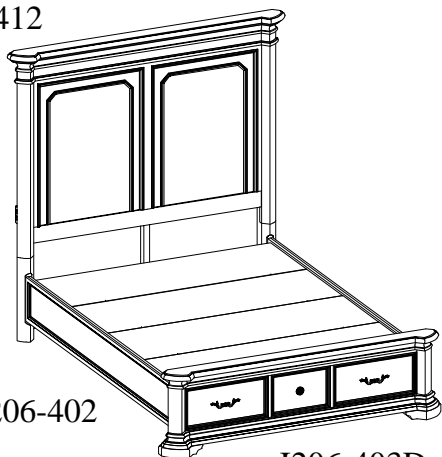

I206-402

I206-403D

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

HARDWARE LIST: I206-412

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 2"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16" x 3/4"		8 PCS
D	Allen Wrench M4		1 PC
E	Bolt Ø1/4" x 1-3/8"		8 PCS
F	Lock Washer Ø1/4"		8 PCS
G	Flat Washer Ø1/4" x 3/4"		8 PCS

HARDWARE LIST: I206-402

No.	Description	Sketch	Quantity
H	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
I	Flat Washer Ø5/16" x 1/2"		8 PCS
J	Lock Washer Ø5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 12mm		1 PC
M	Wood Screw M4 x 1-1/2"		8 PCS

HARDWARE LIST: I206-403D

No.	Description	Sketch	Quantity
N	Bolt Ø1/4" x 1-3/8"		8 PCS
O	Lock Washer Ø1/4"		8 PCS
P	Flat Washer Ø1/4" x 3/4"		8 PCS
Q	Allen Wrench 4mm		1 PC
R	Wood Screw M4 x 1"		8 PCS

COMPONENTS LIST: I206-412

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I206-402

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS

COMPONENTS LIST: I206-403D

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for center rail)		2 PCS
3	Decking		4 PCS
4	Center rail		1 PC


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I206-412 Queen Panel HB
I206-402 Queen Rails
I206-403D Queen Storage FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 8 bolts(A), lock washers(B) and flat washers(C). Do not completely tighten bolts.

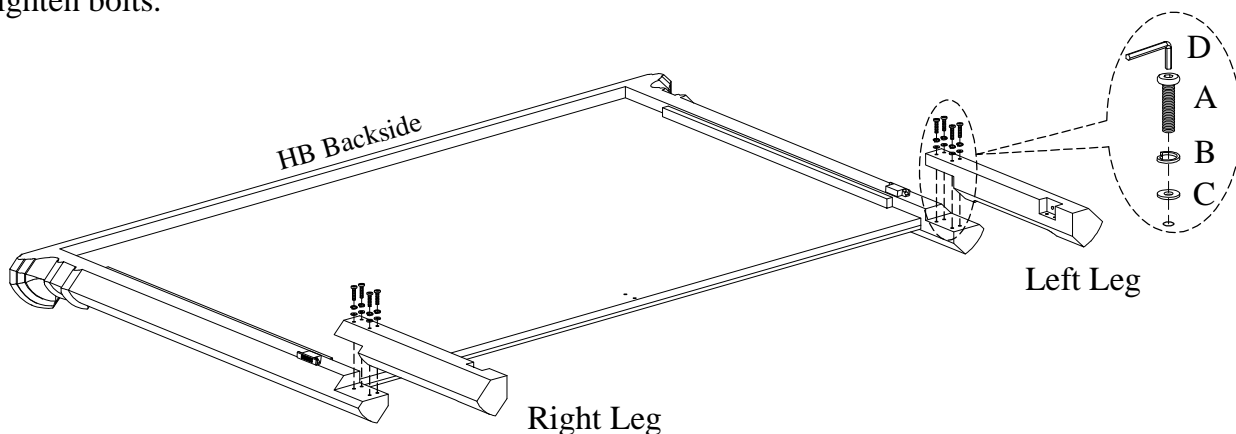

STEP 2: Attach the wood stretcher to the legs by using 4 bolts(E), lock washers(F) and flat washers(G). Completely tighten all bolts.

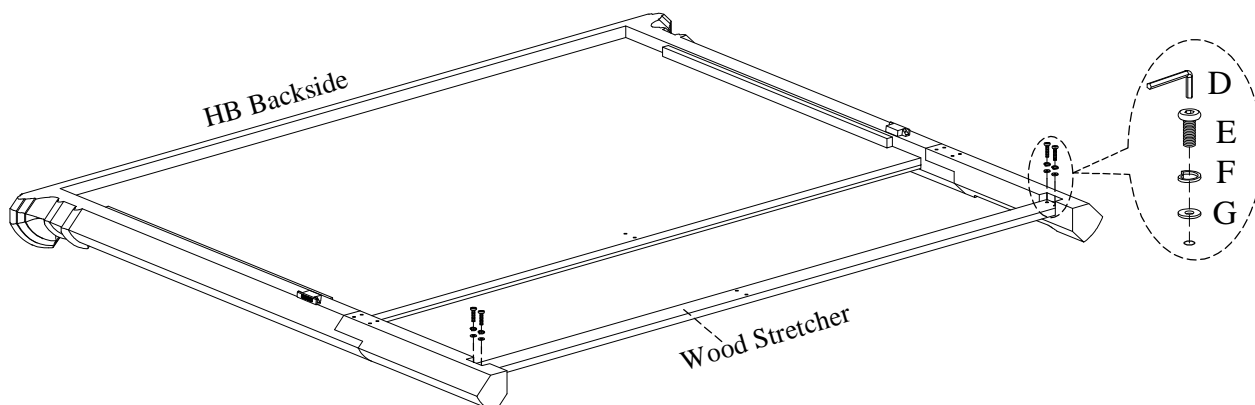


STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(E), lock washers(F) and flat washers(G).

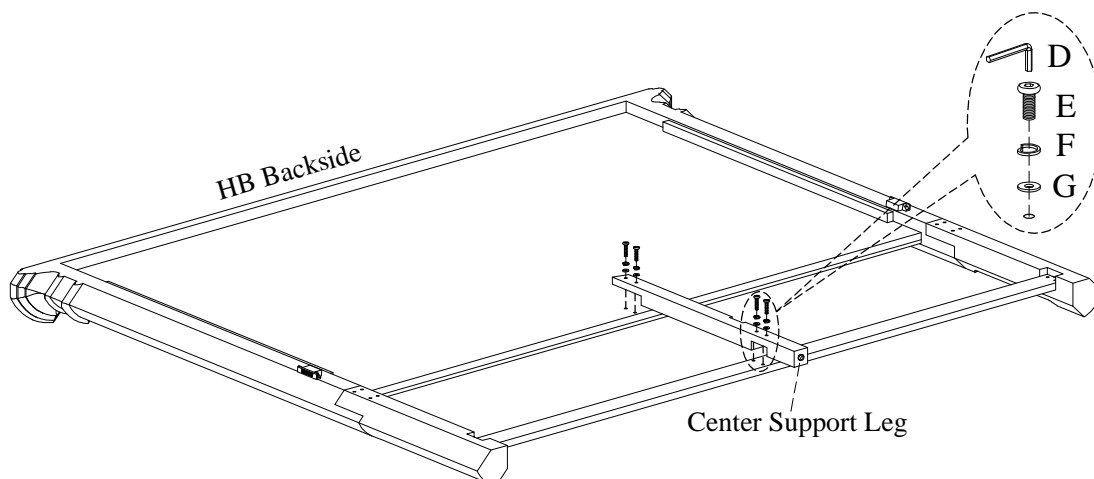


ITEM NO: I206-412 Queen Panel HB
 I206-402 Queen Rails
 I206-403D Queen Storage FB


STEP 4: Screw the bolts(H) into HB & FB. Make sure the slat bearer is in the position (b). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using Flat Washer (I), lock washers(J) and nuts (K). Then use a hex wrench to tighten all the nuts.

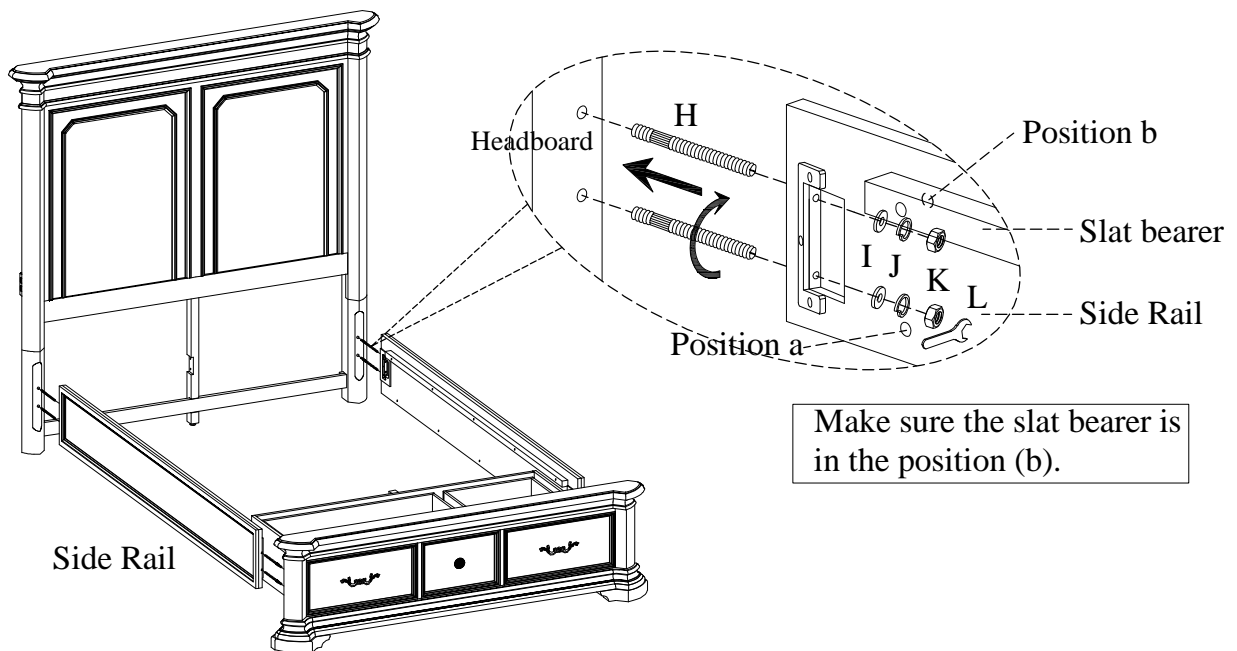

STEP 5: Attach center rail to the footboard and center support leg of headboard using 4 bolts(N), lock washers(O) and flat washers(P).

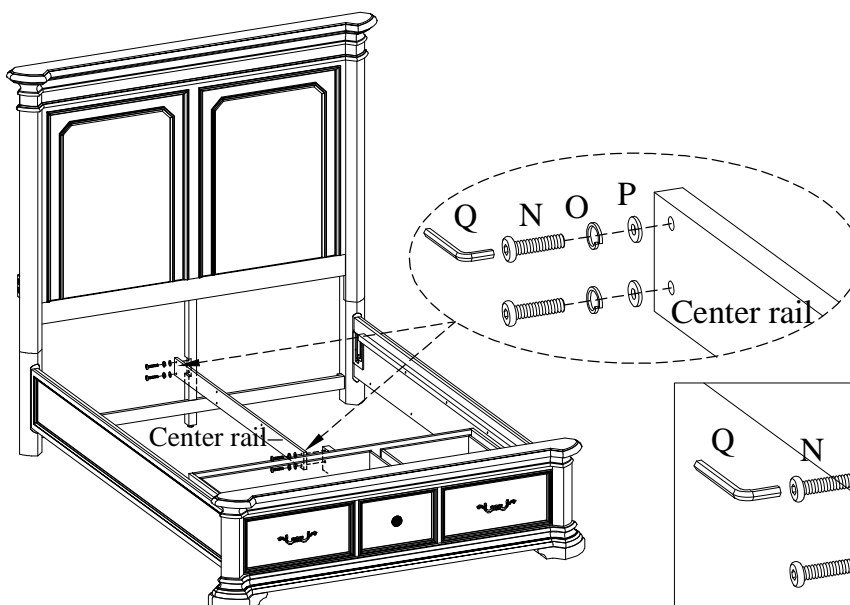

STEP 6: Attach 2 support legs (for center rail) to the center rail using 4 bolts(N), lock washers(O) and flat washers(P). Use the Allen Wrench(Q) to tighten all of the bolts.

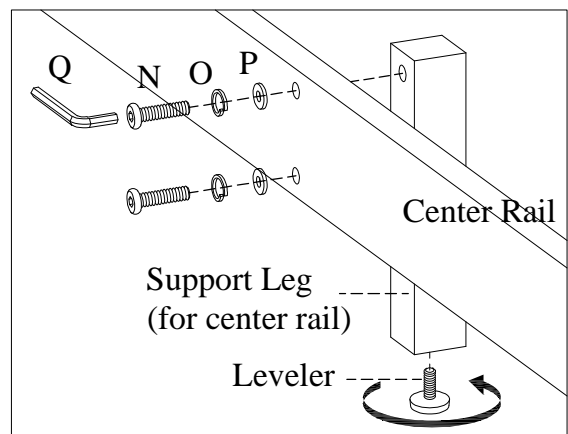




ITEM NO: I206-412 Queen Panel HB
I206-402 Queen Rails
I206-403D Queen Storage FB



STEP 7: Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 8 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws (M).

STEP 8: Put the decking over the slats, secure decking to the slats with wood screws (R) through the pre-drilled holes in the decking as shown below.

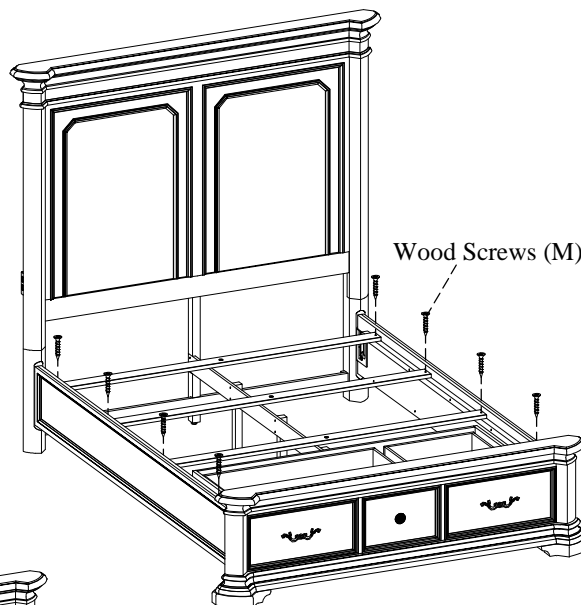


Make sure that there is a slat under the pre-drilled hole.

The slat should support both pieces of decking.

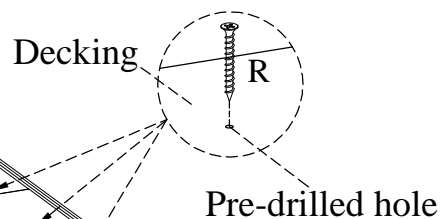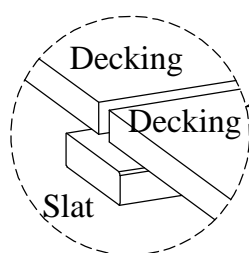

FUNCTIONALITY INSTRUCTION

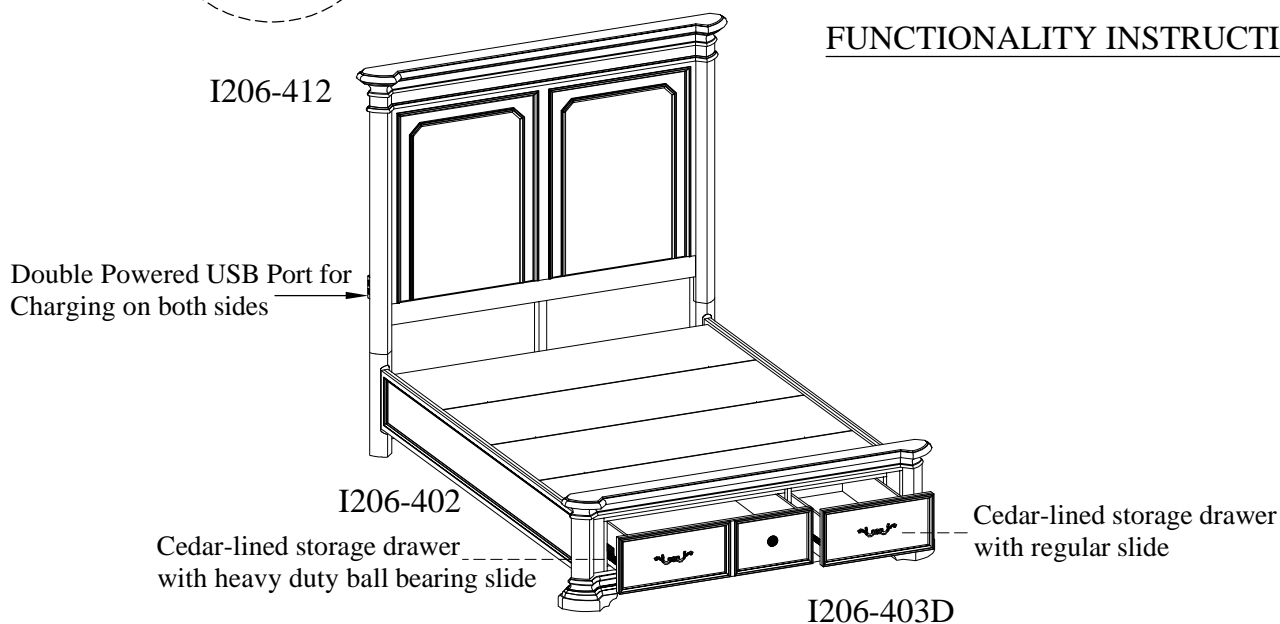




ITEM NO: I206-412 Queen Panel HB
I206-402 Queen Rails
I206-403D Queen Storage FB

Instruction for the Drawer with Heavy Duty Ball Bearing Slide

To remove the drawer, please remove the set screws on two sides of the drawers. Push the tab in toward the drawer and lift up the drawer to move out.

To install the drawer, please extend the slides all the way out. Set the drawer box into cabinet rail and slide back so the drawer rail goes under the hook in cabinet rail. Then snap the tab into drawer rail and replace set screws.

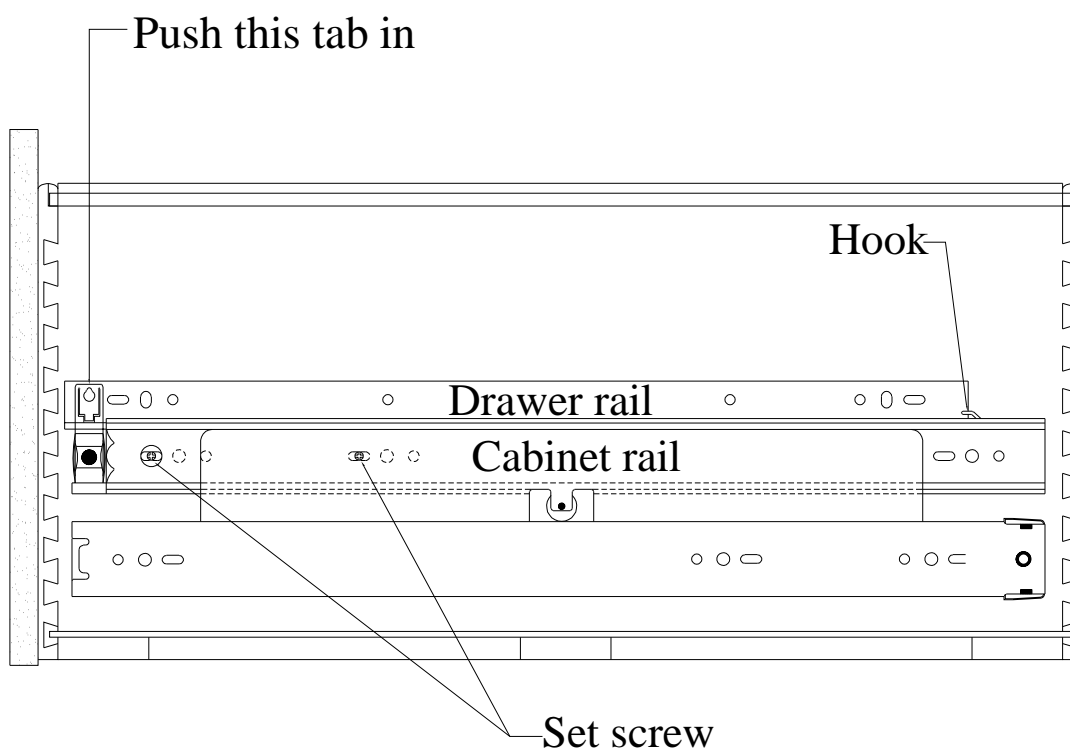




ITEM NO: I206-415 King Panel HB
I206-406 King Rails
I206-410 Cal King Rails
I206-407 King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

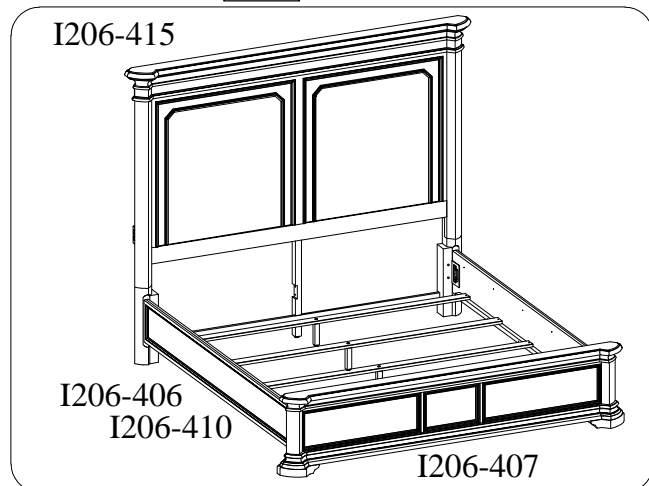

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I206-415

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 2"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16" x 3/4"		8 PCS
D	Allen Wrench M4		1 PC
E	Bolt Ø1/4" x 1-3/8"		8 PCS
F	Lock Washer Ø1/4"		8 PCS
G	Flat Washer Ø1/4" x 3/4"		8 PCS

HARDWARE LIST: I206-406/410

No.	Description	Sketch	Quantity
H	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
I	Flat Washer Ø5/16" x 1/2"		8 PCS
J	Lock Washer Ø5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 12mm		1 PC
M	Wood Screw M4 x 1-1/2"		10 PCS
N	Wood Cap (only for 410)		8 PCS

COMPONENTS LIST: I206-415

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I206-406

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS

COMPONENTS LIST: I206-410

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I206-407

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for slats)		5 PCS


BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I206-415 King Panel HB
I206-406 King Rails
I206-410 Cal King Rails
I206-407 King Low Profile FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 8 bolts(A), lock washers(B) and flat washers(C). Do not completely tighten bolts.

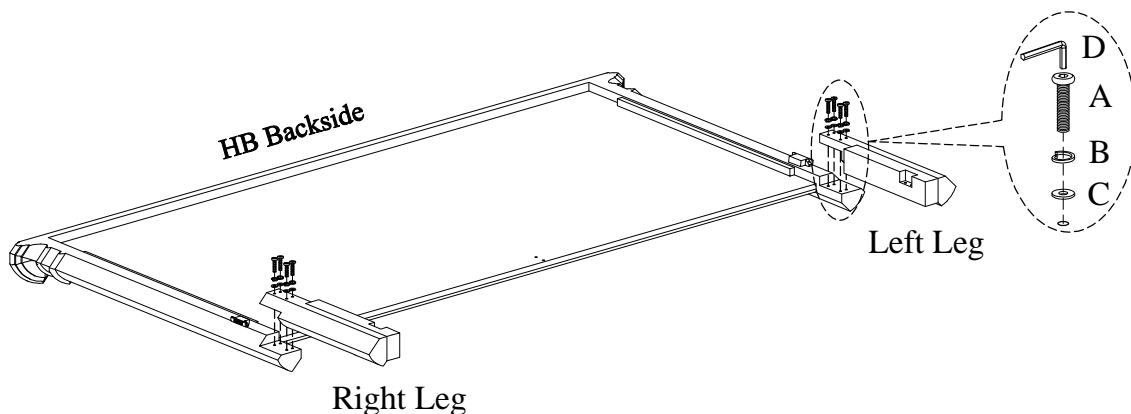

STEP 2: Attach the wood stretcher to the legs by using 4 bolts(E), lock washers(F) and flat washers(G). Completely tighten all bolts.

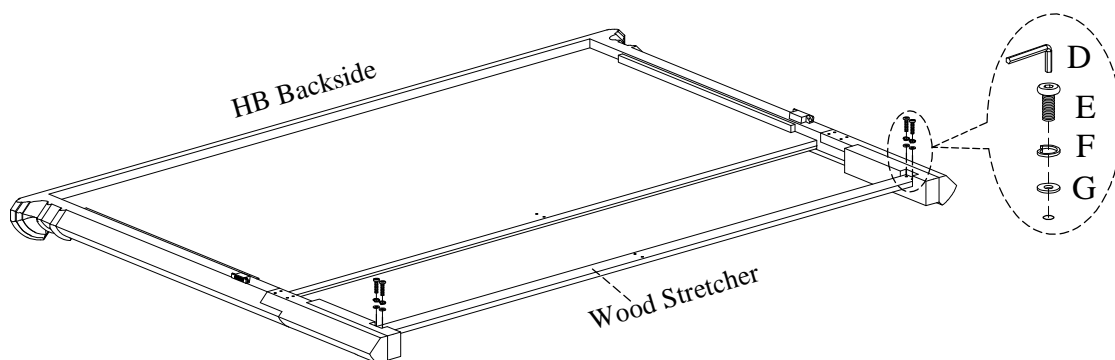


STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(E), lock washers(F) and flat washers(G).

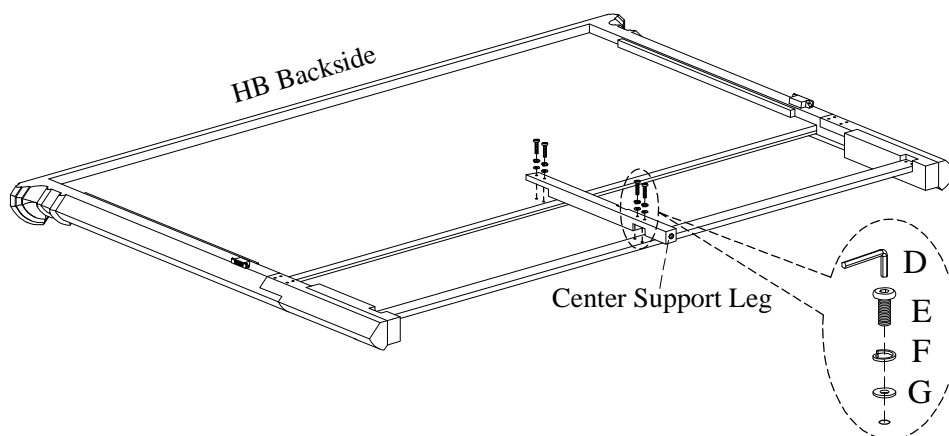


ITEM NO: I206-415	King Panel HB
I206-406	King Rails
I206-410	Cal King Rails
I206-407	King Low Profile FB


STEP 4: The slat bearers have been attached in position (b) approximately 2" from the top of the side rails for use with a storage footboard. The slat bearers must be moved into position (a) based on this bed configuration. Remove the bolts and screws from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in position (a) with bolts, lock washers, flat washers, and screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

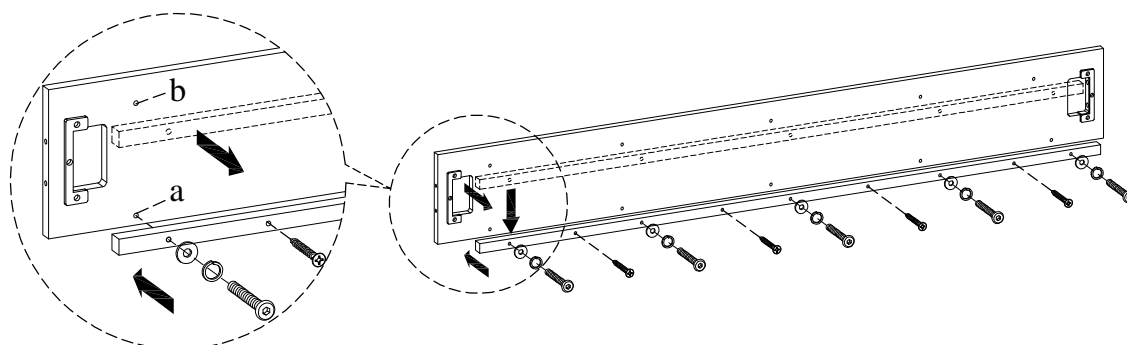

STEP 5: Screw the bolts(H) into HB & FB. Make sure the slat bearer is in the position (a). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using Flat Washer (I), lock washers(J) and nuts (K). Then use a hex wrench to tighten all the nuts.

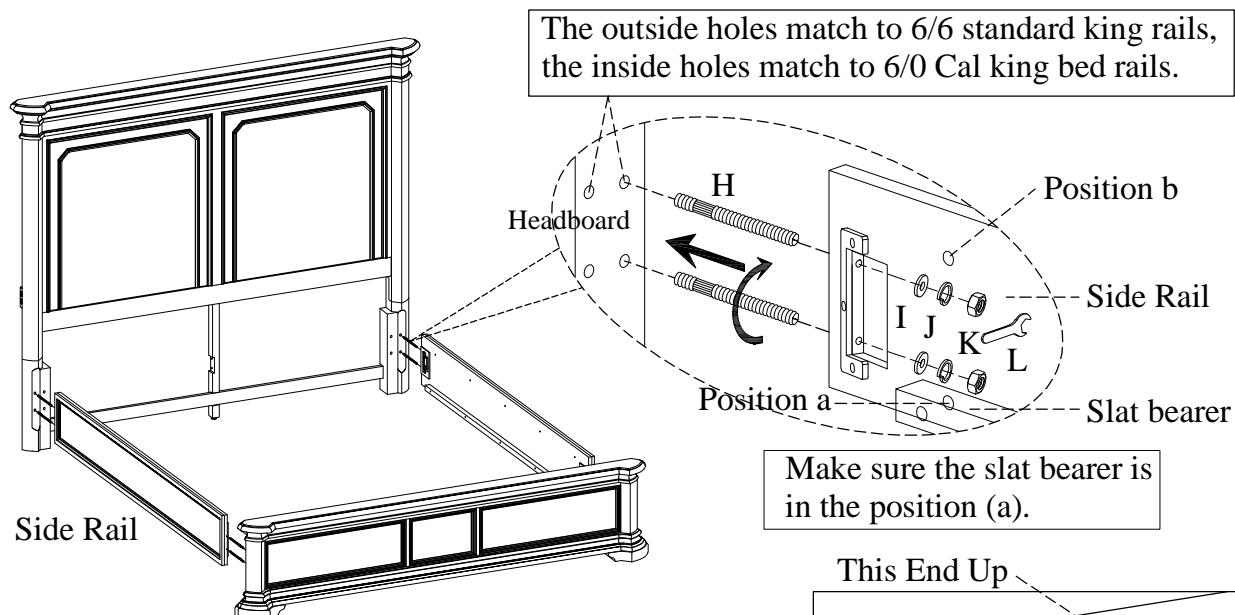


STEP 6: Attach the support legs with levelers to the slats. Adjust the levelers on bottom of support legs when necessary.

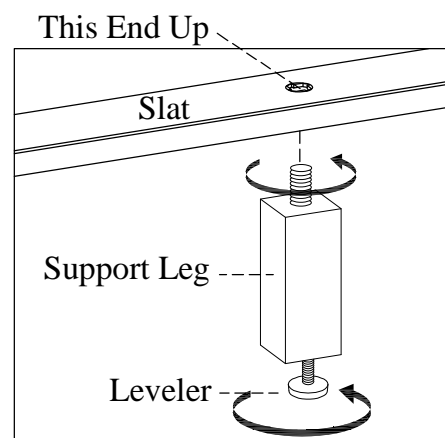




ITEM NO: I206-415 King Panel HB
I206-406 King Rails
I206-410 Cal King Rails
I206-407 King Low Profile FB


STEP 7: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (M).

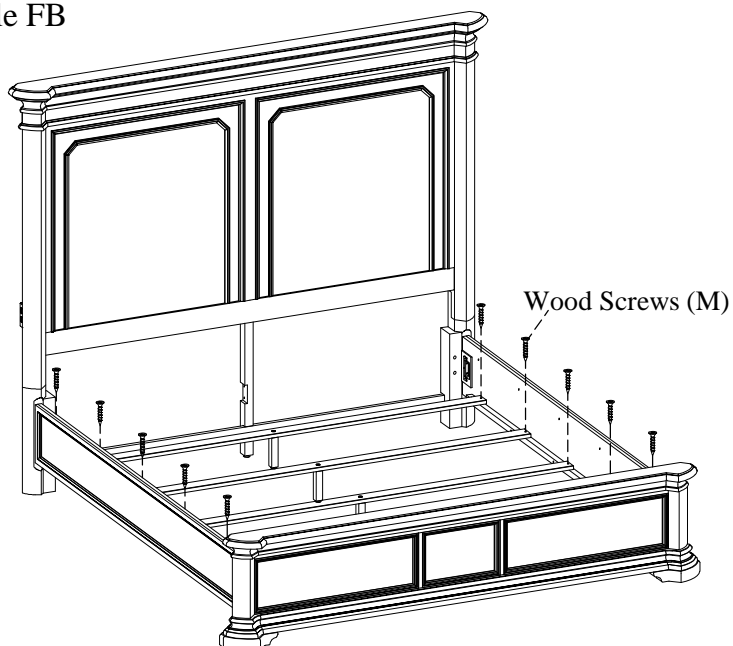

STEP 8: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

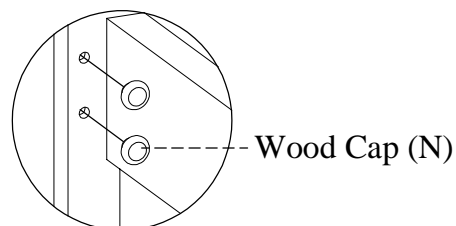

FUNCTIONALITY INSTRUCTION

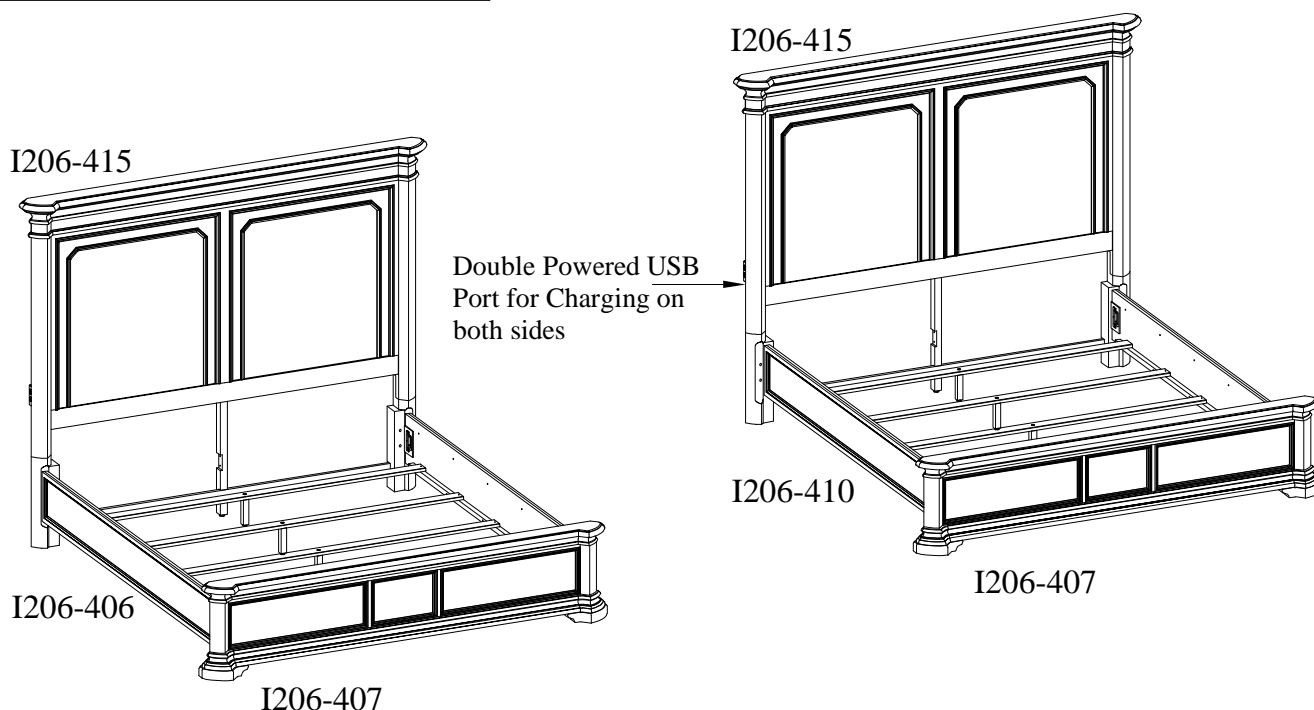




ITEM NO: I206-415 King Panel HB
I206-406 King Rails
I206-410 Cal King Rails
I206-407D King Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

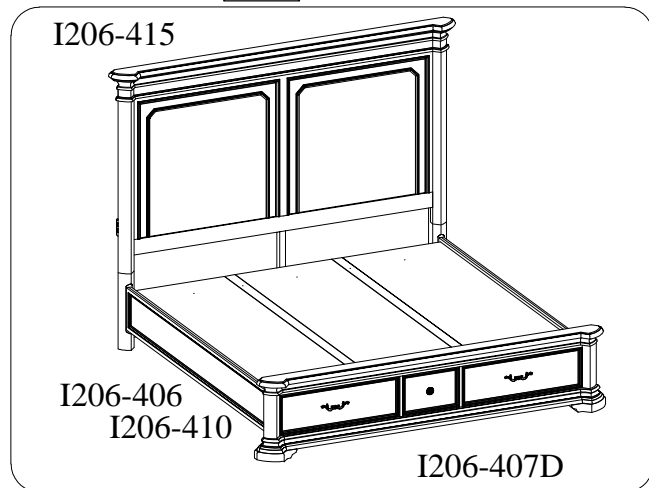

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I206-415

No.	Description	Sketch	Quantity
A	Bolt Ø5/16" x 2"		8 PCS
B	Lock Washer Ø5/16"		8 PCS
C	Flat Washer Ø5/16" x 3/4"		8 PCS
D	Allen Wrench M4		1 PC
E	Bolt Ø1/4" x 1-3/8"		8 PCS
F	Lock Washer Ø1/4"		8 PCS
G	Flat Washer Ø1/4" x 3/4"		8 PCS

HARDWARE LIST: I206-406/410

No.	Description	Sketch	Quantity
H	Hanger Bolt Ø5/16" x 3-1/2"		8 PCS
I	Flat Washer Ø5/16" x 1/2"		8 PCS
J	Lock Washer Ø5/16"		8 PCS
K	Hex Nut Ø5/16"		8 PCS
L	Hex Wrench 12mm		1 PC
M	Wood Screw M4 x 1-1/2"		10 PCS
N	Wood Cap (only for 410)		8 PCS

HARDWARE LIST: I206-407D

No.	Description	Sketch	Quantity
O	Bolt Ø1/4" x 1-3/8"		8 PCS
P	Lock Washer Ø1/4"		8 PCS
Q	Flat Washer Ø1/4" x 3/4"		8 PCS
R	Allen Wrench 4mm		1 PC
S	Wood Screw M4 x 1"		5 PCS

COMPONENTS LIST: I206-415

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I206-406

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS

COMPONENTS LIST: I206-410

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I206-407D

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for center rail)		2 PCS
3	Decking		3 PCS
4	Center rail (Short)		1 PC
5	Filler		2 PCS

BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS.
Save these instructions for future reference.

FOR INDOOR USE ONLY




aspenhome®

Distributed by Furniture Values International, LLC


ASSEMBLY INSTRUCTIONS

ITEM NO: I206-415 King Panel HB
I206-406 King Rails
I206-410 Cal King Rails
I206-407D King Storage FB


STEP 1: Lay the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 8 bolts(A), lock washers(B) and flat washers(C). Do not completely tighten bolts.

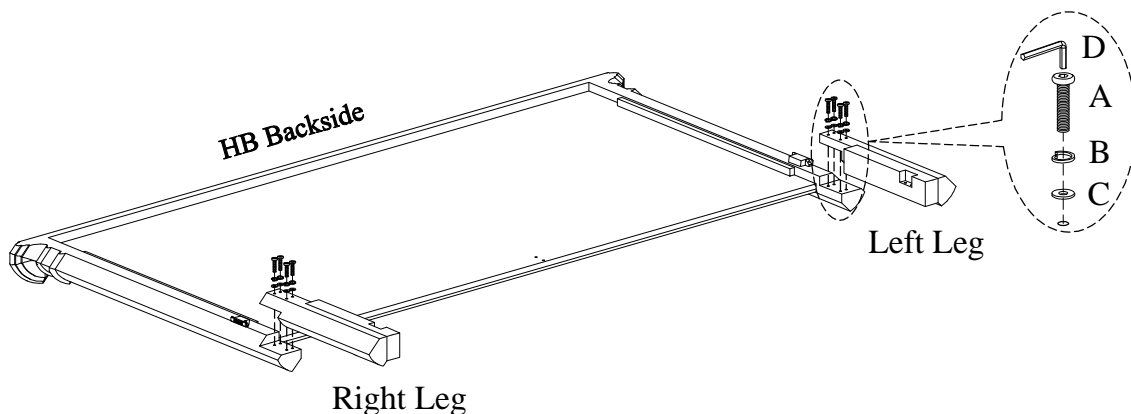

STEP 2: Attach the wood stretcher to the legs by using 4 bolts(E), lock washers(F) and flat washers(G). Completely tighten all bolts.

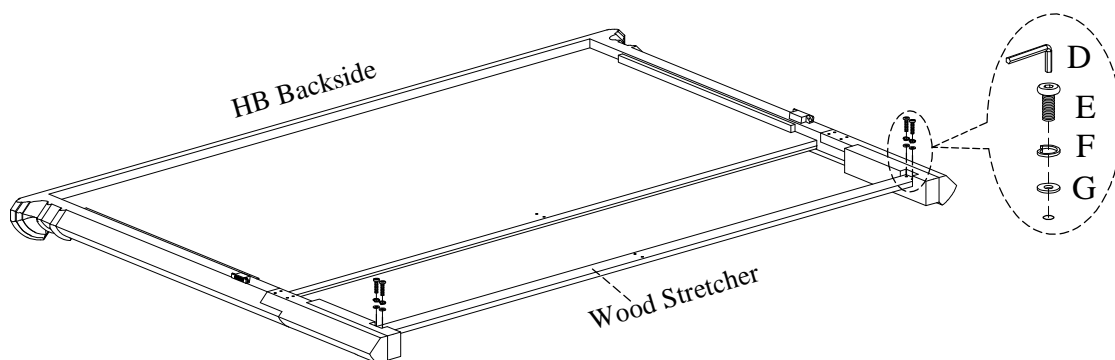


STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(E), lock washers(F) and flat washers(G).

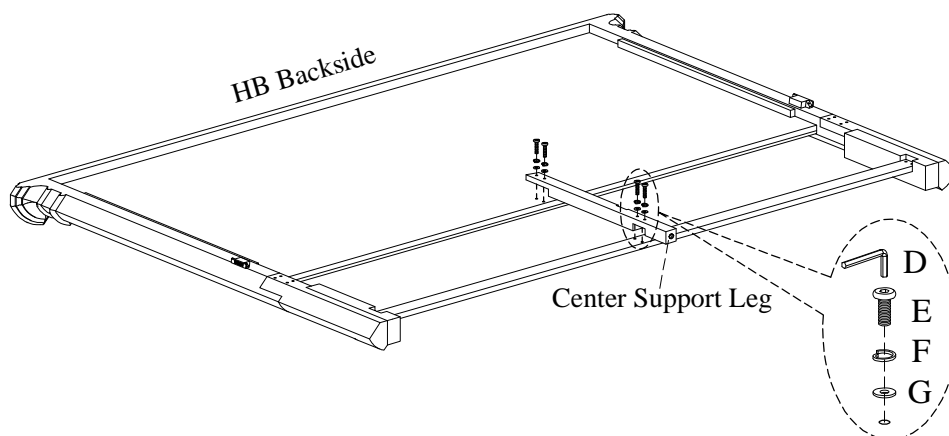


ITEM NO: I206-415 King Panel HB
 I206-406 King Rails
 I206-410 Cal King Rails
 I206-407D King Storage FB


STEP 4: Screw the bolts(H) into HB & FB. Make sure the slat bearer is in the position (b). Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using Flat Washer (I), lock washers (J) and nuts (K). Then use a hex wrench to tighten all the nuts.

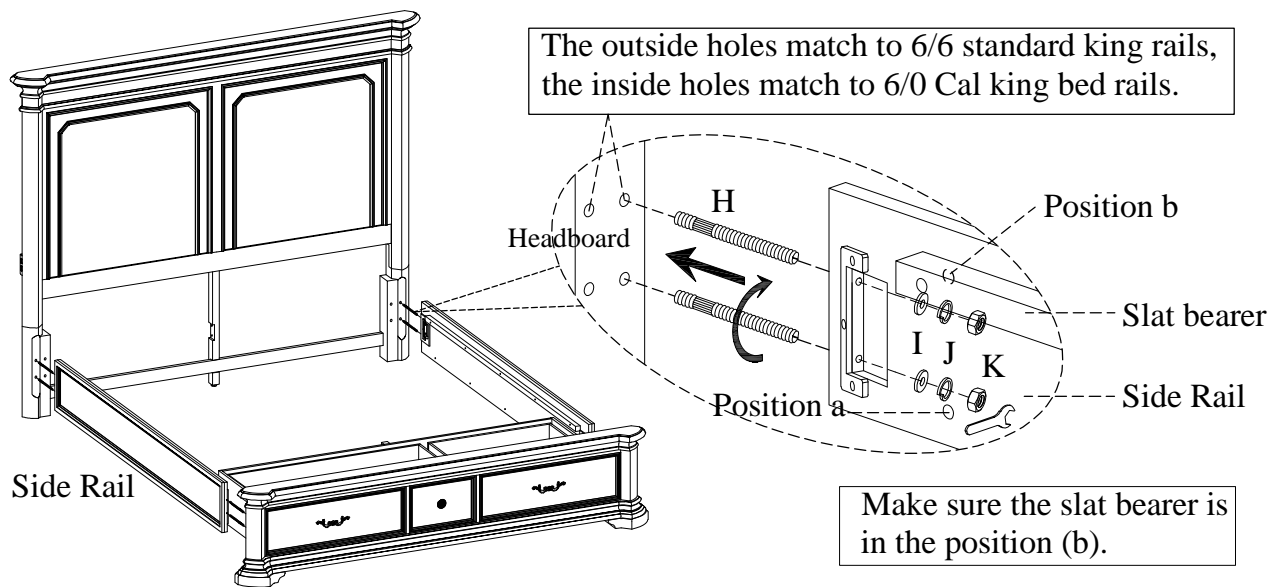

STEP 5: Attach center rail to the footboard and center support leg of headboard using 4 bolts (O), lock washers (P) and flat washers (Q).

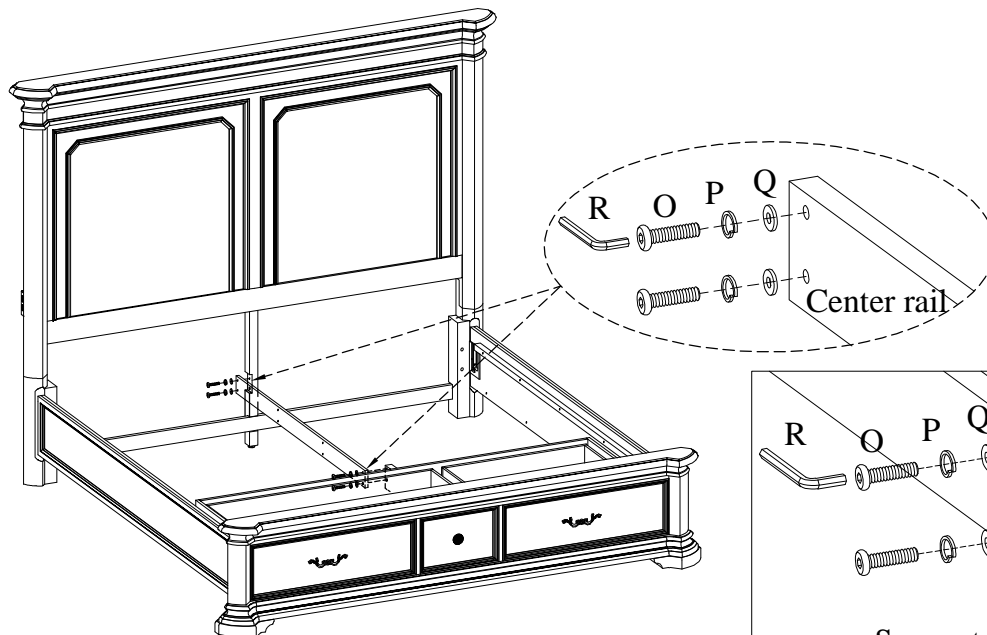


STEP 6: Attach 2 support legs (for center rail) to the center rail using 4 bolts (O), lock washers (P) and flat washers (Q). Use the Allen Wrench (R) to tighten all of the bolts.

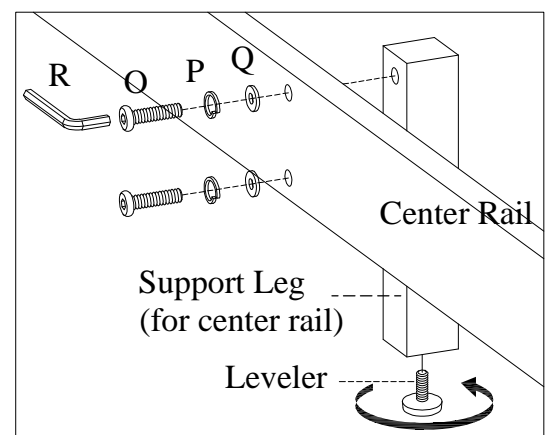




ITEM NO: I206-415 King Panel HB
I206-406 King Rails
I206-410 Cal King Rails
I206-407D King Storage FB


STEP 7: Arrange slats on the slat bearers and then lay the decking on top of the slats. Make sure the top and bottom slats are situated underneath the pre-drilled holes as shown below in STEP 9. Remove the decking and attach slats to the slat bearers with wood screws (M).

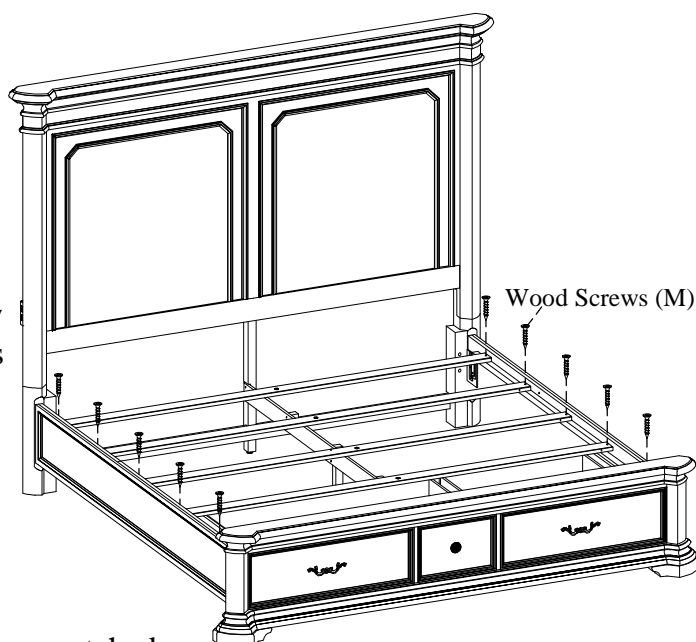


STEP 8: For the Cal King bed, both filler boards are notched. Using a utility knife only cut off the small piece at the notch on one of the filler boards. This cut off filler board will be placed at the foot of the bed going from left to right as shown on the right side below in STEP 9. For the standard King bed, skip this step and arrange the decking boards as shown on the left side below.

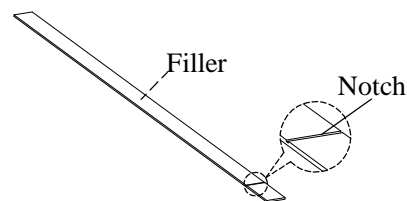

STEP 9: Put the decking over the slats, secure decking to the slats with wood screws (S) through the pre-drilled holes in the decking as shown below.

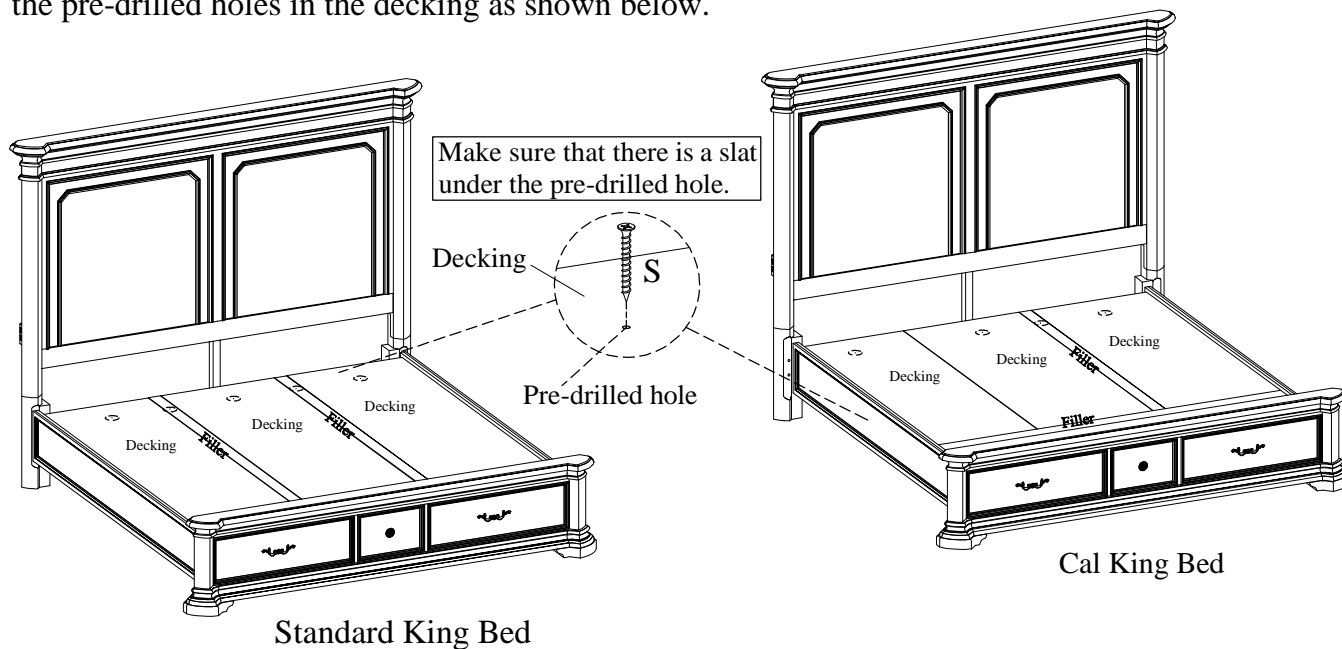



STEP 10: For Cal King bed, insert wood caps into the holes on headboard and footboard. For regular King bed, skip this step.

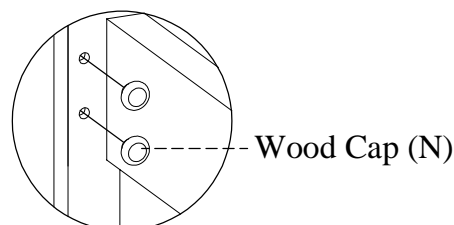



ITEM NO: I206-415 King Panel HB
I206-406 King Rails
I206-410 Cal King Rails
I206-407D King Storage FB

FUNCTIONALITY INSTRUCTION

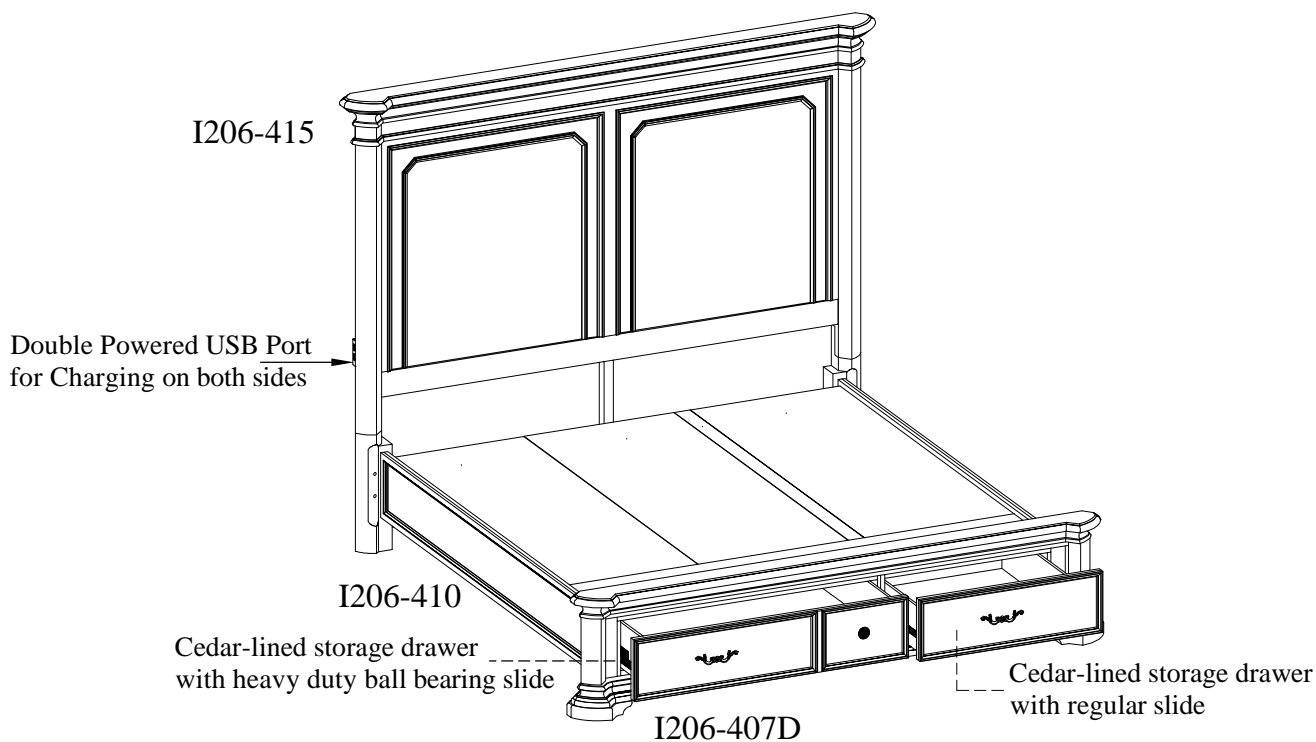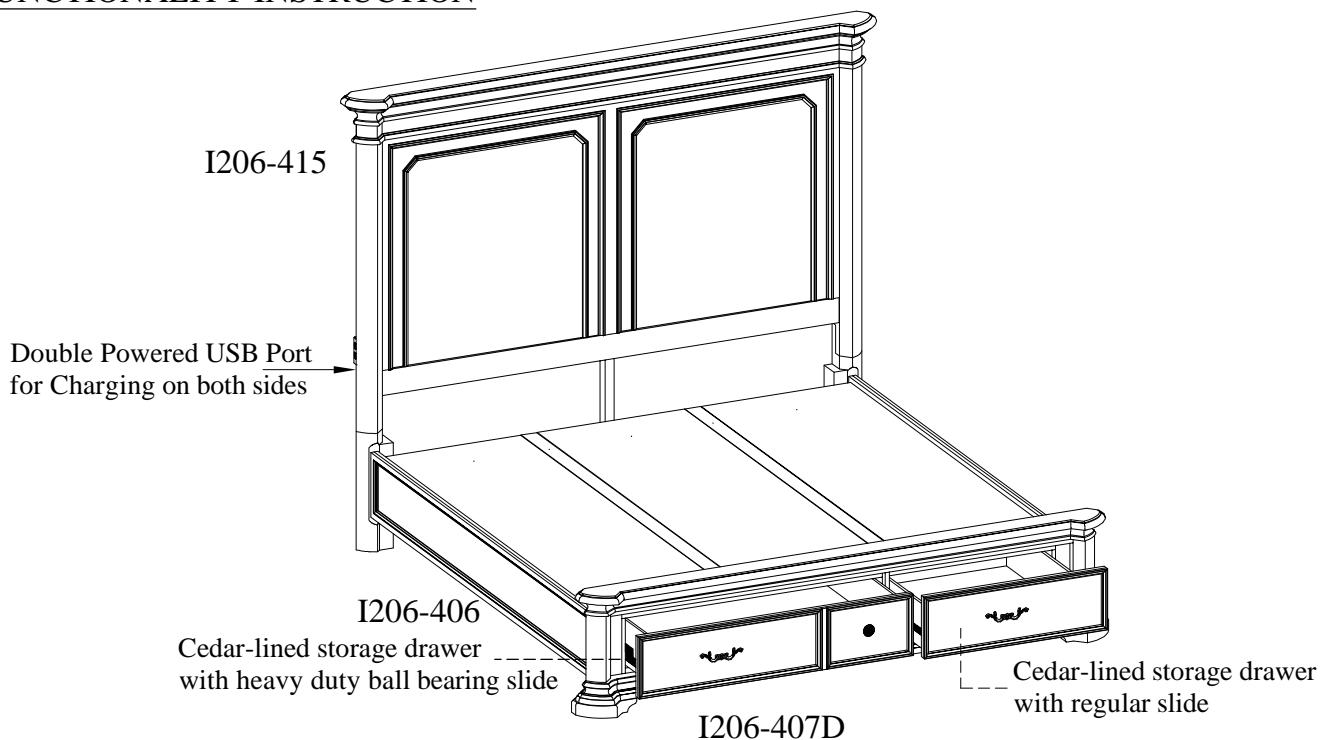



ITEM NO: I206-415	King Panel HB
I206-406	King Rails
I206-410	Cal King Rails
I206-407D	King Storage FB

Instruction for the Drawer with Heavy Duty Ball Bearing Slide

To remove the drawer, please remove the set screws on two sides of the drawers. Push the tab in toward the drawer and lift up the drawer to move out.

To install the drawer, please extend the slides all the way out. Set the drawer box into cabinet rail and slide back so the drawer rail goes under the hook in cabinet rail. Then snap the tab into drawer rail and replace set screws.

