

leggett & platt®

fashion bed™

5950 West 51st Street – Chicago, IL 60638

Parts List For Dexter/Lakehouse

HEADBOARD CARTON

(10) HEADBOARD PANEL

**PART #351502 HARDWARE BAG FOR
HEADBOARD ATTACHMENT TO FRAME**

**(1) 1/4-20 2 1/4" COUNTER SUNK ALLEN
HEAD SCREW-4**

(3) 1/4-20 HEX NUT-4


(4) 5/8" OD FLAT WASHER-4

(5) ALLEN WRENCH


(6) PLASTIC GLIDE-2

(7) FINIAL-2

(9) LEG EXTENSION-2

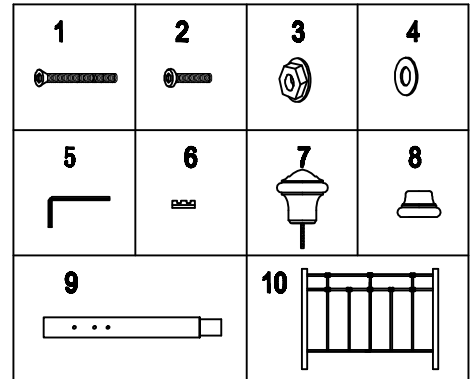

PRODUCT FULLY ASSEMBLED

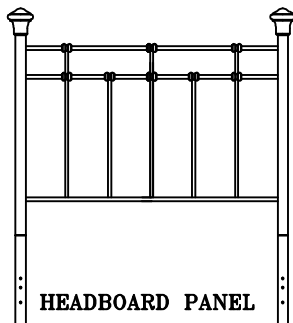

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK AT 1-800-324-3415, BETWEEN 8:30 AM & 4:30 PM CENTRAL TIME MONDAY THRU FRIDAY. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1

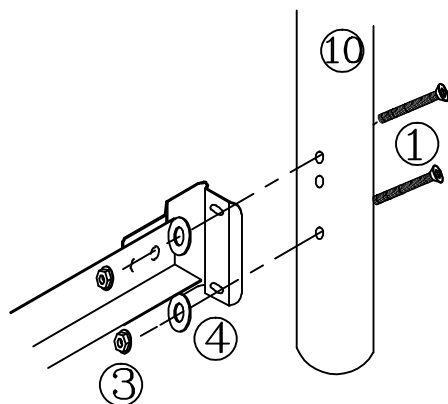
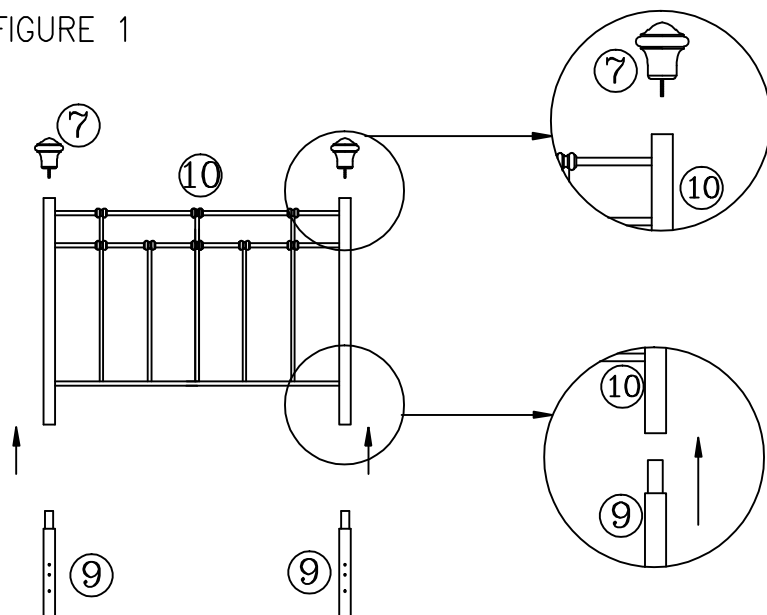


FIGURE 2

Step 1

- Align top reduction of extension legs (9) with bottom of headboard posts. (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (9) into bottom of headboard (10) posts.
- Screw in finials (7) on top of headboard (10) and footboard (11) posts. (See Figure 1)
- Slide foot castings (8) onto bottom of footboard (11) posts. Insert plastic glide (6) into bottom of foot casting.

Step 2

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in leg (9). (See Figure 2)
- Align bed frame bracket over screws.
- Place a flat washer (4) and a nut (3) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (5).