


# ASSEMBLY INSTRUCTIONS

ITEM NO.: 2623&2623-21F/21H/21R  
 QUEEN PANEL HEADBOARD WITH CUSHION BENCH  
 FOOTBOARD

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

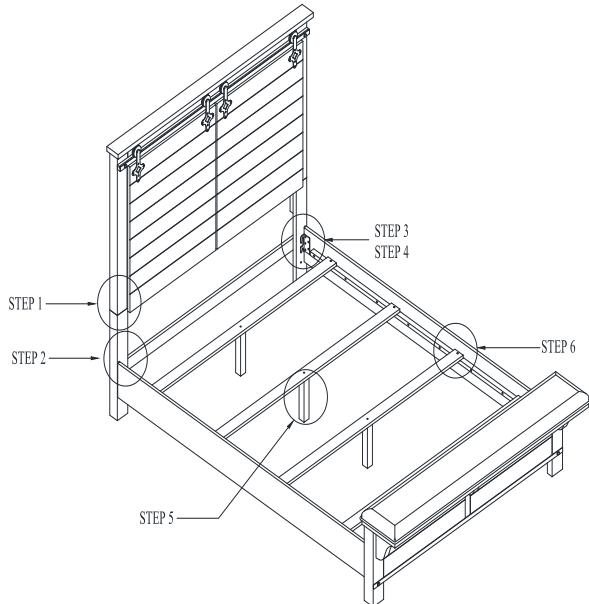

TOOLS REQUIRED (NOT PROVIDED):  
 PHILLIPS SCREWDRIVER

## PARTS LIST

NO.	DESC	SKETCH	Q'TY
A	HEADBOARD		1 PC
B	FOOTBOARD		1 PC
C	BED SIDE RAILS		2 PCS
D	CROSS BAR		1 PC
E	BED SLATS		4 PCS
F	HEADBOARD POST (L + R)		2 PCS
G	SUPPORT LEG		4 PCS
H	CONNECT PANEL		2 PCS


## HARDWARE LIST FOR HEADBOARD

NO.	DESCRIPTION	SKETCH	SIZE	Q'TY
a	Allen Key		4 x 74 x 29mm	1 PC
b	Bolt		Φ1/4" x 15 x 45mm	12 PCS
c	Spring Washer		Φ1/4" x 11x 2mm T	16 PCS
d	Flat Washer		Φ1/4" x 18 x 2mm T	16 PCS
e	Bolt		Φ1/4" x 15 x 38mm	4 PCS
g	STRAIGHT ALLEN KEY		4*100mm	1 PC


## HARDWARE LIST FOR FOOTBOARD AND SLATS

NO.	DESCRIPTION	SKETCH	SIZE	Q'TY
f	Screw		#8 x 30mm	8 PCS


STEP 1

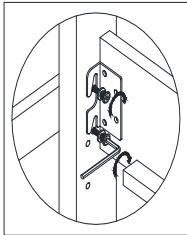


STEP 2

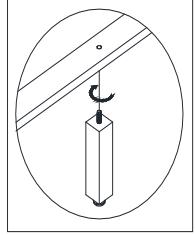


STEP 3

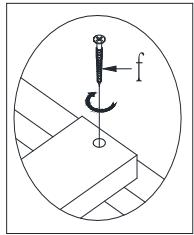


STEP 4

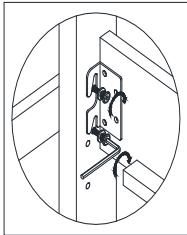

STEP 5

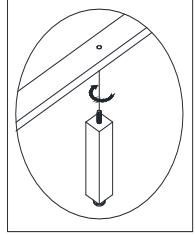

STEP 6

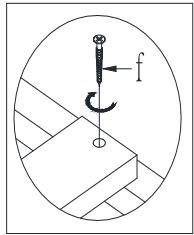

STEP 1: ATTACH CONNECT PANEL (H) TO HEADBOARD POST (F) AND HEADBOARD (A) BY USING ALLEN KEY (a), BOLT (b), SPRING WASHER (c) AND FLAT WASHER (d).  
 STEP 2: ATTACH CROSS BAR (D) TO THE HEADBOARD POST (F) BY USING ALLEN KEY (a), BOLT (e), SPRING WASHER (c) AND FLAT WASHER (d).

STEP 3: SLIGHTLY LOSS BOLT (e) ON THE HEADBOARD POST (F) BY TURNING COUNTERCLOCKWISE

STEP 4: HANG SIDE RAILS (C) TO THE HEADBOARD POST (F) AND FOOTBOARD (B) AND TIGHTEN THE BOLT (e).

STEP 4: ATTACH SUPPORT LEG (G) TO SLATS (E) BY TURNING CLOCKWISE.

STEP 5: ATTACH SLATS (E) TO SIDE RAILS (C) BY USING SCREW (f).

### IMPORTANT NOTE:

1. HARDWARE BAG FOR HEADBOARD IS PACKED WITH HEADBOARD.
2. HARDWARE BAG FOR FOOTBOARD AND SLATS IS PACKED WITH FOOTBOARD.

Made In Vietnam