




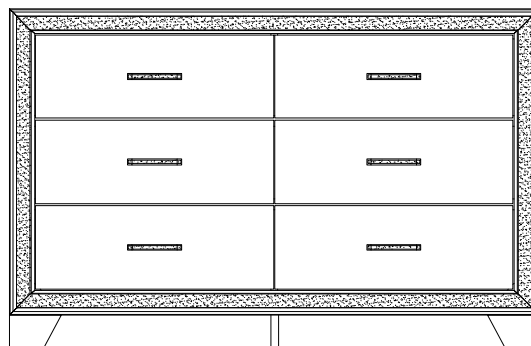


ASSEMBLY INSTRUCTION

B4750-1 KAIA DRESSER

BOX 1


BOX OF DRESSER			
NO	DESCRIPTION	DRAWING	QTY
A	DRESSER		1
B	BUNFOOT *		4
C	WOODEN SUPPORT *		1
HARDWARE LIST			
NO	DESCRIPTION	DRAWING	QTY
1	BOLT(M6 X 35) SPRING WASHER, FLAT WASHER		8
2	ALLEN KEY M6		1



* Bun Foot packed Inside Dresser Bottom Drawer

STEP 1 :

Attach bun foot (B) to Dresser (A).

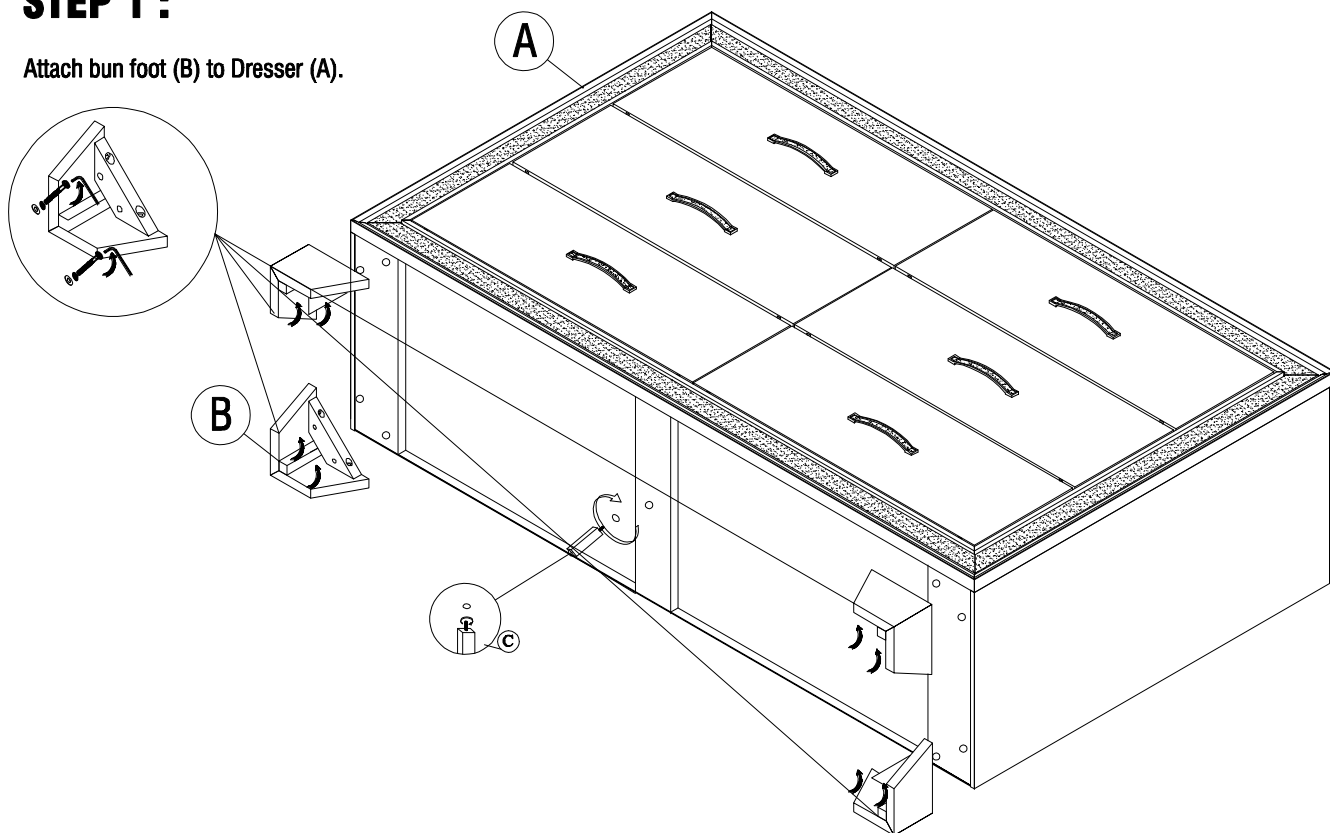

THE ANTI TIPPING HARDWARE IS LOCATED IN THE 1ST RIGHT SIDE FRONT DRAWER OF THE DRESSER.

PAGE 1 OF 2

THE HARDWARE IS LOCATED IN THE PACKING ITEMS.