


ASSEMBLY INSTRUCTIONS

MODEL #

CM7218-T

Questions?

GIVE US A CALL: 1-888-980-5122
MON – FRI 8:30AM – 5:30PM (PT)

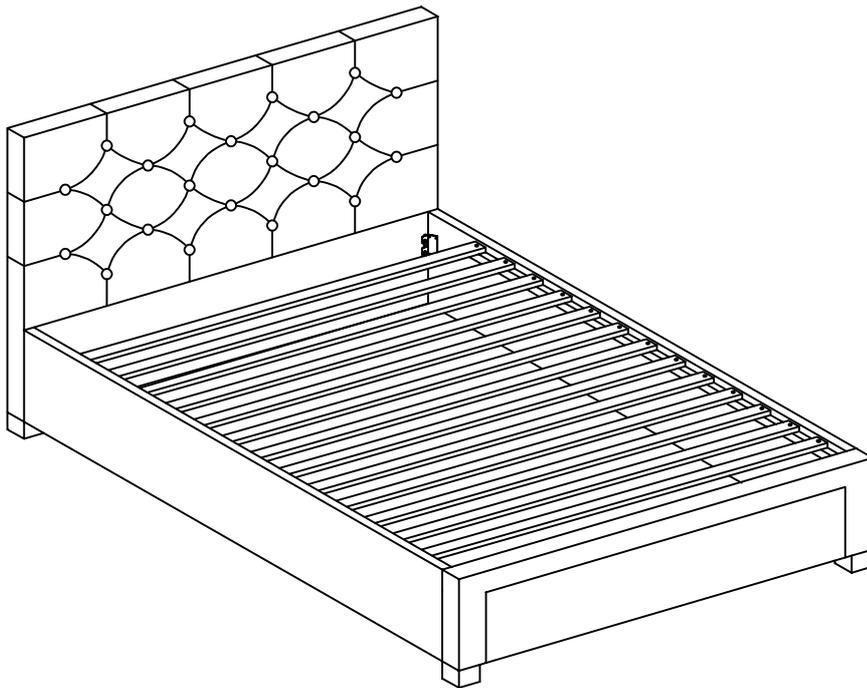


TOOLS REQUIRED



Allen Wrench

(Included)



Phillips Screwdriver

(Not Included)



**3 - People
Recommended**

ASSEMBLY RATING



EASY → DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific Time and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.

 **Consumer Hotline**
Toll-Free 1-888-980-5122

 **Monday to Friday**
8:30AM- 5:30PM (PT)

 **WEBSITE**
www.foagroup.com

 **E-MAIL**
cs.ec@foagroup.com

    foagroup

 FurnitureOfAmerica

CHECK BEFORE STARTING

Are you missing anything?
Double-check all parts, hardware and accessories listed are all accounted for.


Check out our Quick Tips!
We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

Should we send any replacements?
Are there any irregularities or flaws in the parts? We can send replacements!

Prep Time!
Please review the assembly instructions and all diagrams prior to assembling.



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

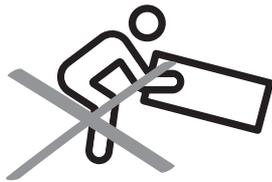

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

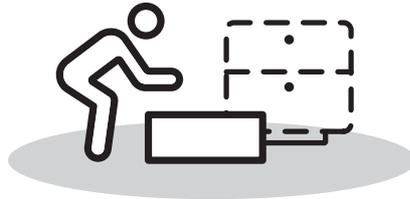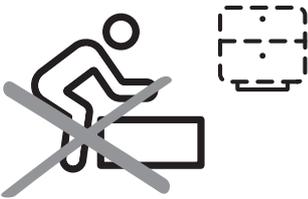

Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent to prevent scratches and damages.

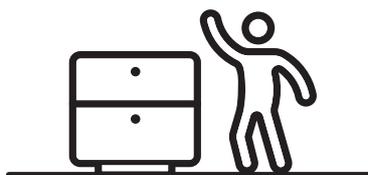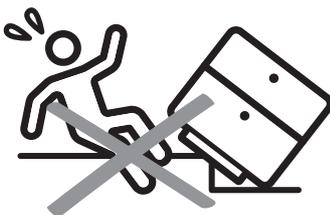

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

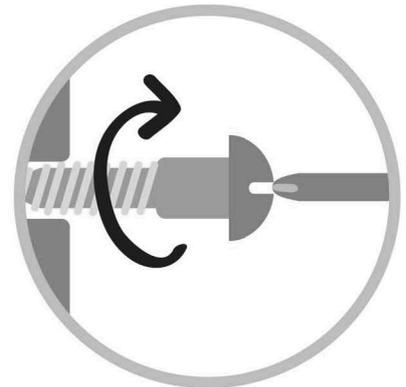

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

TWIN BED

CM7218-T




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

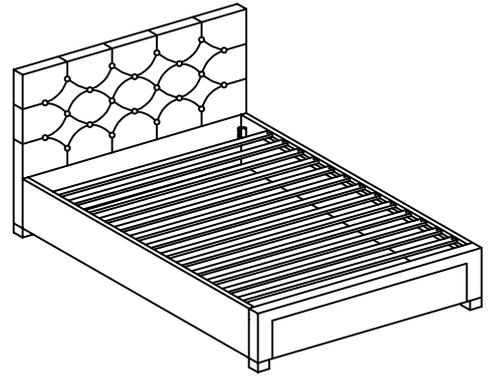


PARTS

#1 x 1pc

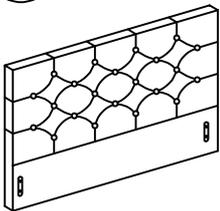


Headboard

#2 x 1pc

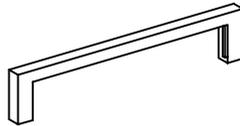


Footboard

#3 x 2pcs

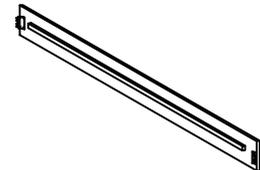

Side Rail

#4 x 4pcs

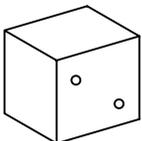


Legs

#5 x 13 pcs




Bed Slat
997x45x18 mm

#6 x 1pc

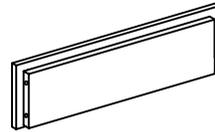


Drawer Front
Panel

#7 x 1pc

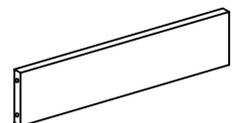


Drawer Back
Panel

#8 x 2pcs

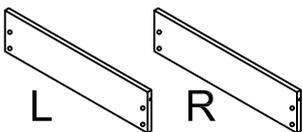


Drawer Side
Panel

#9 x 1pc



Drawer Bottom
Panel

#10 x 3pcs



Drawer Bottom
Panel Big Support


HARDWARE PACK IN FOOTBOARD

#A x 1pc




Allen Wrench
M5 x 70mm

#B x 26pcs



CSK Screw 32mm


#C x 8pcs



CSK Screw 50mm


HARDWARE PACK IN DRAWER

#D x 24pcs



CSK Screw 16mm

#E x 12pcs



CSK Screw 32mm

#F x 8pcs



CSK Screw 50mm

#G x 6pcs




Roller

#H x 12pcs













Power Nail 6/8

#I x 2pcs



Metal Stopper


CM7218T POINT 4 CARTONS

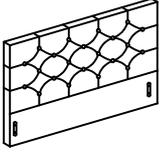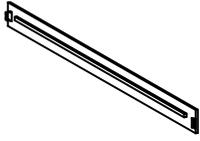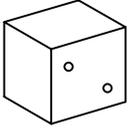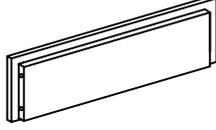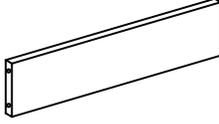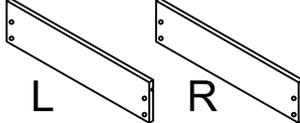Carton	Designation	Part	Hardware
CM7218-T-1	Headboard	#1 	
CM7218-T-2	Footboard	#2 	 #A x 1pc  #B x 26pcs  #C x 8pcs
	Side Rail	#3 	
	Legs	#4 	
CM7218-T-3	Drawer Front Panel	#6 	 #D x 24pcs  #E x 12pcs  #F x 8pcs  #G x 6pcs  #H x 12pcs  #I x 2pcs
	Drawer Back Panel	#7 	
	Drawer Side Panel	#8 	
	Drawer Bottom Panel	#9 	
	Drawer Bottom Panel Big Support	#10 	
CM7218-T-4	Bed Slat	#5 	

ASSEMBLY INSTRUCTIONS


1

- Part #1 x1pc
- Part #2 x1pc
- Part #4 x4pcs
- Hardware #C x8pcs

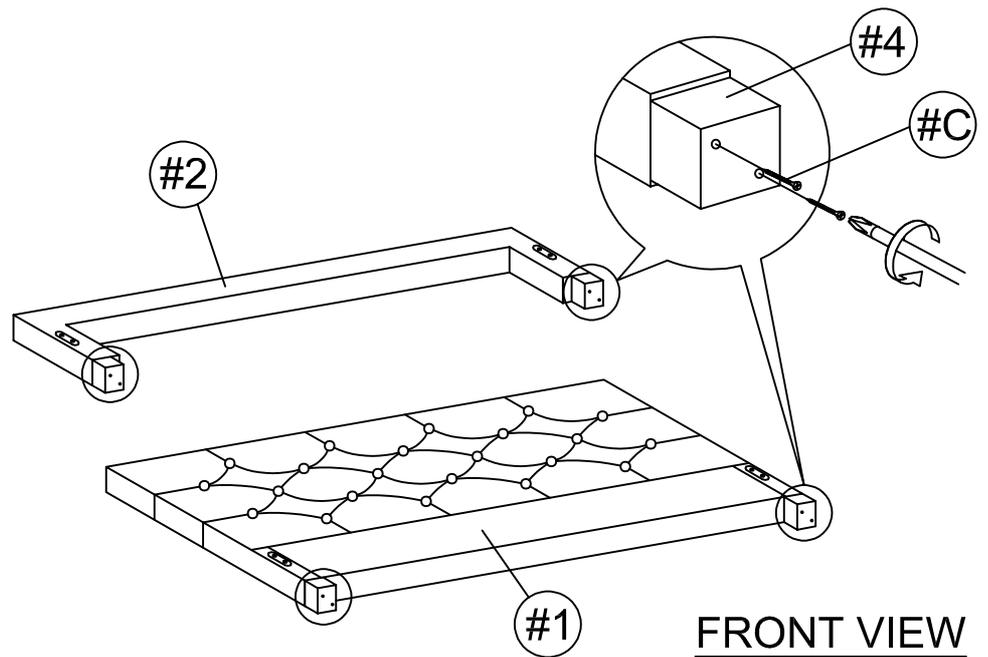

2


- Part #3 x2pcs

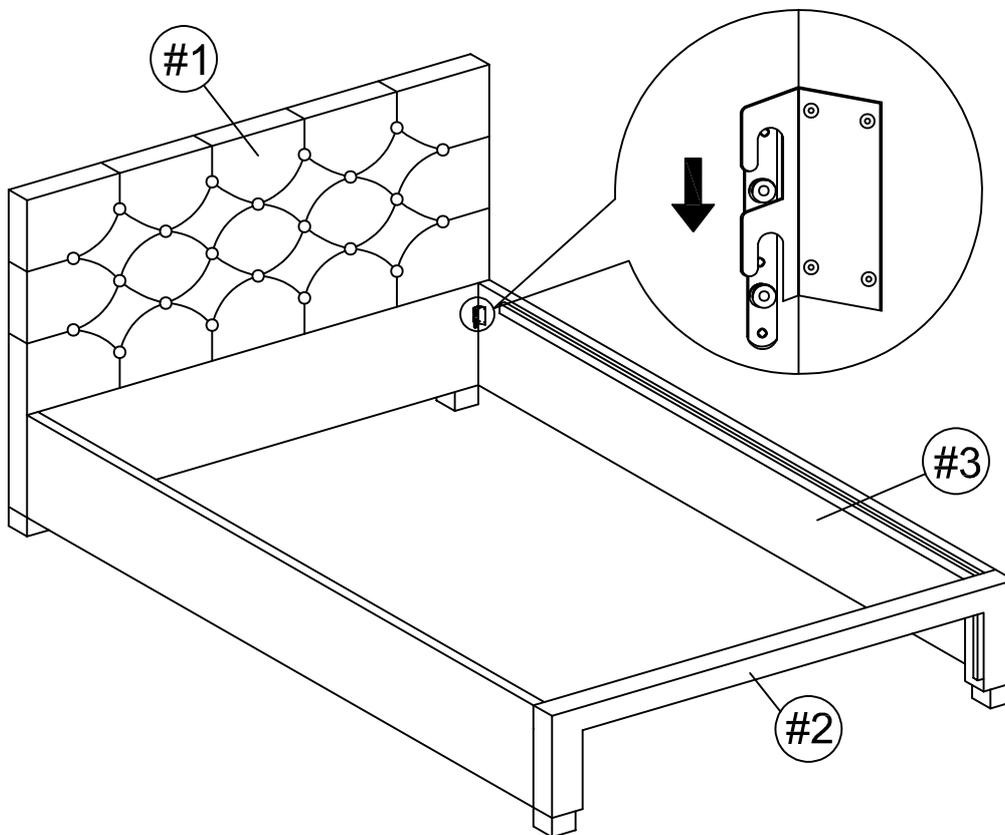

ASSEMBLY INSTRUCTIONS


3

- Part #6 x1pc
- Part #7 x1pc
- Part #8 x2pcs
- Hardware #F x8pcs

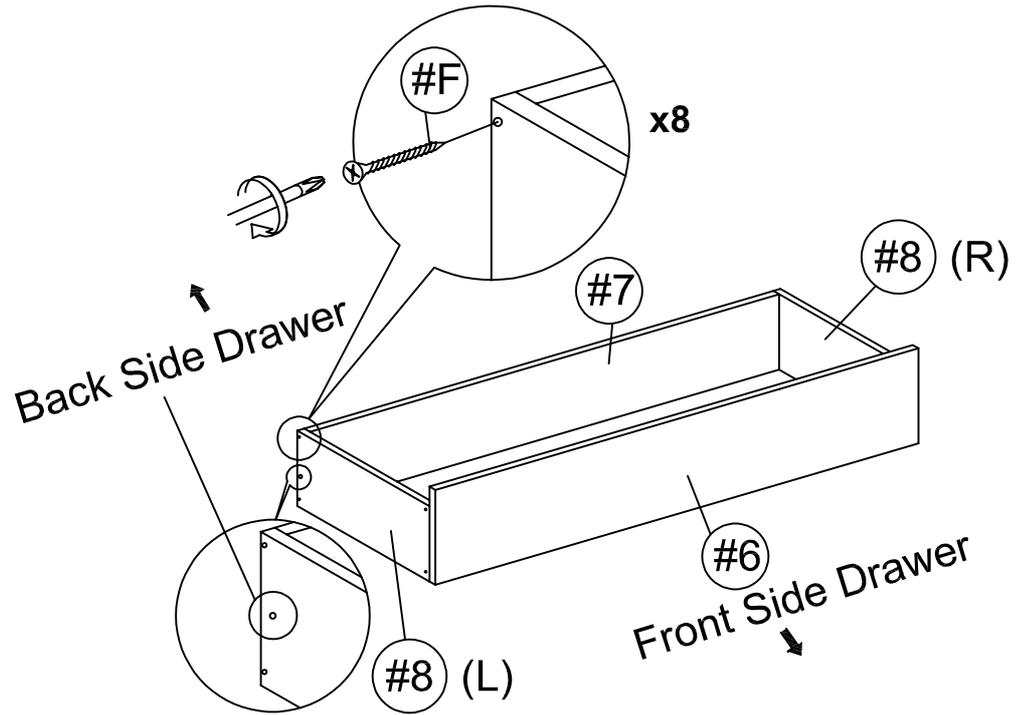

4


- Part #9 x1pc

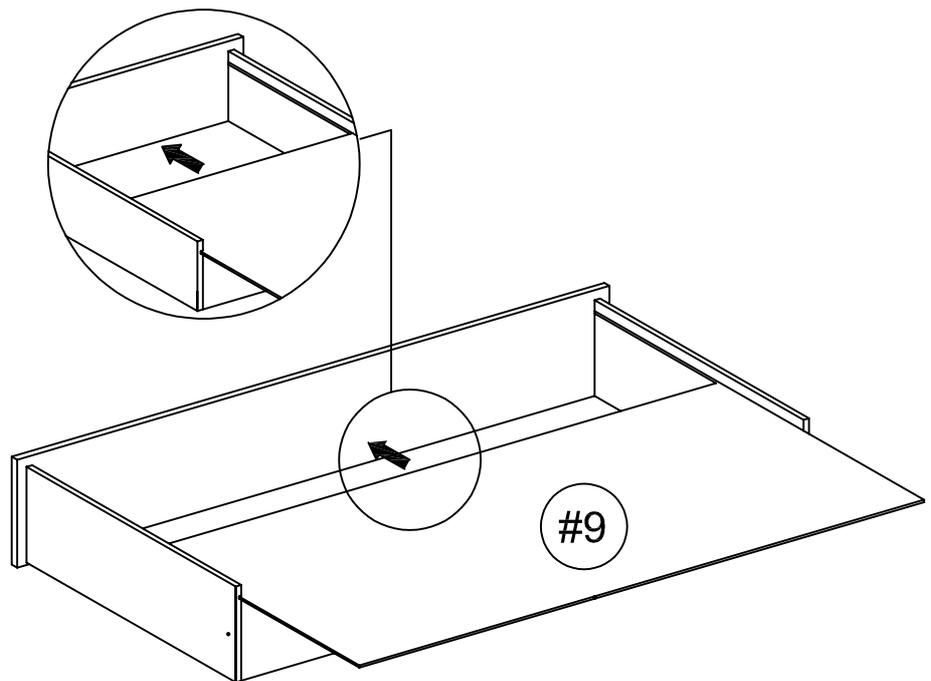

ASSEMBLY INSTRUCTIONS


5

- Part #10 x3pcs
- Hardware #E x12pcs
- Hardware #H x12pcs

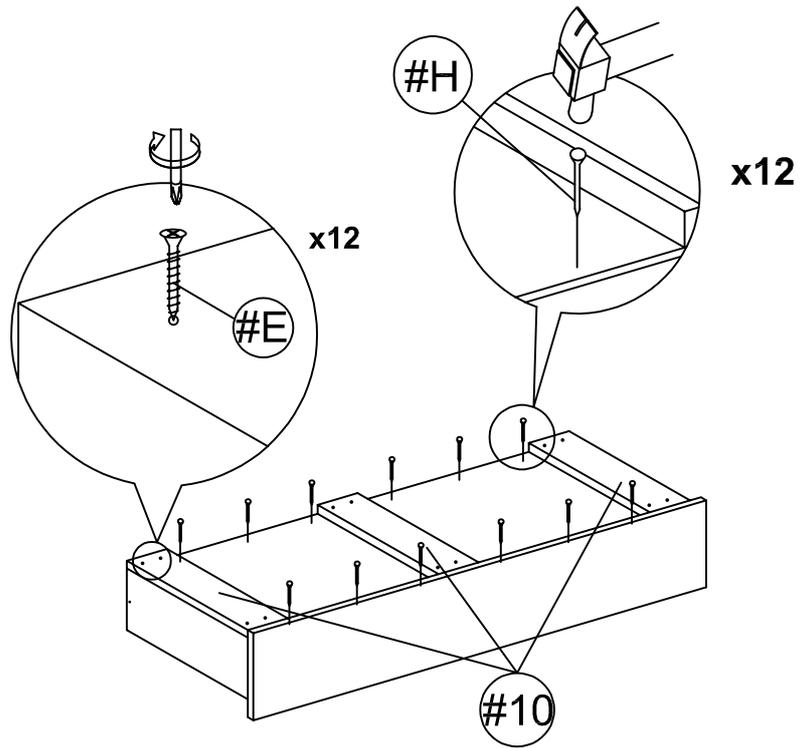

6

- Hardware #D x6pcs
- Hardware #G x24pcs

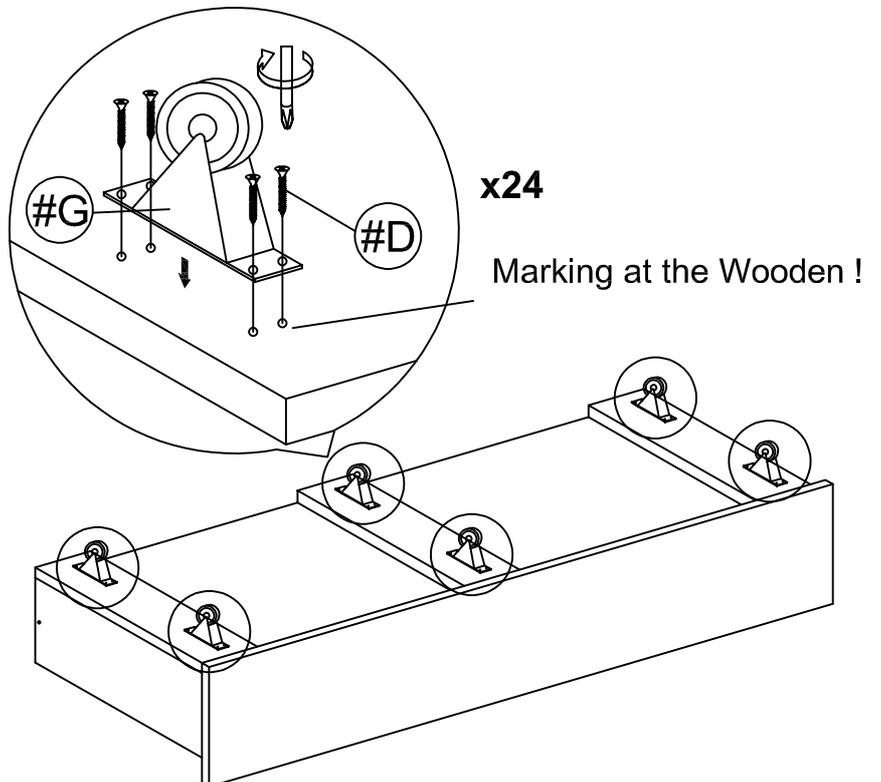

ASSEMBLY INSTRUCTIONS


7

Part #5 x13pcs

Hardware #A x1pc

Hardware #B x26pcs

Hardware #I x2pcs

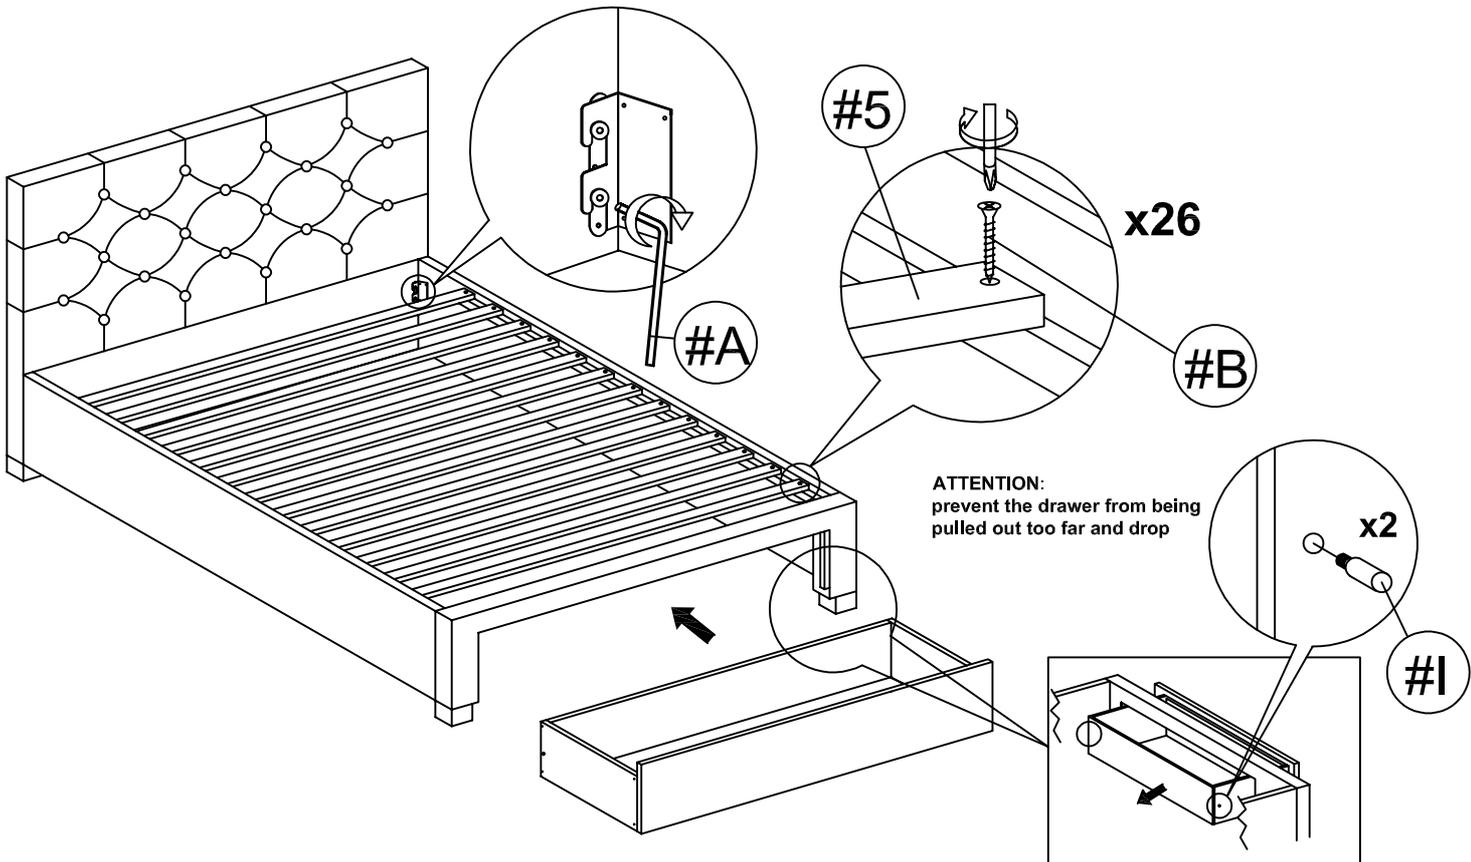

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.