



ASSEMBLY INSTRUCTIONS

I-BEN-C004-BK

PRODUCT IMAGE SHOWN IS FOR ILLUSTRATIVE PURPOSES ONLY, SHOULD NOT BE TAKEN AS REFERENCE POINT

HARDWARE

| DESCRIPTION | PCS |
|--|-----|
| FLAT HEAD SCREW 8 X $\frac{3}{4}$ " | 8 |
| FLAT HEAD SCREW 8 X 1" | 8 |
| WASHER 5/16" | 4 |
| ROUND HEAD BOLT 5/16" X 1-1/4" | 4 |
| JOINT CONECTOR ALLEN BOLT $\frac{1}{4}$ " X 50 | 2 |
| JOINT CONECTOR NUT $\frac{1}{4}$ " | 2 |
| IRON SUPPORT | 4 |
| ALLEN KEY $\frac{5}{32}$ " | 2 |

ROUND HEAD BOLT
5/16" X 1-1/4"

WASHER 5/16"

F A

IRON SUPPORT

F B

FLAT HEAD SCREW $\frac{3}{4}$ "

LEGS

F C

FLAT HEAD SCREW 1"

LEGS


ALLEN KEYS
5/32"

JOINT CONECTOR
NUT $\frac{1}{4}$ "

BOLT CONECTOR
 $\frac{1}{4}$ " X 50

ALLEN KEYS
5/32"

F D

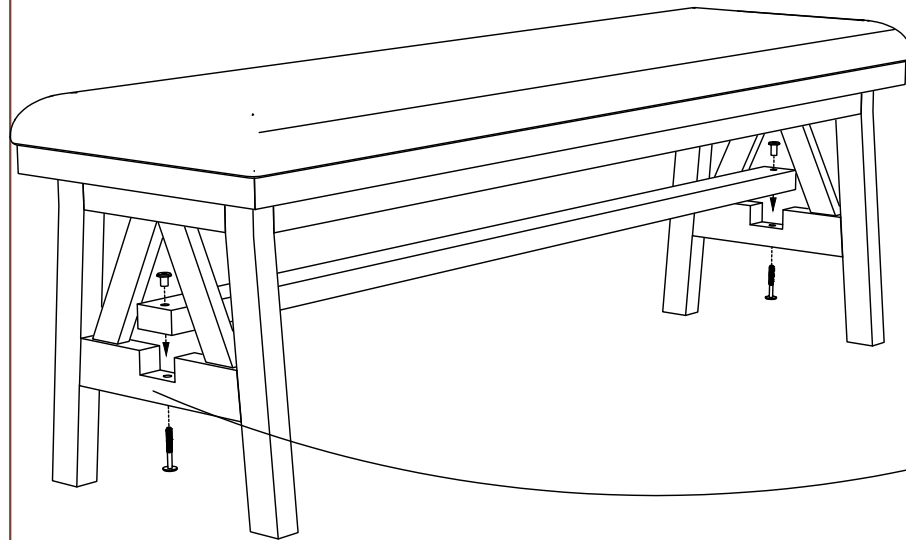

INSTRUCTIONS:

- 1.- USE A FLAT AND CLEAN SURFACE FOR ASSEMBLY.
- 2.- ALIGN THE HOLES OF THE LEGS WITH THE SEAT'S PRE-DRILLED HOLES AS SHOWN IN FIG A.
- 3.- PLACE THE METAL SUPPORT AND SCREW THEM AS SHOWN IN FIG B AND C.
- 4.- PUT THE CROSSBAR BETWEEN THE LEGS AND INSERT THE BOLTS AS SHOW IN FIG D.
- 5.- TIGHTEN THE CORRESPONDING SCREWS. TURN OVER TO PLACE IT IN THE DESIRED LOCATION