

# WINNERS ONLY®

## ASSEMBLY INSTRUCTIONS





PROD. NO : DD3455

Thank you for purchasing this quality product . Be sure to check all packaging material carefully for small parts that may have come loose inside the carton during shipment .





**"Hardware is attached underneath the seat bottom"**

This product will take 15-20 minutes to assemble

### Components List :

NO	DESCRIPTION	SKETCH	QTY
A	Bench Seat		1pc
B	Bench Center Leg		2pcs
C	Bench Leg		4pcs
D	Adjustable Levelers		2pcs

### Hardware List :

NO	DESCRIPTION	SIZE	SKETCH	QTY
1	Wrench	12x75 mm		1pc
2	Hex-Nut	5/16"		12pcs
3	Spring Washer	5/16" x Ø12		12pcs
4	Flat Washer	5/16" x Ø19		12pcs

Screw driver is require for assembly (not included)

#### Reminders

1. Use only the hardware supplied.
2. Once the chair is finished, level and tighten all the bolts.
3. Do not over-tighten bolts.
4. This item may require periodic tightening.

#### NOTE :

1. Hardware pack is located underneath the Bench Seat (A).
2. Two or more people are needed for assembly. Please keep all hardware parts out of the reach of children.


# WINNERS ONLY®

## ASSEMBLY INSTRUCTIONS

PROD. NO : DD3455


Grab hardware bag from underneath the Bench seat.  
Do not fully tighten bolts until the Product is level  
and the assembly of the product is completed.

Fig.1

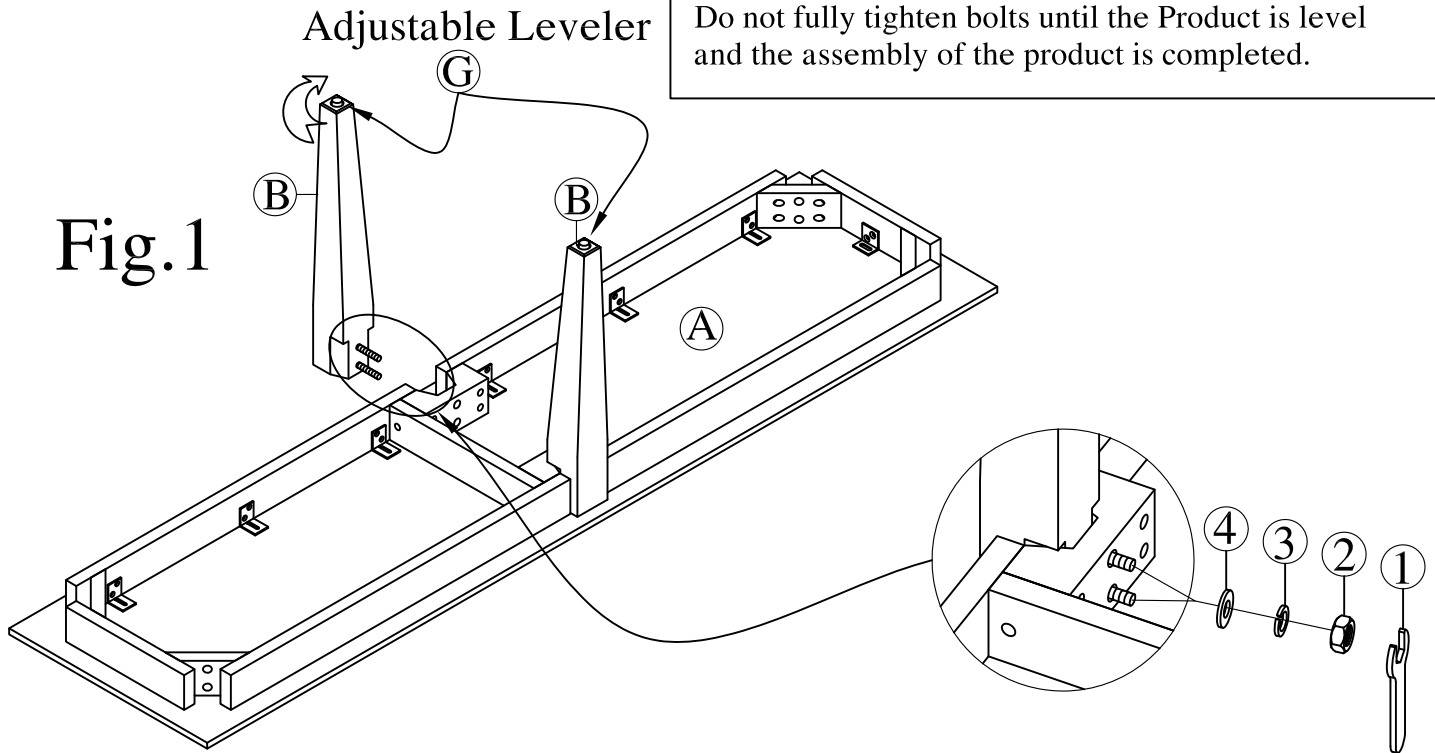

Step 1: Lay the Bench Seat (A) upside down on a flat soft surface. Insert Bench Center Leg (B) into Bench Seat (A), using the provided hardware as shown on Fig. 1. Do Not Fully Tighten Bolts Yet

Fig.2

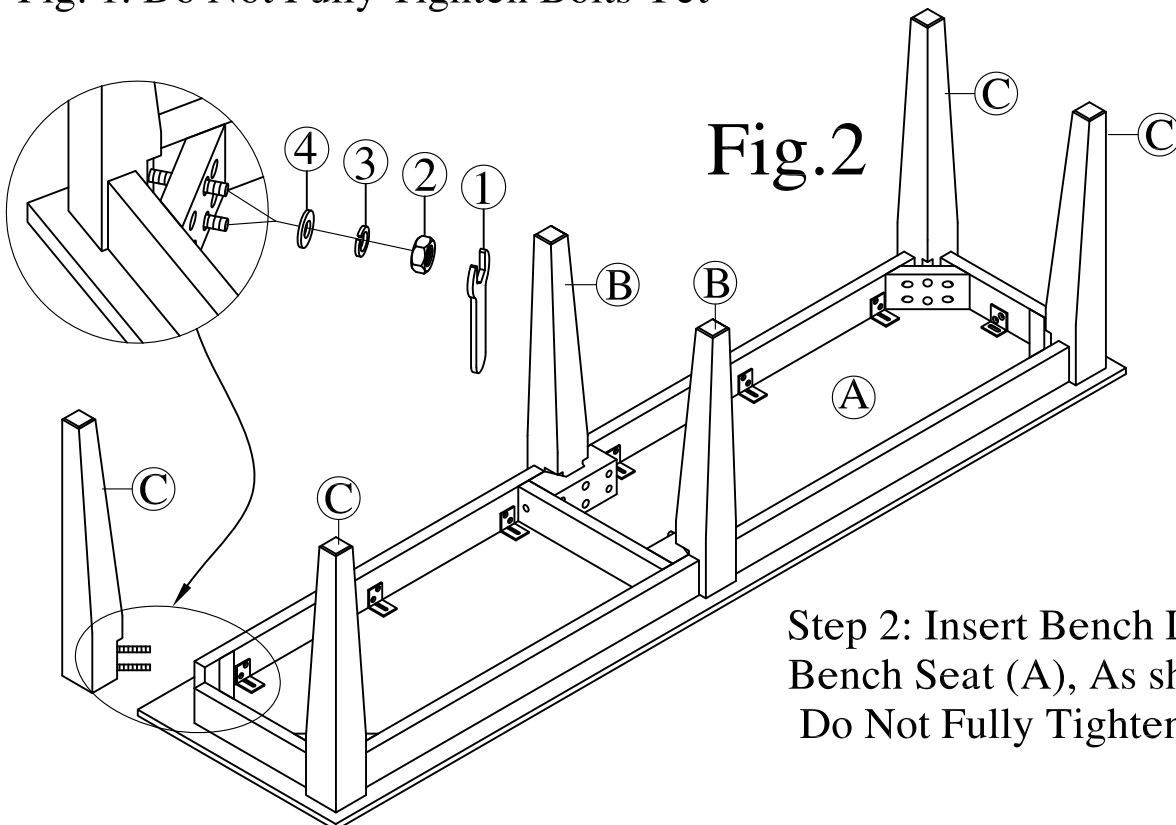

Step 2: Insert Bench Leg (C) into Bench Seat (A), As shown in Fig. 2.  
Do Not Fully Tighten Bolts Yet

# WINNERS ONLY®

## ASSEMBLY INSTRUCTIONS

PROD. NO : DD3455

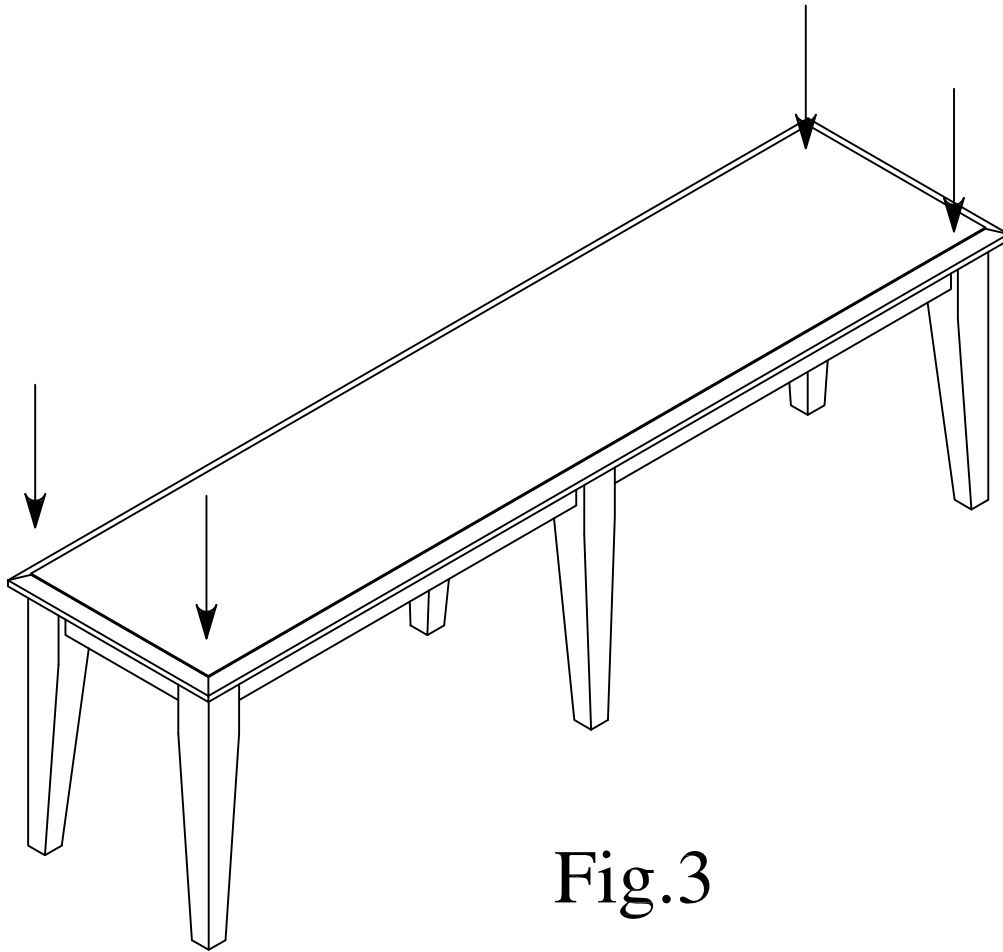


Fig.3

Step 3: Place the loosely assembled Bench on a hard flat surface and apply gentle downward pressure on the seat. As shown on Fig.3. Once the Bench is balanced and leveled, fully tighten all bolts.

**Assembly is now Complete**