



Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000 HDFBP

CODE	QTY	HARDWARE	
1	4	1/4" x 2-1/2" Sunk Bolts	
2	4	1/4" x 3/4" Allen Bolts	
3	8	1/4" Flat Washers	
4	4	1/4" Spring Washers	
5	4	1/4" Hex Nuts	
6	1	Open Wrench	
7	1	Allen Wrench	

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	2	Leg Extensions	B	1	Headboard
					

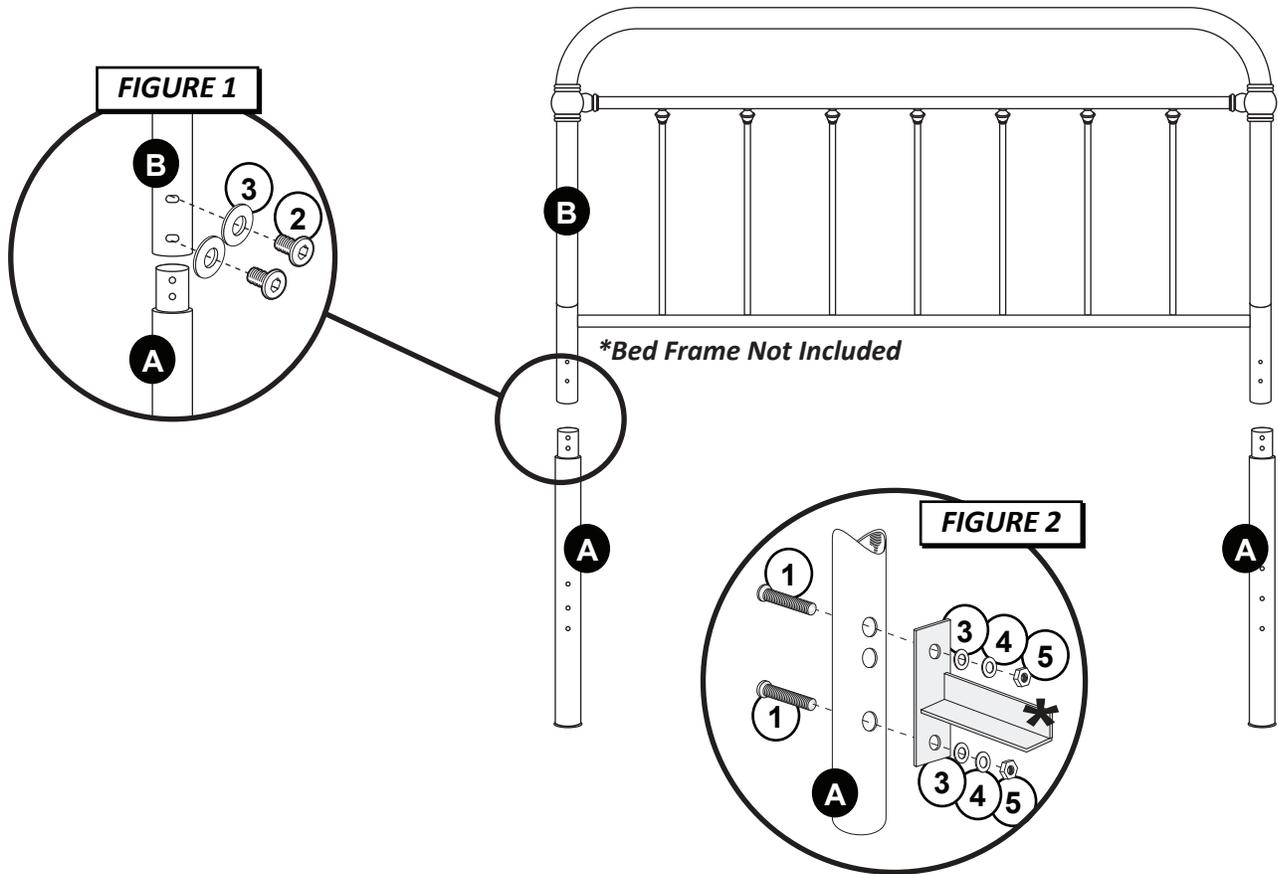

STEP 1 - Figure 1

Begin assembly by connecting Leg Extensions (A) to Headboard (B) using 2 Allen Bolts (2) & 2 Flat Washers (3, 2). Tighten all bolts with Allen Wrench (7) provided.

STEP 2 - Figure 2

Next, attach the Bed Frame (*Not Included) to each Leg Extension (A) using 2 Countersunk Allen Bolts (1) from the outside, and 2 Flat Washers (3), 2 Spring Washers (4) and 2 Hex Nuts (5) per post. Tighten all nuts and bolts using the Allen & Hex Wrenches (6 & 7) that have been provided.