


STEP 1


1. WITH THE HELP OF SOMEONE PLACE THE HEADBOARD IN TO CLEAN AND FLAT SURFACE, THEN PLACE THE SIDES AND ALIGN WITH THE PANEL WOOD USE THE PIN WOOD FOR GUIDE, PLACE THE PINWOOD IN HOLES AVAILABLE ON THE BOARD AS SHOWN IN PICTURE C. DO THIS ON BOTH SIDES.

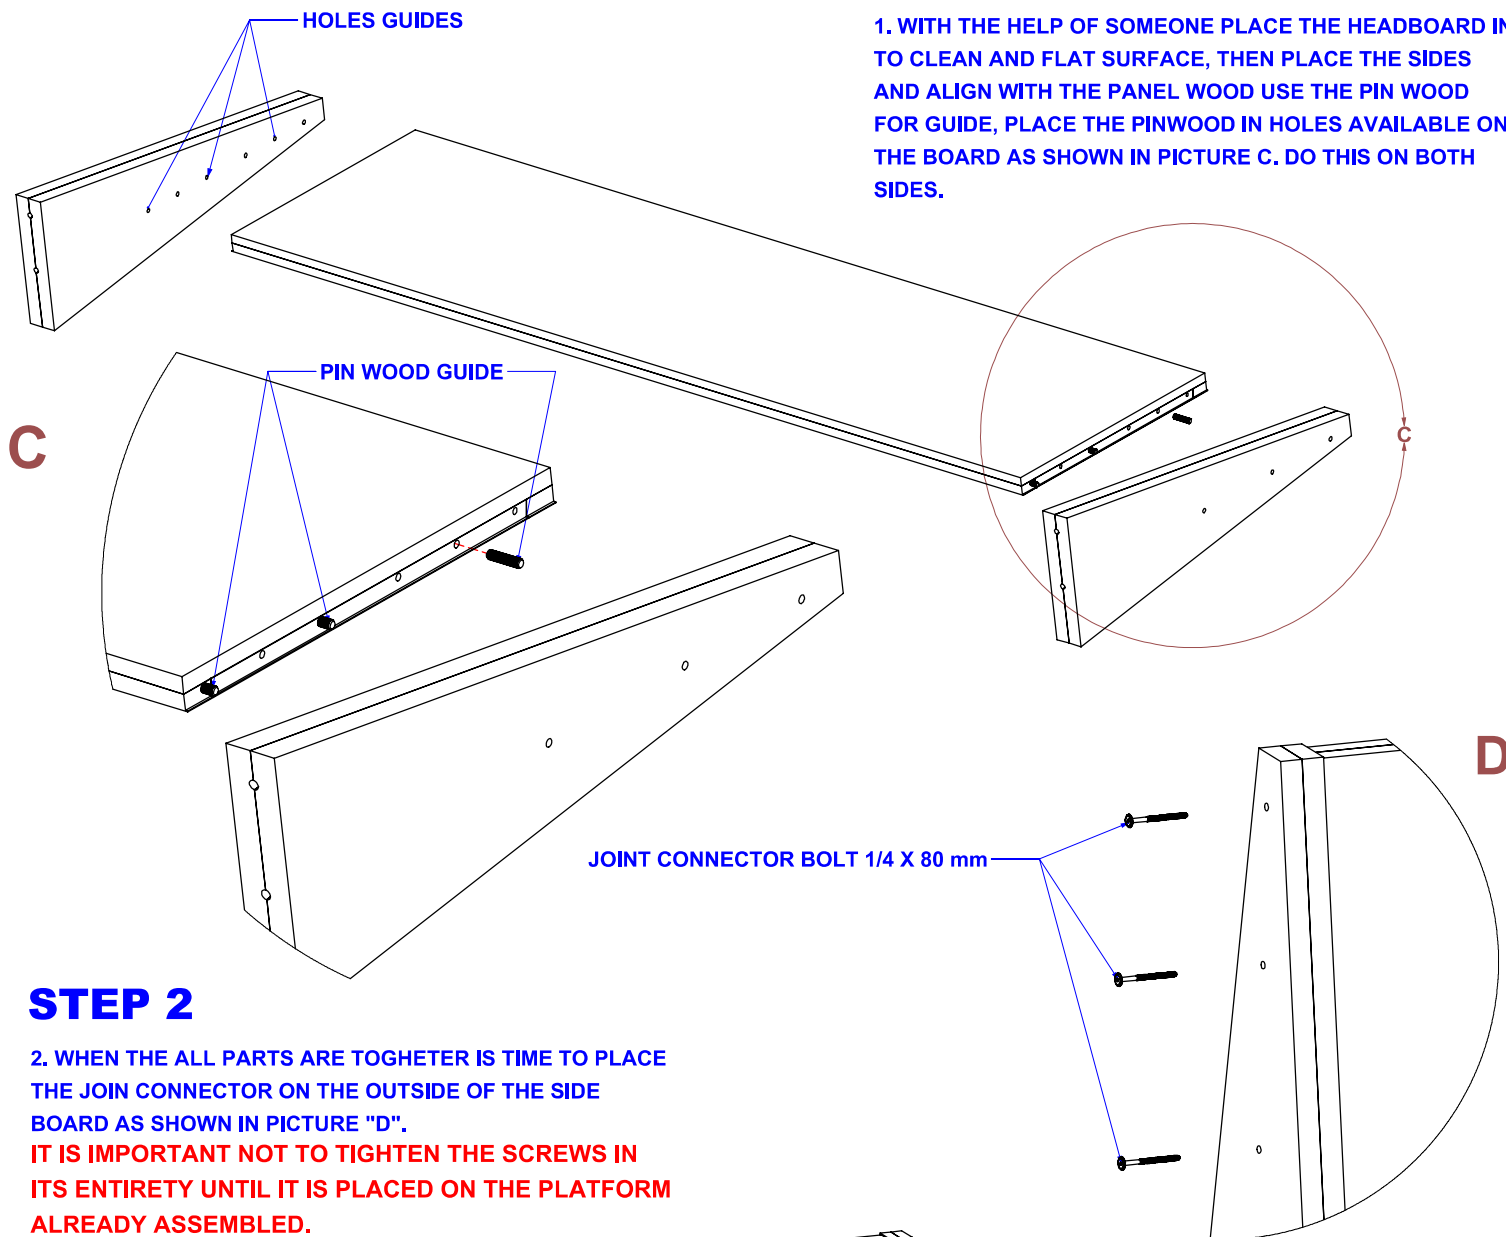

STEP 2

2. WHEN THE ALL PARTS ARE TOGHETER IS TIME TO PLACE THE JOIN CONNECTOR ON THE OUTSIDE OF THE SIDE BOARD AS SHOWN IN PICTURE "D".

IT IS IMPORTANT NOT TO TIGHTEN THE SCREWS IN ITS ENTIRETY UNTIL IT IS PLACED ON THE PLATFORM ALREADY ASSEMBLED.

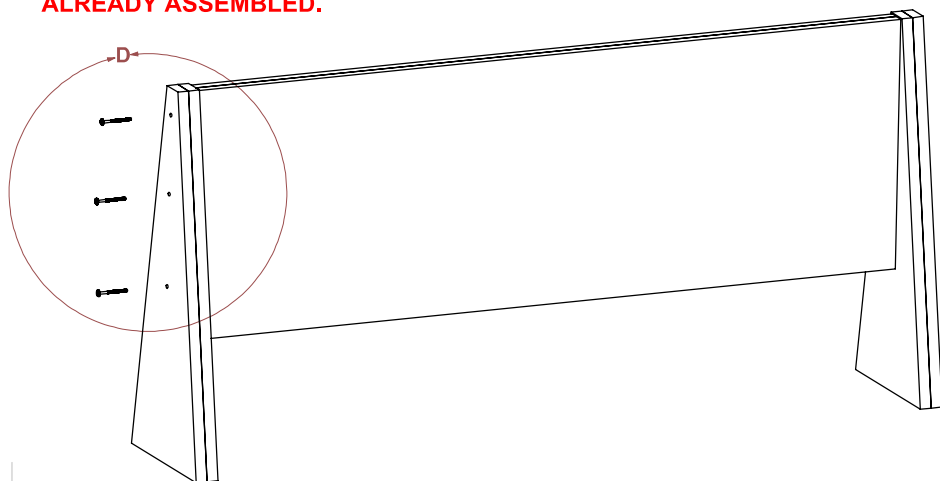

STEP 3

3. FINALLY WHIT SOMEONE'S HELP AND VERY CAREFULLY PLACE THE HEADBOARD ON THE PLATFORM AND CONTINUE WHIT THE PLATFORM INSTRUCTIONS.

DESCRIPTION	#
JOINT CONNECTOR BOLT 1/4 x 80 mm	6
PIN WOOD	8
ALLEN KEY 5/32	1

ITEM	DESCRIPTION	#
1TOR103	TORNILLO PERNO UNION 1/4 x 80 mm	6
1HER250	LLAVE ALLEN 5/32	1
1PER002	PERNO DE MADERA 8 X 40	8

ifd

INTERNATIONAL
FURNITURE DIRECT, LLC

CODIGO:

COLECCION: