

ASSEMBLY INSTRUCTIONS

MODEL #

FM72005-Q

Questions?

GIVE US CALL: 1-888-980-5122
MON-FRI 8:30AM - 5:30PM (PST)

TOOLS REQUIRED




Allen Wrench

(Included)



Screwdriver

(Not Included)

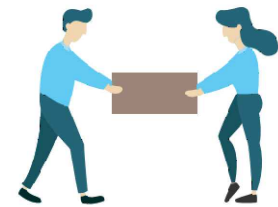


2 - Persons
Recommended

ASSEMBLY RATING



EASY —————> DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

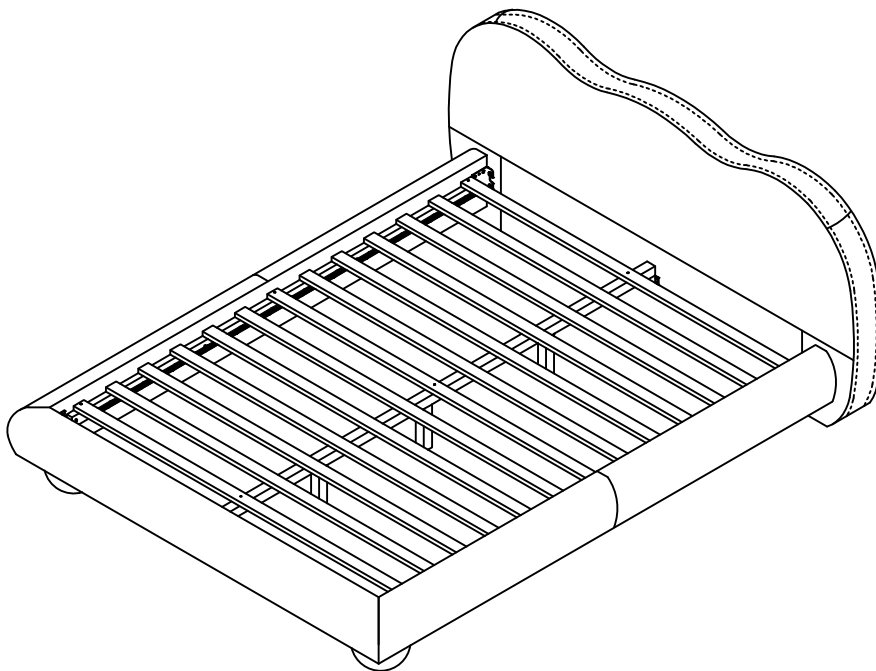



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline
Toll-Free 1-888-980-5122



Monday to Friday
8:30AM- 5:30PM (PST)



WEBSITE
www.foagroup.com



E-MAIL
cs.ec@foagroup.com



foagroup



FurnitureOfAmerica



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed are all accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!


☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling.


PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

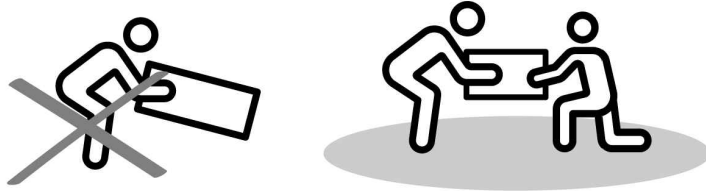

Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

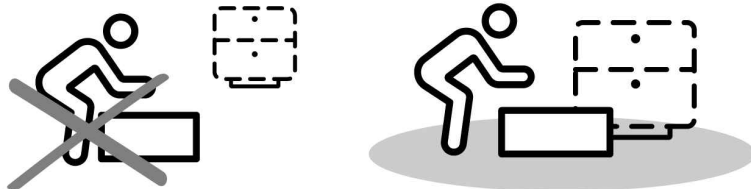


Suitable Location

Assembling near the area of the intended location is highly recommended.




Sufficient Space

Make sure you have enough space to move around during the assembly.

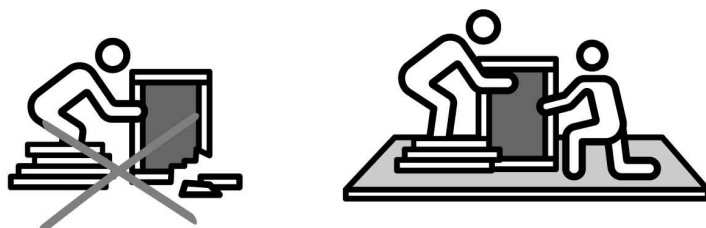

Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches and damages.

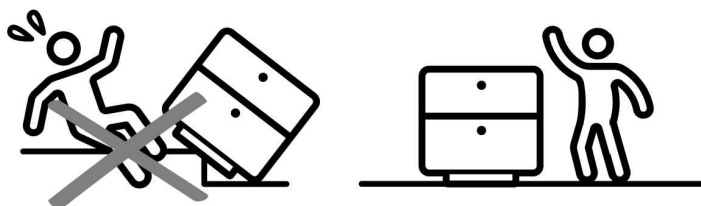

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

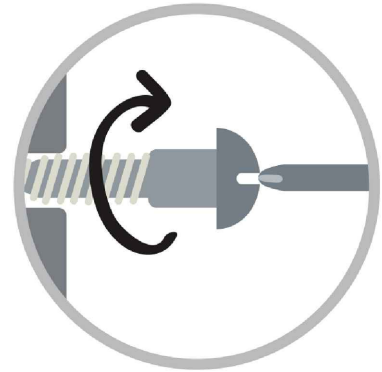


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



Save the instructions and store
any supplied tools for later
maintenance.

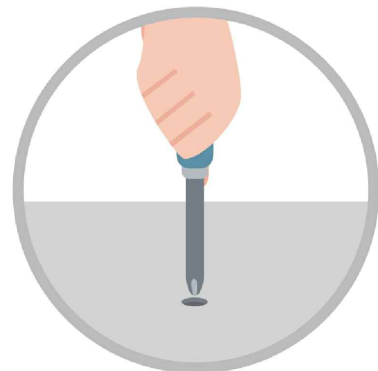


After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

QUEEN BED

FM72005-Q

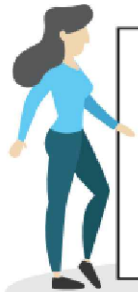


- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

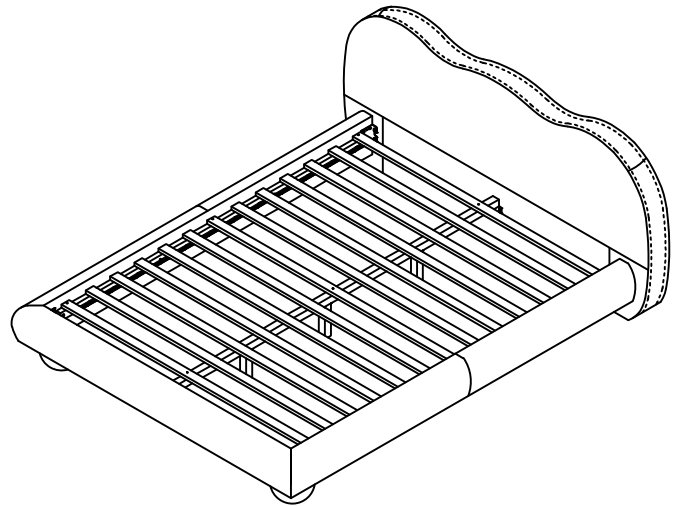


PARTS

#1 1pc

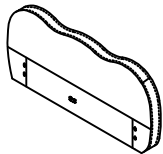


Headboard

#4 2pcs

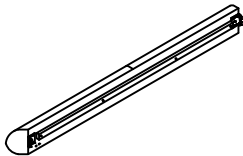


Side Rail

#7 1set

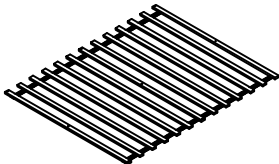


Slat

#2 1pc

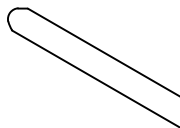

Footboard

#5 1pc




Center Rail

#8 2pcs




Vmb 3191

#3 2pcs



Bed Leg

#6 3pcs



Support Leg


#9 2pcs



5/16 Hex Nut

HARDWARE

#A 8pcs




Jcbc Bolt M6 x 20mm

#D 2pcs



M8 Flat Washer

#G 2pcs



Wood Screw M4 x 20mm

#J 1pc



M5 Allen Wrench

#B 8pcs




M6 Flat Washer

#E 2pcs



M8 Spring Washer

#H 9pcs




Wood Screw M4 x 32mm

#C 8pcs



M6 Spring Washer

#F 1pc





Spanner 13mm

#I 1pc



M4 Allen Wrench

FM72005-Q POINT 3 CARTONS

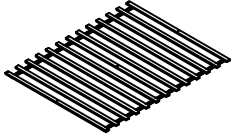Carton	Designation	Part		Hardware
FM72005-Q-HB	Headboard (1pc)	#1		
FM72005-Q-FBR	Footboard (1pc)	#2		 #A x 8pcs  #B x 8pcs  #C x 8pcs  #D x 2pcs  #E x 2pcs  #F x 1pc  #G x 2pcs  #H x 9pcs  #I x 1pc  #J x 1pc
	Bed Leg (2pcs)	#3		
	Side Rail (2pcs)	#4		
	Center Rail (1pc)	#5		
	Support Leg (3pcs)	#6		
	Vmb 3191 (2pcs)	#8		
	5/16 Hex Nut (2pcs)	#9		
FM72005-Q-SL	Slat (1Set)	#7		

ASSEMBLY INSTRUCTIONS


1

Part #1 x1pc

Part #2 x1pc

Hardware #J x1pc

Loosen the pre-inserted bolt on the headboard and footboard using allen wrench (#J)

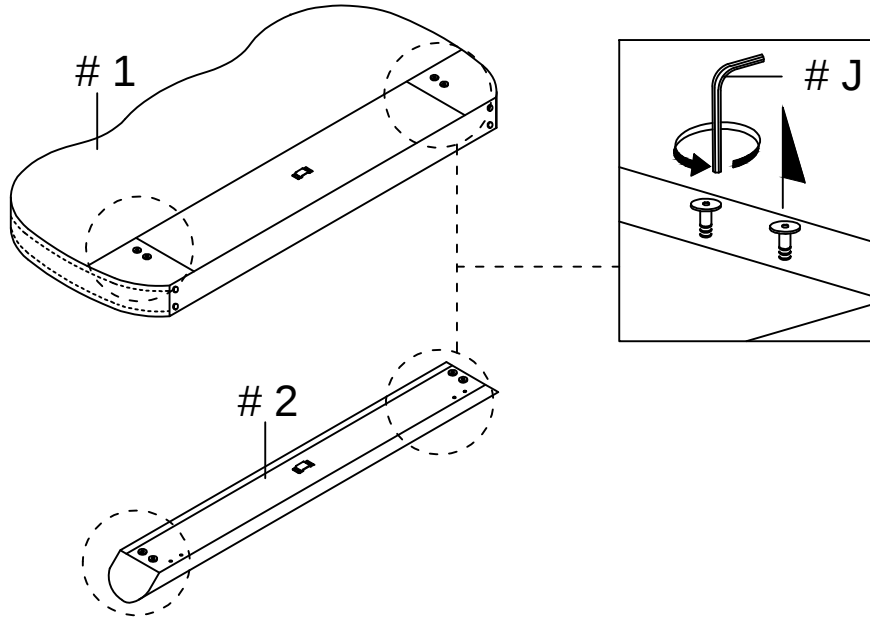

2


Align the side rail (#4) to the headboard (#1) and footboard (#2). Secure using allen wrench (#J).

Part #1 x1pc

Part #2 x1pc

Part #4 x2pcs

Hardware #J x1pc

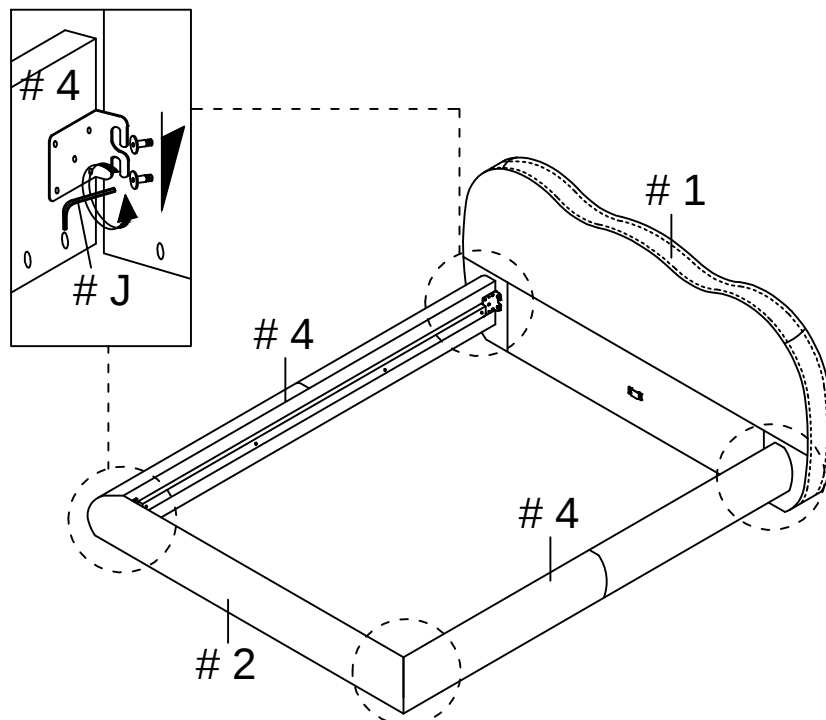


ASSEMBLY INSTRUCTIONS

3

Take out the vmb3191 (#8), bed leg (#9) first and using Spanner (#F).

- Part #3 x2pcs
 Part #8 x2pcs
 Part #9 x2pcs
 Hardware #F x1pc

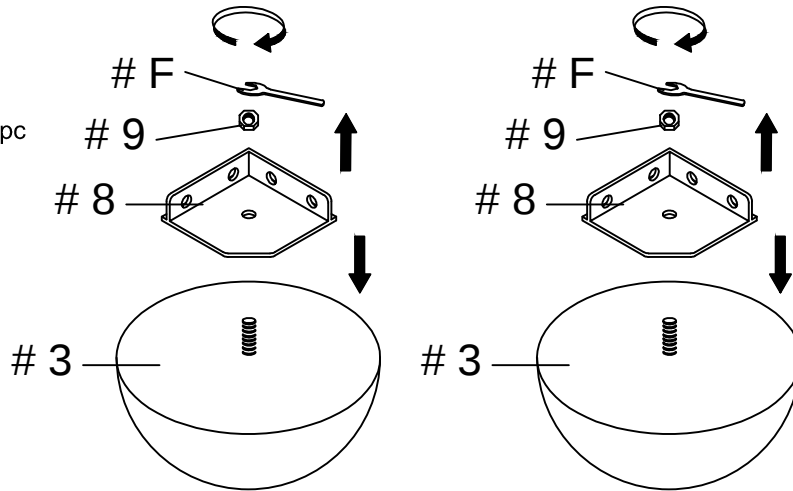


4



Attach the Vmb 3191 (#8) to the footboard (#2) and side rail (#4), secure by using bolt (#A) , flat washer (#B) and spring washer (#C) .

- Part #1 x1pc
 Part #2 x1pc
 Part #4 x2pcs
 Hardware #A x8pcs
 Hardware #B x8pcs
 Hardware #C x8pcs
 Hardware #I x1pc

4.1

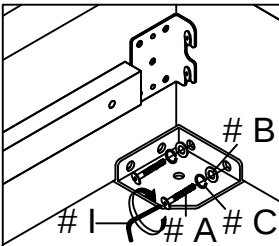

4.2

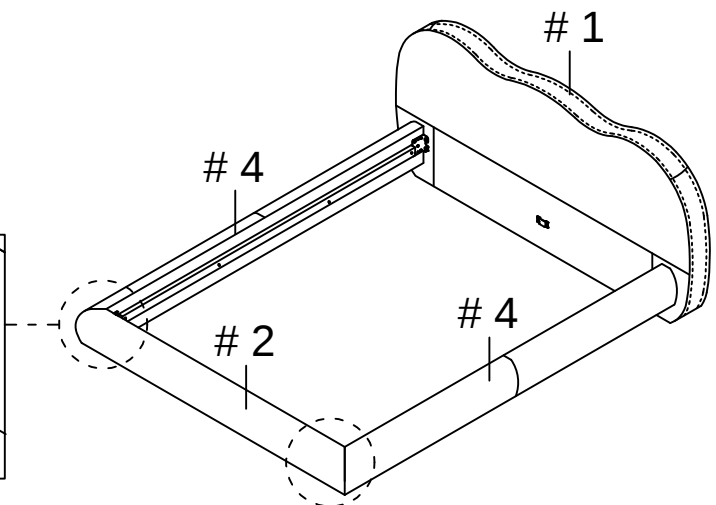
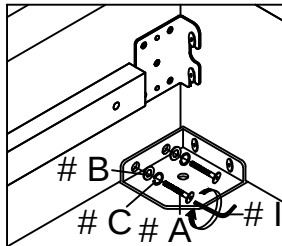


ASSEMBLY INSTRUCTIONS

5

- Part #2 x1pc
- Part #3 x2pcs
- Part #4 x2pcs
- Part #8 x2pcs
- Part #9 x2pcs
- Hardware #D x2pcs
- Hardware #E x2pcs
- Hardware #F x1pc


Attach the bed leg (#3) to the Vmb3191 (#8), secure by using flat washer (#D) and spring washer (#E), spanner (#F) and hex nut (#9).

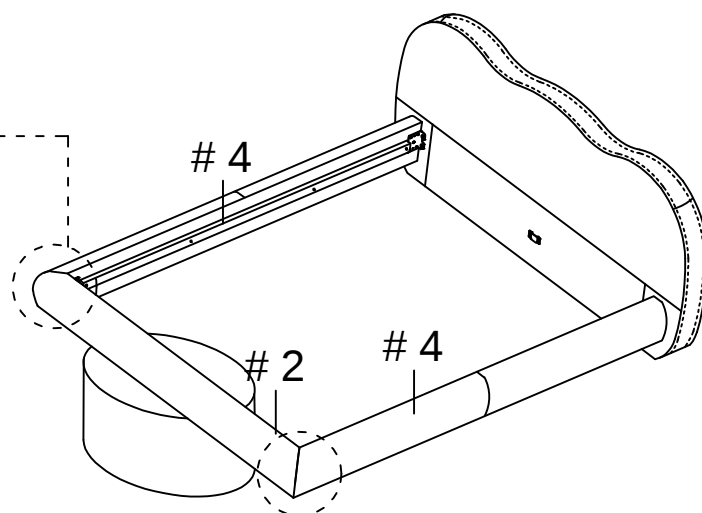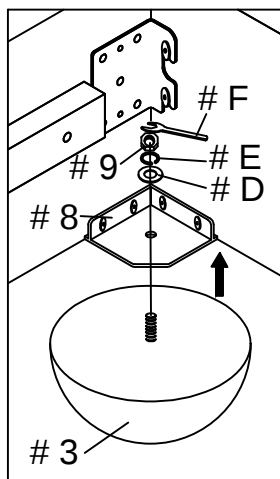

6

- Part #5 x1pc
- Part #6 x3pcs

Attach the support leg (#6) to the center rail (#5).

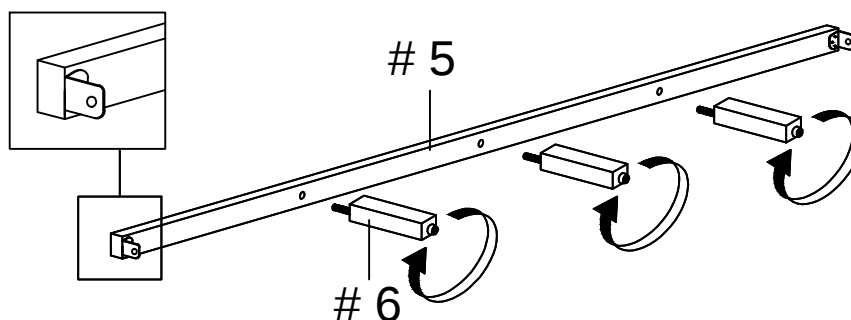


ASSEMBLY INSTRUCTIONS

7

Hook the center rail (#5) into the insert on the Headboard (#1) and the footboard (#2).


Part #1 x1pc
Part #2 x1pc
Part #5 x1pc
Hardware #G x2pcs

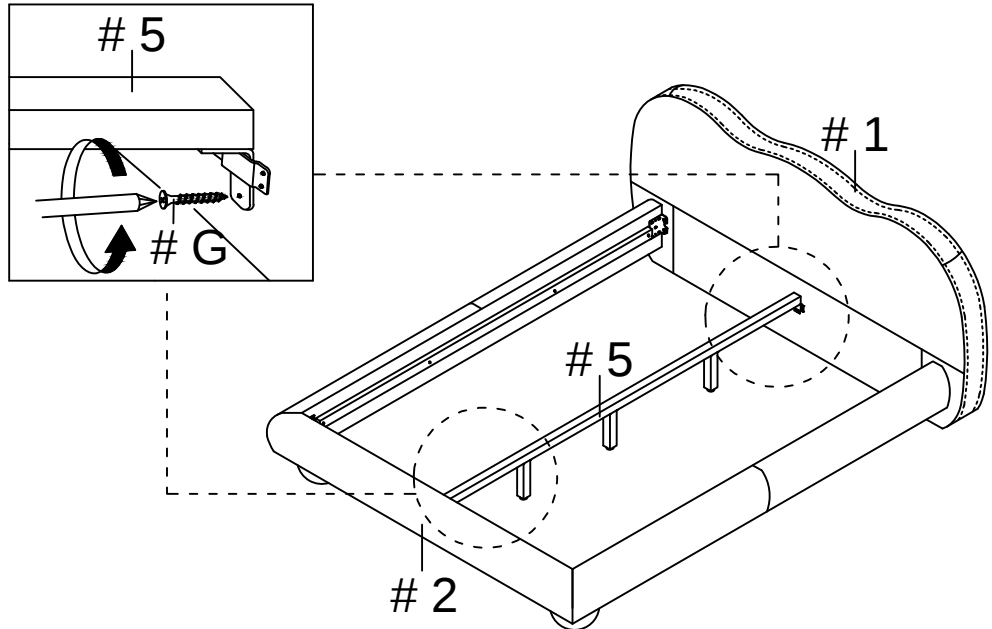

8


Spread slat set(#7) evenly over the rails (#4) and center rail (#5). Secure onto the side rails (#4) using Screw (#H).

Part #7 x1set
Hardware #H x9pcs

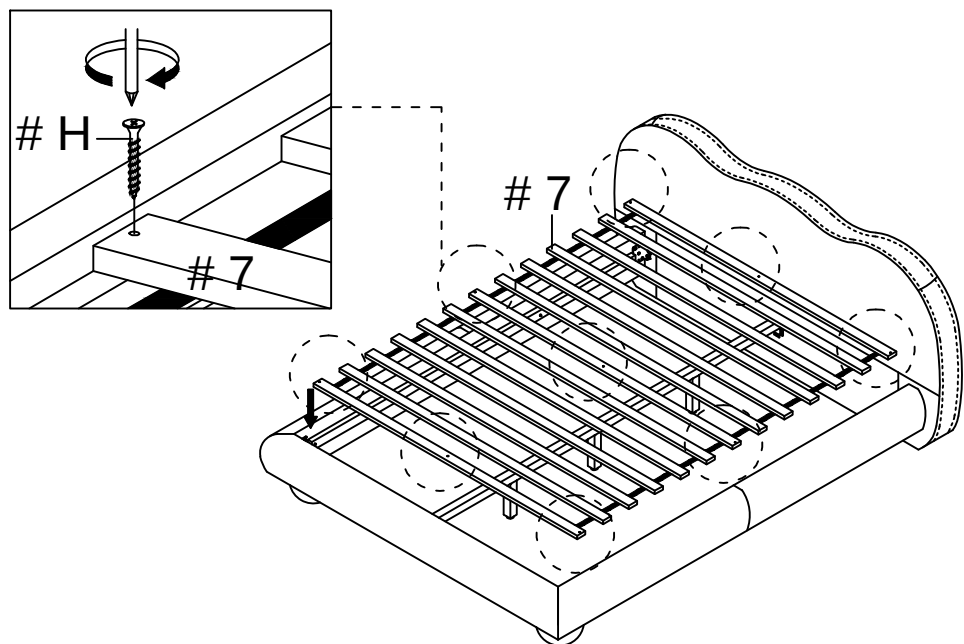

ASSEMBLY INSTRUCTIONS

9

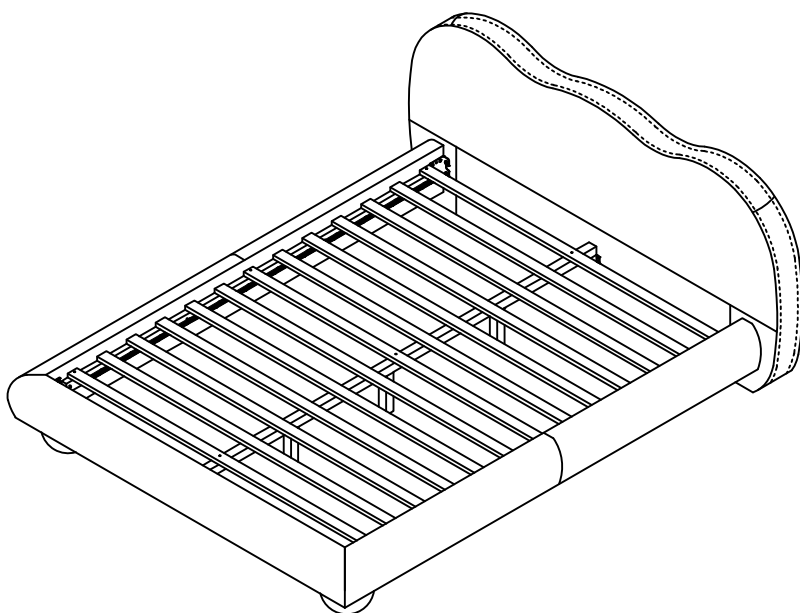

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

✓ Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.