


ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

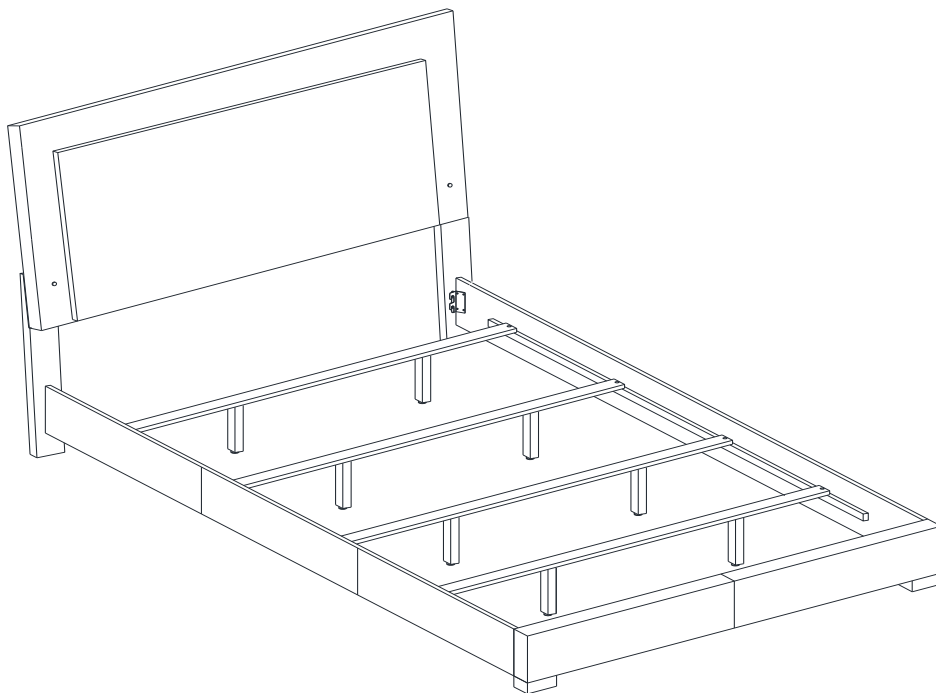

Fine Furniture for every stage of life

203500KW (B1&B2) ***California King Bed***

ITEM: 203500KW (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!



1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION

B1 (BOX 1)

A HEADBOARD PANEL




1PC

B RIGHT HEADBOARD
LEG



1PC

C LEFT HEADBOARD
LEG



1PC

B2 (BOX 2)

D BED SLAT




4PCS

E BED SLAT SUPPORT
WITH LEVELER



8PCS

F BED RAIL




2PCS

G FOOTBOARD LEG



2PCS

H FOOTBOARD PANEL




1PC

I ADAPTER PLUG



1PC

HB
203500KW (B1)
FROM BOX 1
HEADBOARD
COMPLETE

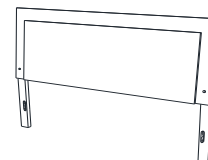

1PC

NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 203500KW (B1&B2)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.




WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 203500KW (B1)

1 **BOLT**
(M6 x 30mm - BLK)  6PCS

2 **SMALL ALLEN WRENCH**
(M4 x 60mm - BLK)  1PC


3 **FLAT WASHER**
(1/4" X 13mm - BLK)  6PCS

4 **LOCK WASHER**
(1/4" - BLK)  6PCS

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 203500KW (B2)

5 **SHORT FLAT HEAD SCREW**
(M4 x 32mm - RBW)  8PCS

6 **LONG FLAT HEAD SCREW**
(M4 x 50mm - RBW)  6PCS

7 **BOLT**
(M6 x 40mm - BLK)  8PCS

8 **SMALL ALLEN WRENCH**
(M4 x 60MM - BLK)  1PC

9 **BIG ALLEN WRENCH**
(M5 x 65MM - BLK)  1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 203500KW (B1&B2)




ASSEMBLY INSTRUCTIONS

STEP 1

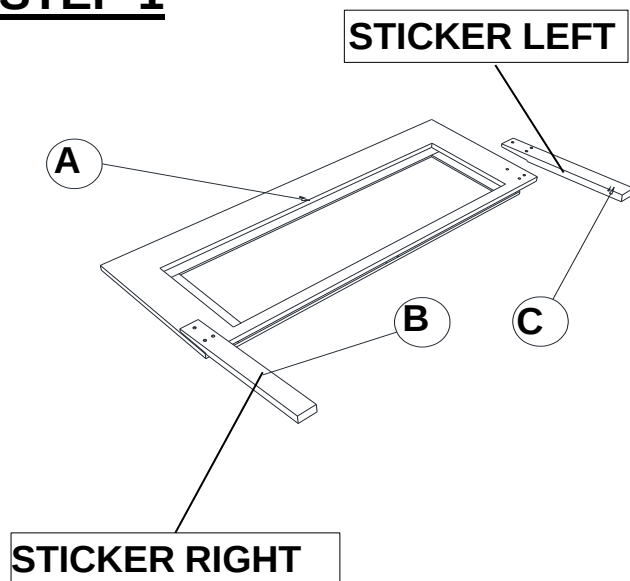


STEP 2

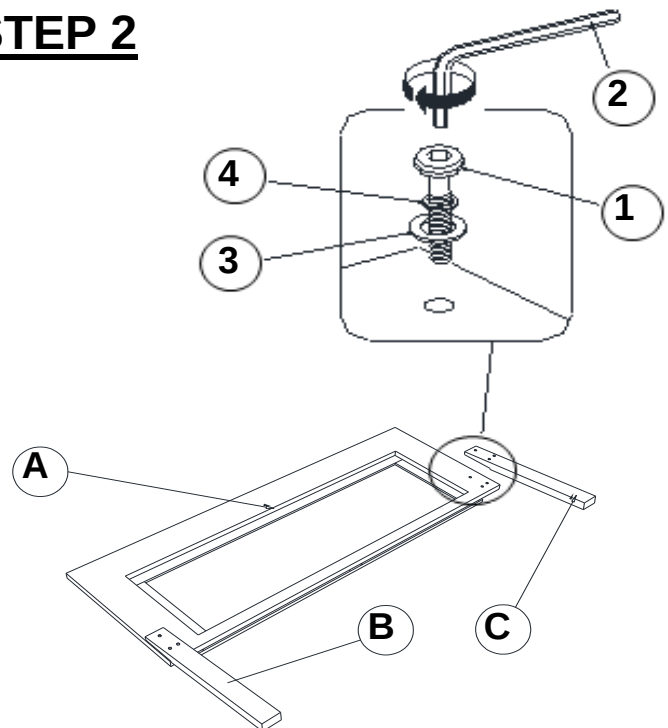

IF PURCHASE HEADBOARD ONLY, SKIP BELOW STEPS

STEP 3

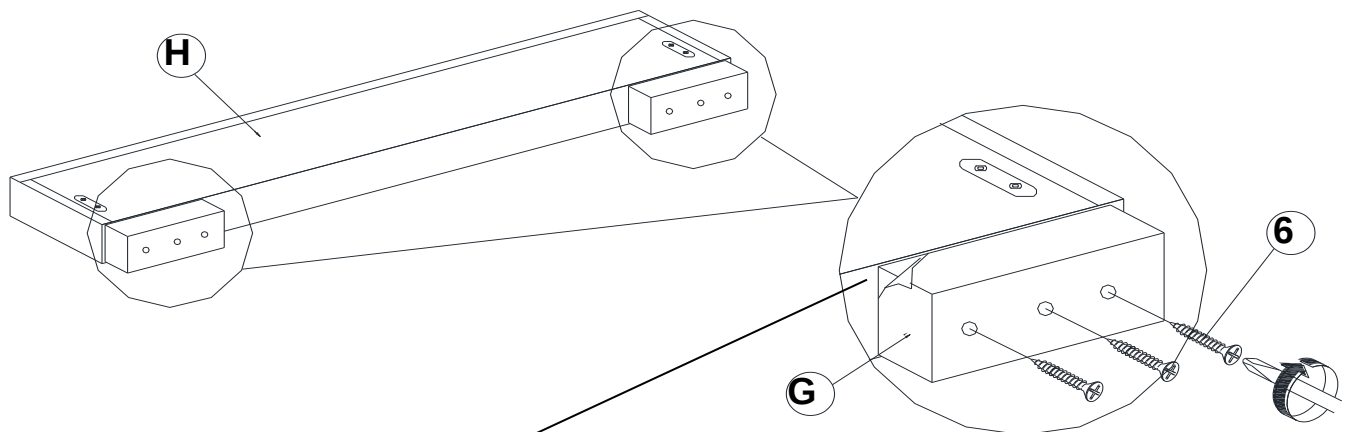


PLEASE REMOVE THE PROTECTIVE FILM BEFORE ASSEMBLY

ITEM: 203500KW (B1&B2)




ASSEMBLY INSTRUCTIONS


STEP 4

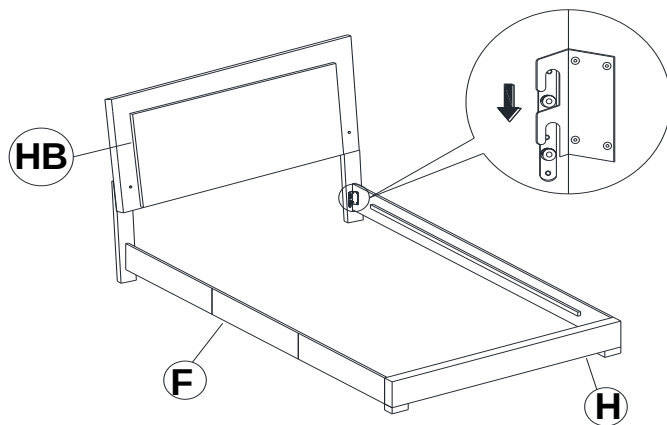


STEP 5

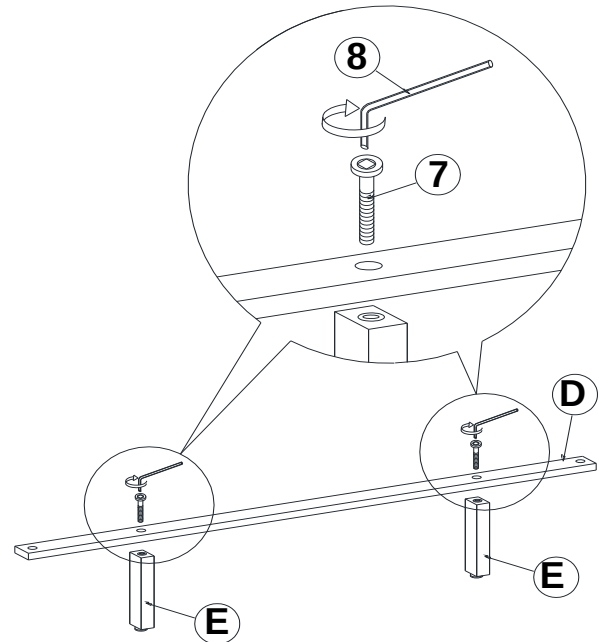

STEP 6

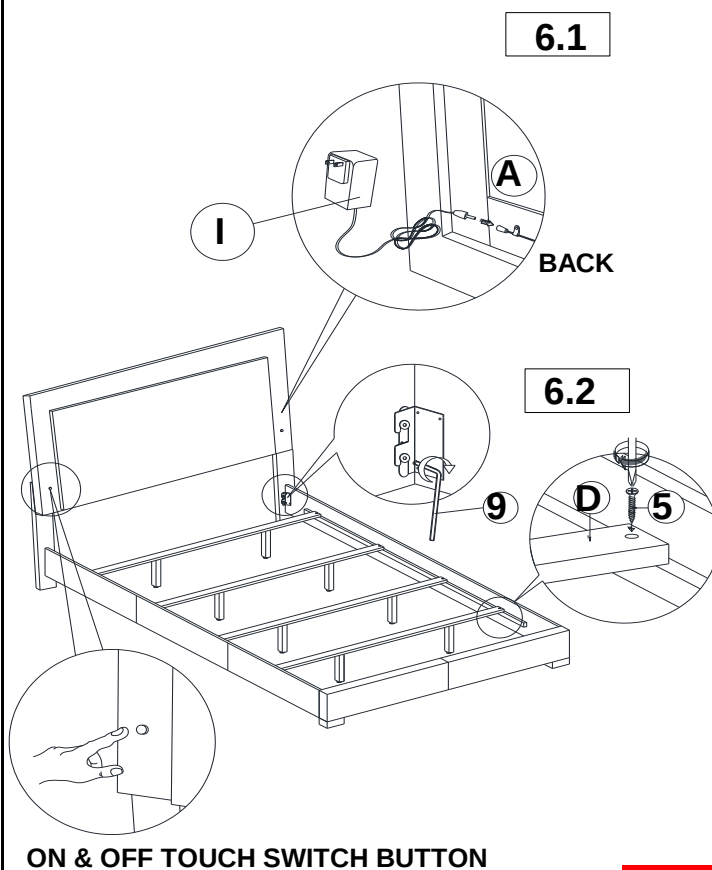


STEP 7 COMPLETE

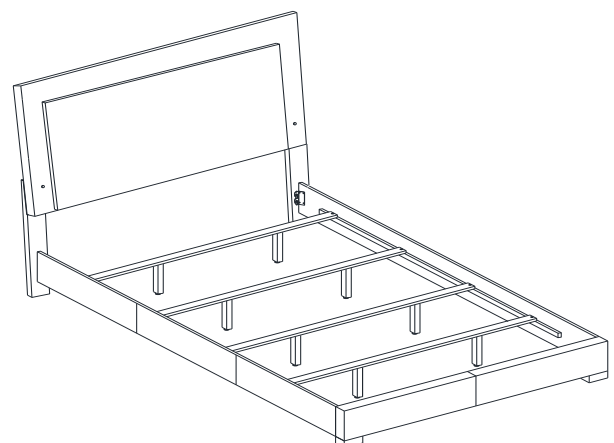

ITEM: 203500KW (B1&B2)



Inner Size : 72.75"W X 85.25"D

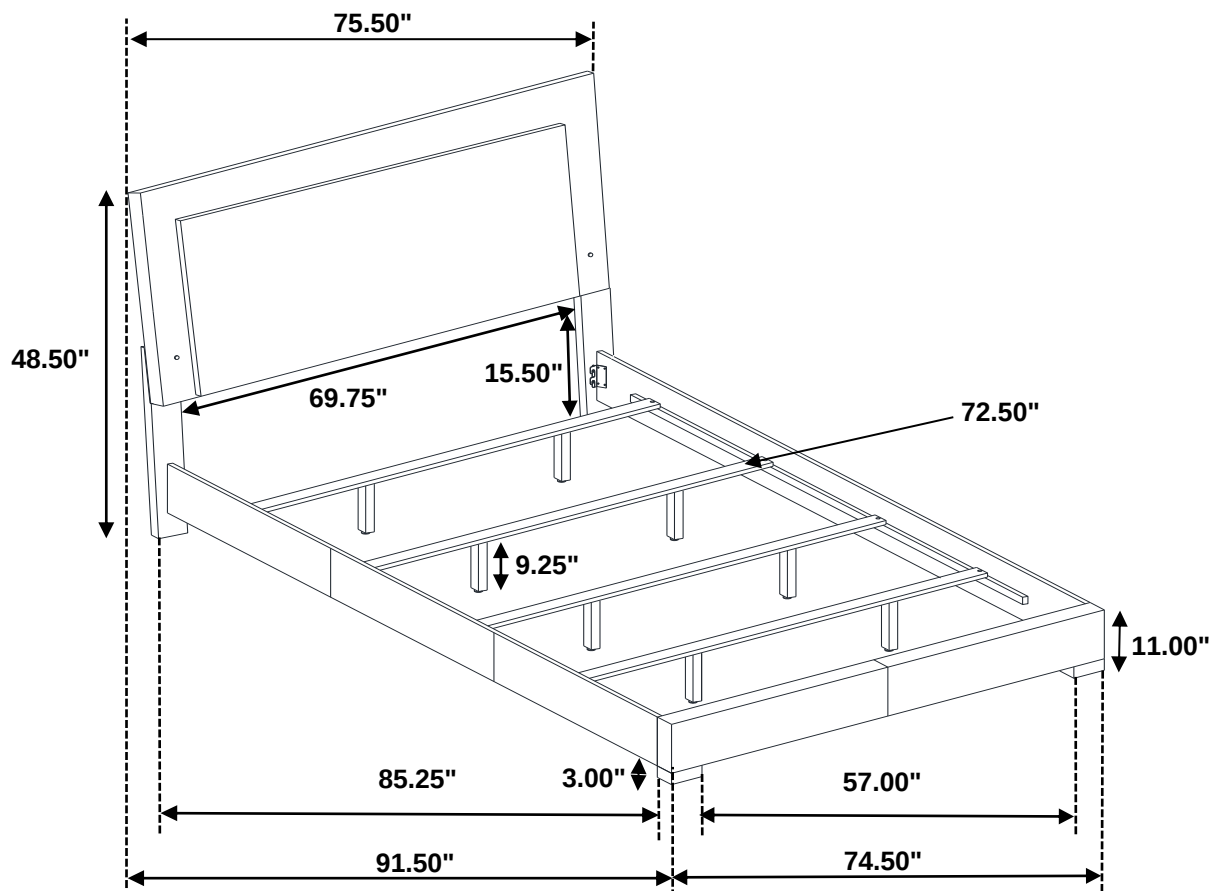

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

203502
Nightstand

ITEM: **203502**

ASSEMBLY INSTRUCTIONS




REMOVAL OF PROTECTIVE FILM



ITEM: **203502**



Inner Size of Drawer : 20.00"W x 12.50"D x 5.00"H x 0.25"T

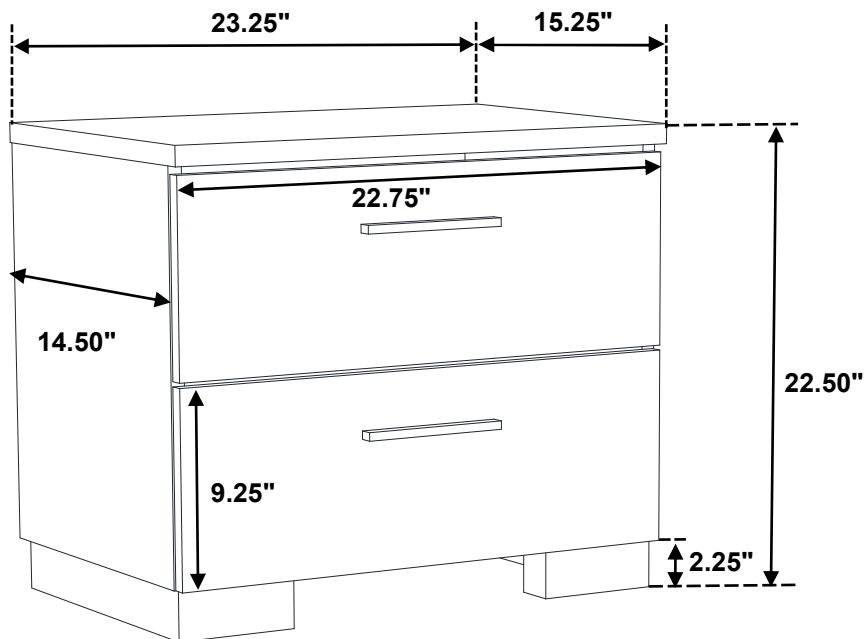

Note : Dimension tolerance $\pm$ 5%



ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life

203503
Dresser

REVISION 0 : 05/16/2014
REVISION 1 : 05/27/2014
REVISION 2 : 07/26/2019

PAGE 1 OF 2


COASTERFURNITURE.COM

ITEM: **203503**

ASSEMBLY INSTRUCTIONS



REMOVAL OF PROTECTIVE FILM

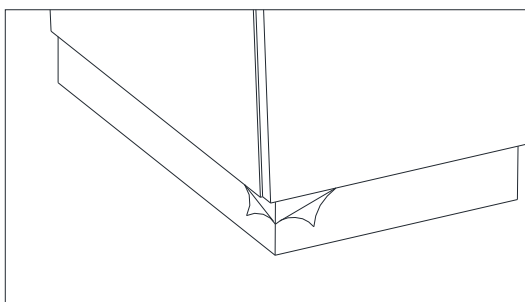


**PLEASE REMOVE THE
PROTECTIVE FILM
BEFORE USE**



ITEM: **203503**




Inner Size of Drawer : 28.75"W x 12.50"D x 5.00"H x 0.25"T

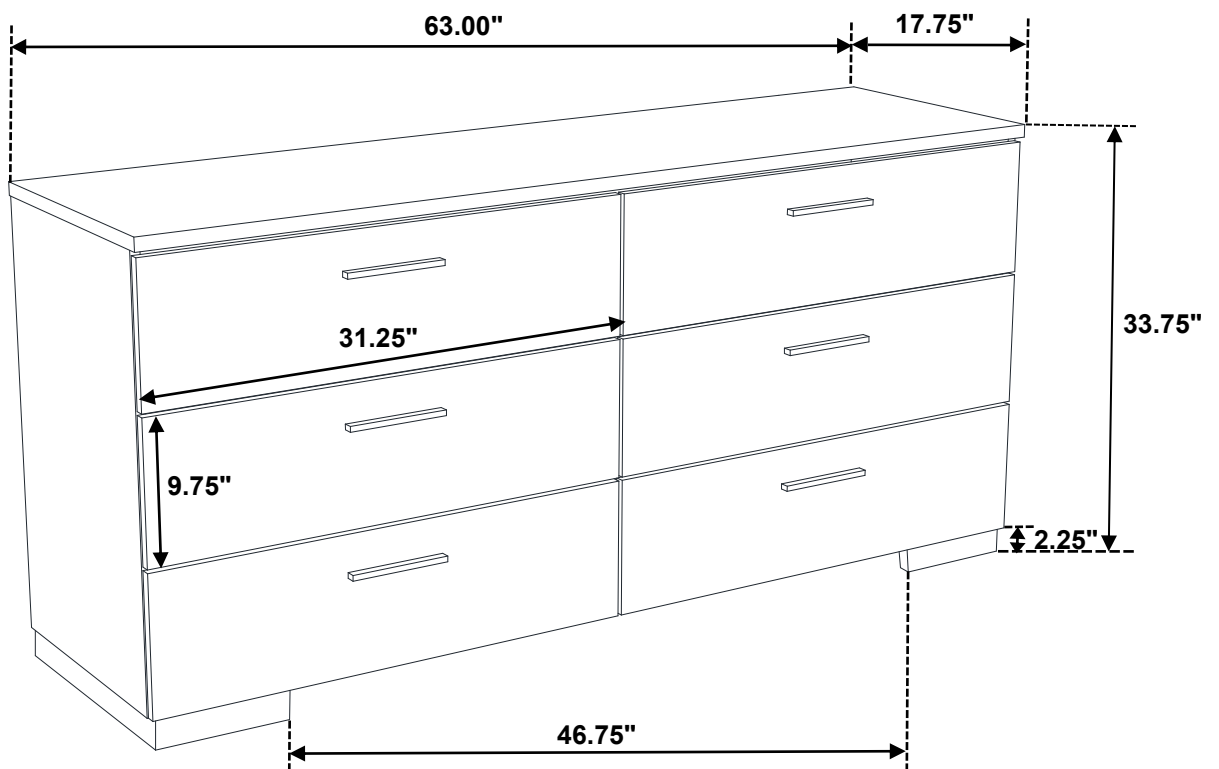

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE

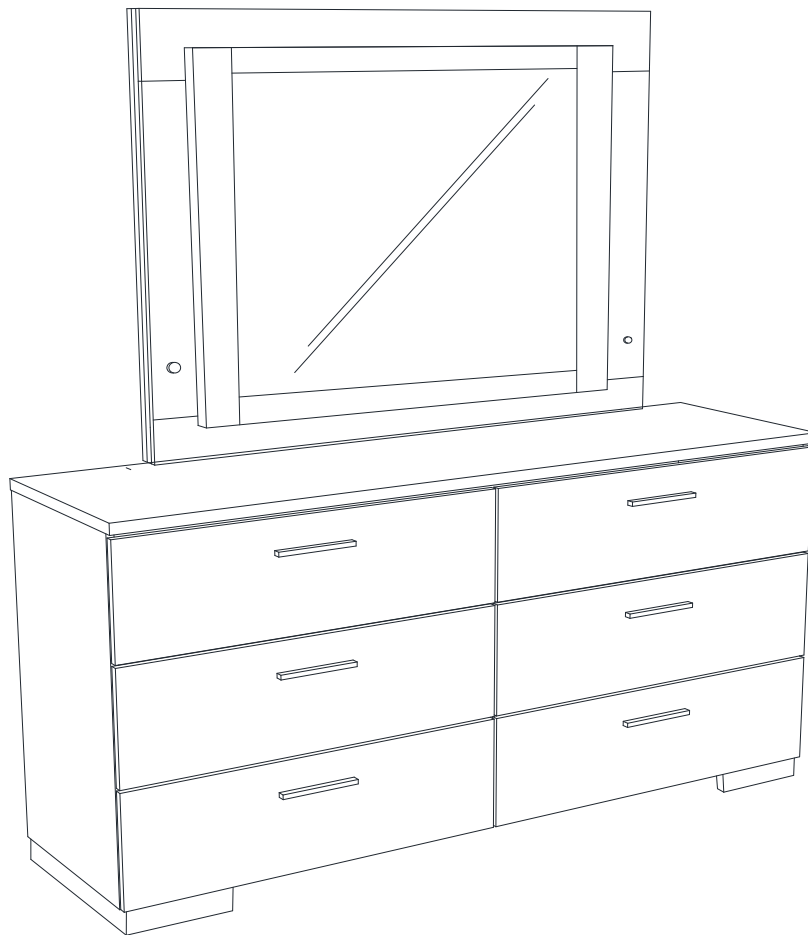

Fine Furniture for every stage of life

203504LED
LED Mirror

ITEM: **203504LED**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME


10 MINUTES

PARTS IDENTIFICATION

A

MIRROR

1PC

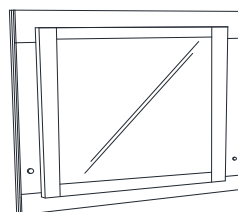

B

DRESSER
FROM BOX ITEM # 203503


1PC



C

MIRROR SUPPORT
(PACK WITH DRESSER)

2PCS



D

ADAPTER PLUG

1PC



HARDWARE IDENTIFICATION

1

FLAT HEAD SCREW
(M4 x 32mm - RBW)

10PCS



NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: **203504LED**




ASSEMBLY INSTRUCTIONS

STEP 1

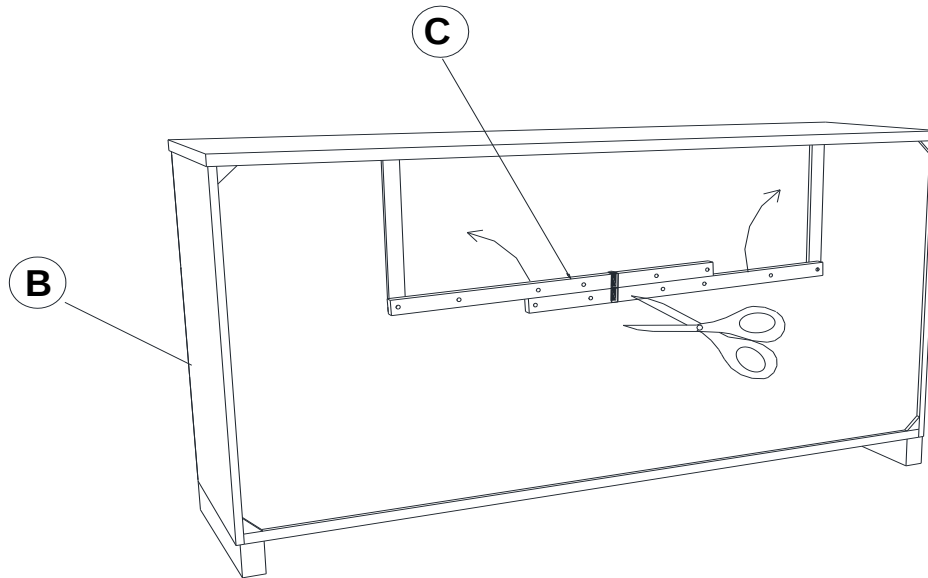

STEP 2

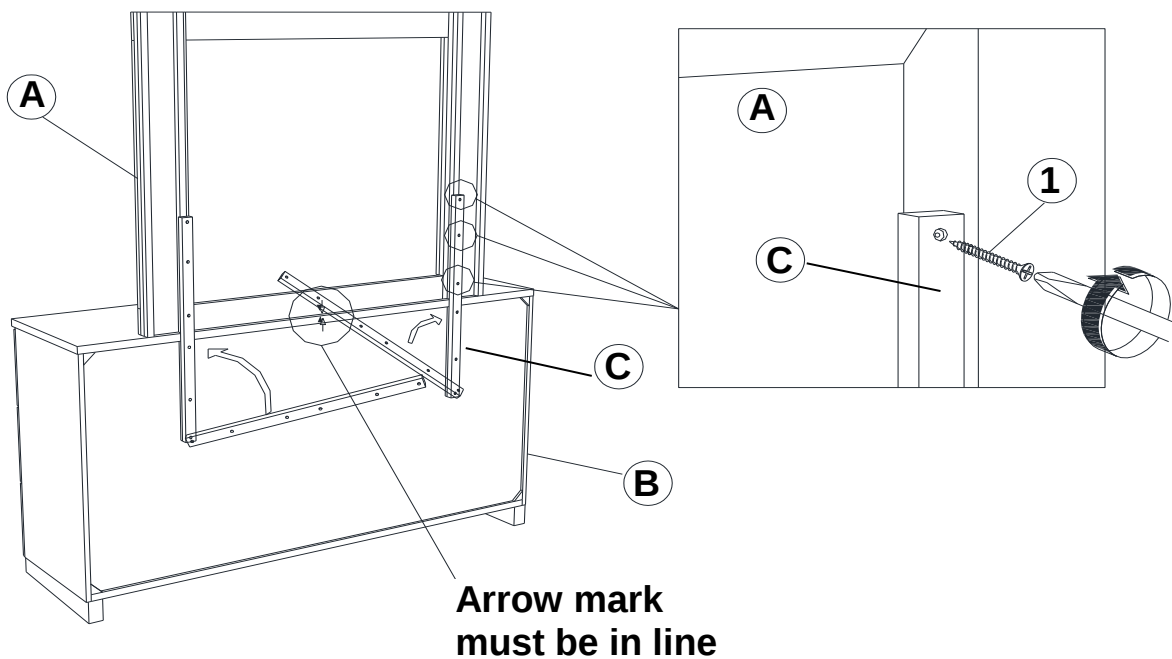


****BACK VIEW**

ITEM: **203504LED**



ASSEMBLY INSTRUCTIONS


STEP 3

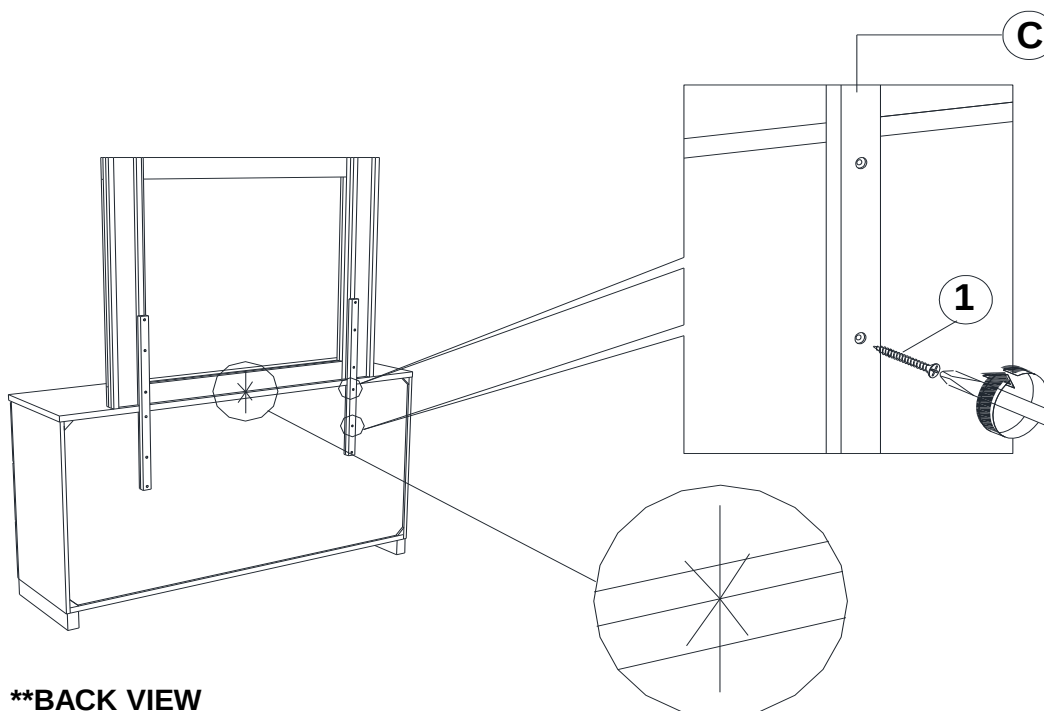

Arrow Marking Must Be Aligned

STEP 4


COMPLETE

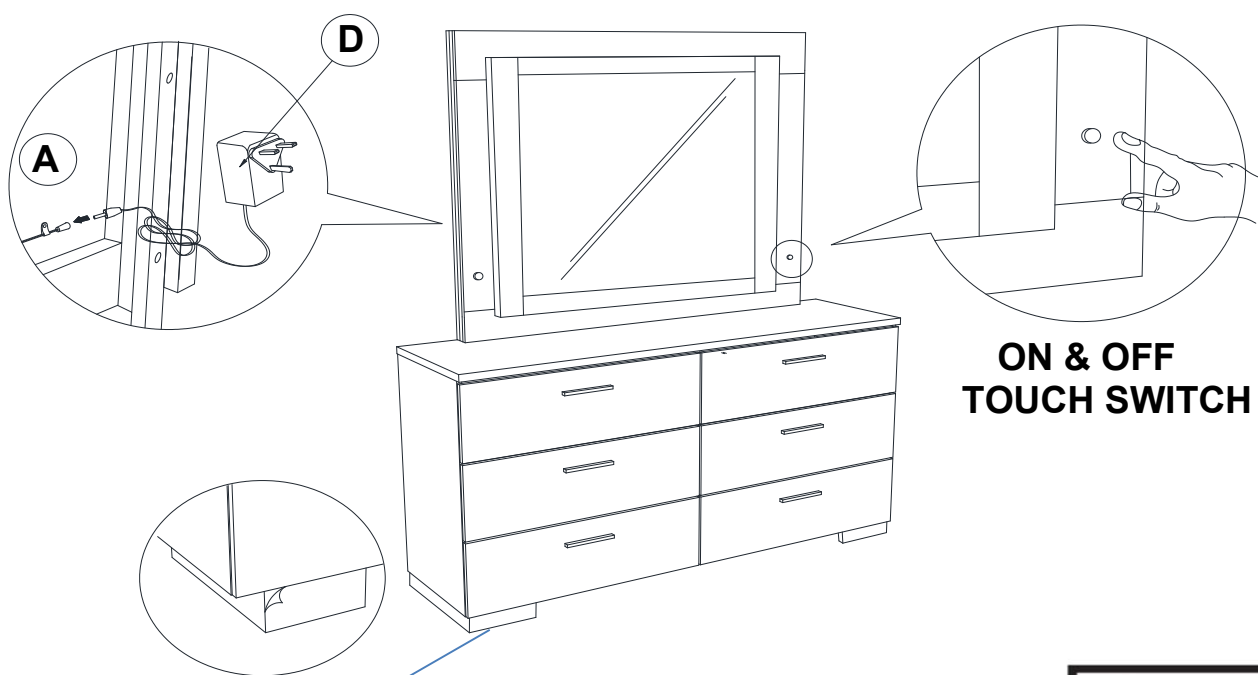

**PLEASE REMOVE THE
PROTECTIVE FILM BEFORE USE**



ITEM: **203504LED**

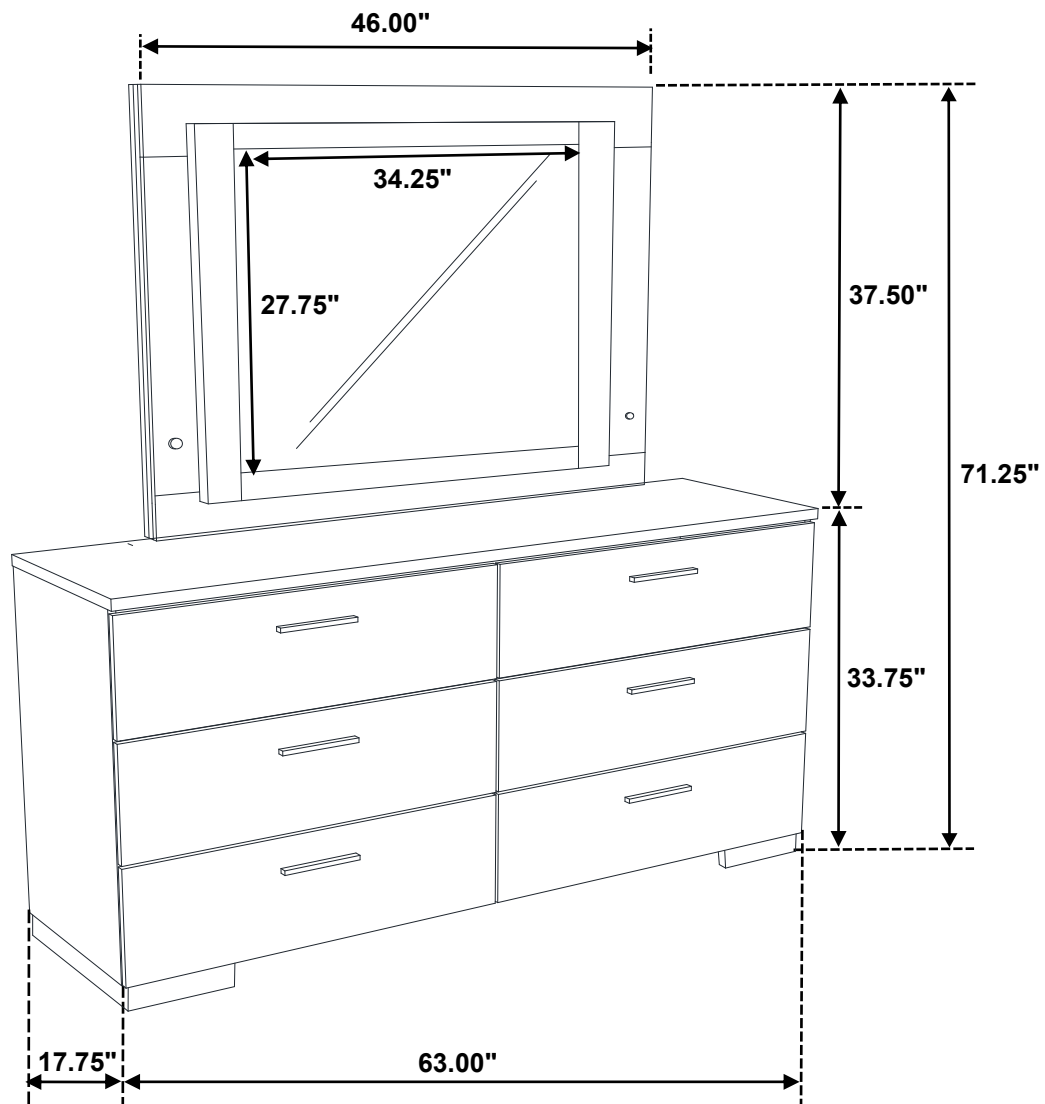

Note : Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE



Fine Furniture for every stage of life


203505
Chest

ITEM: **203505**

ASSEMBLY INSTRUCTIONS



REMOVAL OF PROTECTIVE FILM

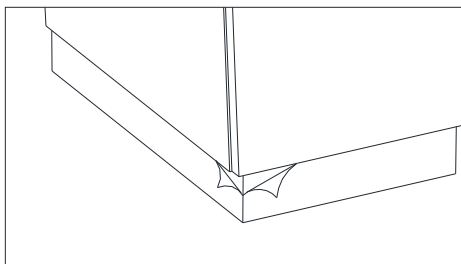


**PLEASE REMOVE THE
PROTECTIVE FILM
BEFORE USE**



ITEM: **203505**



Inner Size of Drawer : 32.00"W x 12.50"D x 5.00"H x 0.25"T

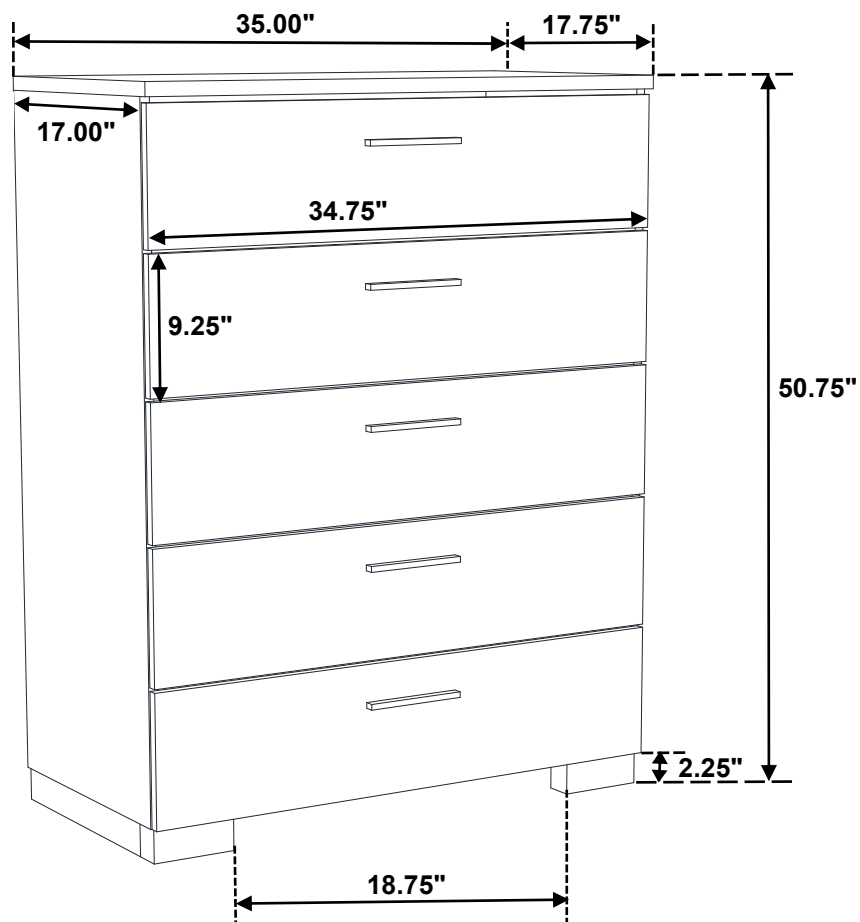

Note : Dimension tolerance $\pm 5\%$