ASSEMBLY INSTRUCTIONS
ITEM #: B451-24-09 MIRROR



Thank you for purchasing this product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Before You Assemble: Please read all instructions carefully before beginning assembly.

It is recommended that 2 people work together during assembly to prevent personal injury and to ensure that heavy or cumbersome parts are not damaged during the process.

CAUTION: For your safety, this product requires two people to lift.


PARTS LIST:

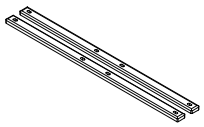NO	DESCRIPTION	SKETCH	QTY
A	DRESSER		1PC
B	MIRROR		1PC
C	DRESSER ATTACHMENT		2PCS

HARDWARE PACKAGE: B325-24-HDWR

NO	DESCRIPTION	SKETCH	SIZE	QTY
1	Allen key		4*59*23mm	1 pc
2	Bolt		Ø1/4*40mm	8 pcs
3	Spring Washer		Ø1/4	8 pcs
4	Flat Washer		Ø1/4*19mm	8 pcs


HARDWARE PACKAGE:

NO	DESCRIPTION	SKETCH	SIZE	QTY
5	Tipping Restraint kit			1 pc


TOOLS REQUIRED (NOT PROVIDED):

PHILLIPS SCREWDRIVER



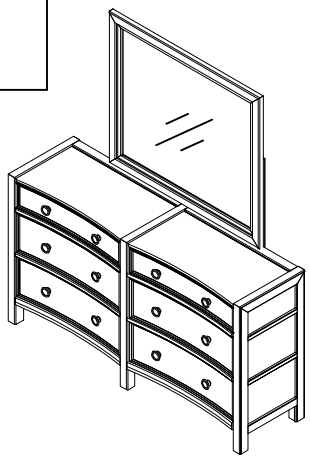


STEP 1 Attach the Mirror(B) with dresser attachment (C) insert space to the Dresser (A) by using allen key (1), bolts (2),spring washer (3) and flat washer (4) .

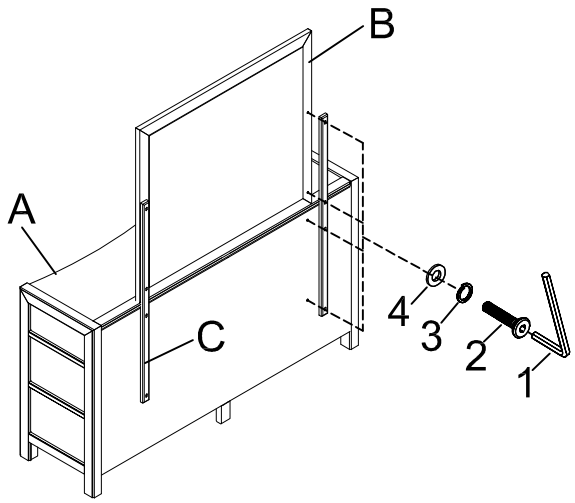

STEP 2 Attach Anti-tipping hardware

NOTE : Anti-tipping hardware kit comes with this product. Please refer to the installation instruction in the hardware pack

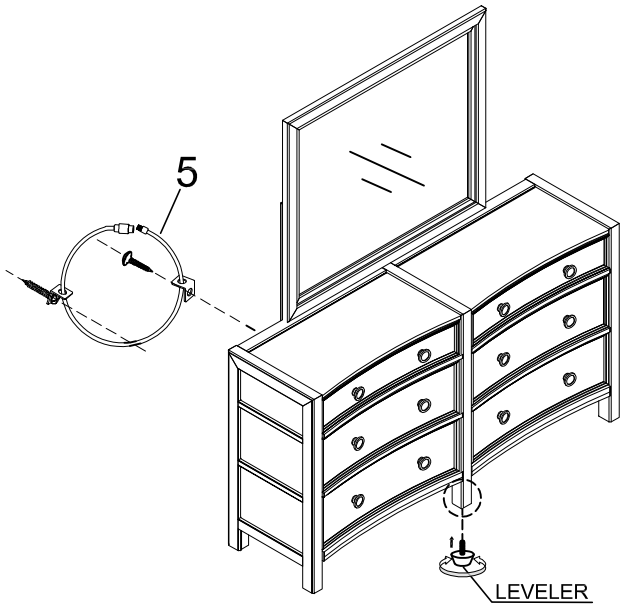

MADE IN VIETNAM