




ASSEMBLY INSTRUCTIONS

COASTER FINE FURNITURE

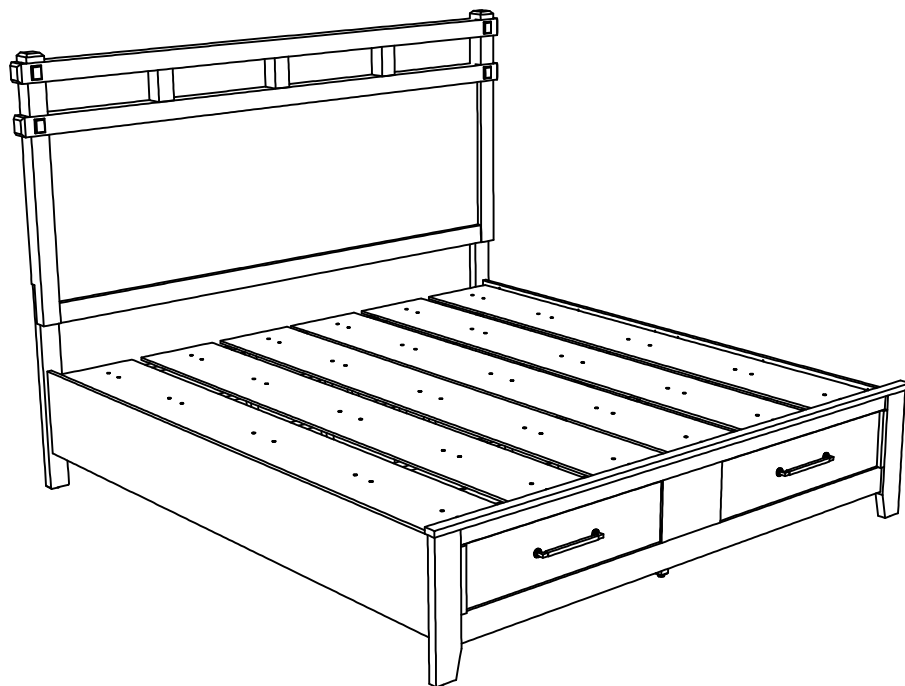

Fine Furniture for every stage of life

207530KE (B1-B3)

Eastern King Storage Bed

ITEM: 207530KE (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

20 MINUTES

PARTS IDENTIFICATION


B1 (BOX 1)

A HEADBOARD

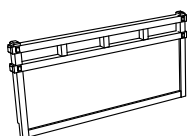

1PC

B FOOTBOARD
FRAME



1PC

C LEFT
HEADBOARD LEG



1PC


D RIGHT
HEADBOARD LEG



1PC


B2 (BOX 2)

E BED RAIL




2PCS

F BED SLAT WITH
1 HOLE




1PC

G BED SLAT WITH
MARKING



2PCS

H BED SLAT WITH
2 HOLE




2PCS

I CONCEAL
PANEL



6PCS

J DRAWER SUPPORT
SLAT



1PC

K DRAWER
SUPPORT RAIL



2PCS

L BED SLAT SUPPORT
WITH LEVELER



9PCS


M DRAWER SUPPORT
SLAT LEG WITH
LEVELER



1PC

B3 (BOX 3)

N DRAWER BOX



2PCS

ITEM: 207530KE (B1-B3)



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.

HARDWARE IDENTIFICATION

Z-B1 (BOX 1) - HARDWARE PACK IS LOCATED IN 207530KE (B1)

1	BOLT (M6 x 35mm - BLK)		6PCS	3	FLAT WASHER (1/4"ID x 13mm - BLK)		6PCS
2	LOCK WASHER (1/4" - BLK)		6PCS	4	ALLEN WRENCH (M4 x 65mm - BLK)		1PC

Z-B2 (BOX 2) - HARDWARE PACK IS LOCATED IN 207530KE (B2)

5	FLAT HEAD SCREW (M4 x 32mm - RBW)		14PCS	9	LOCK WASHER (1/4" - BLK)		2PCS
6	PAN HEAD SCREW (M3.5 x 20mm - BLK)		30PCS	10	FLAT WASHER (1/4"ID x 13mm - BLK)		2PCS
7	SHORT BOLT (M6 x 35mm - BLK)		2PCS	11	SMALL ALLEN WRENCH (M4 x 65mm - BLK)		1PC
8	LONG BOLT (M6 x 50mm - BLK)		10PCS	12	BIG ALLEN WRENCH (M5 x 65mm - BLK)		1PC

NOTE:


Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.

ITEM: 207530KE (B1-B3)

ASSEMBLY INSTRUCTIONS




STEP 1

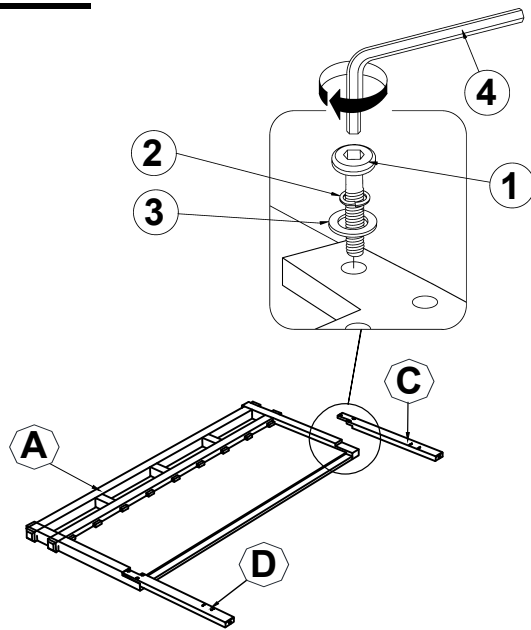


****BACK VIEW****

Note : Please take note of the marking sticker (L&R) on the leg.


STEP 2

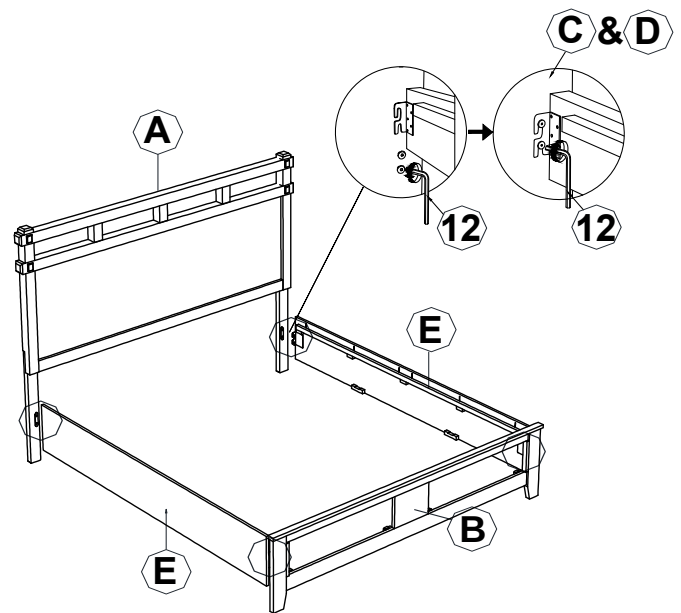

STEP 3

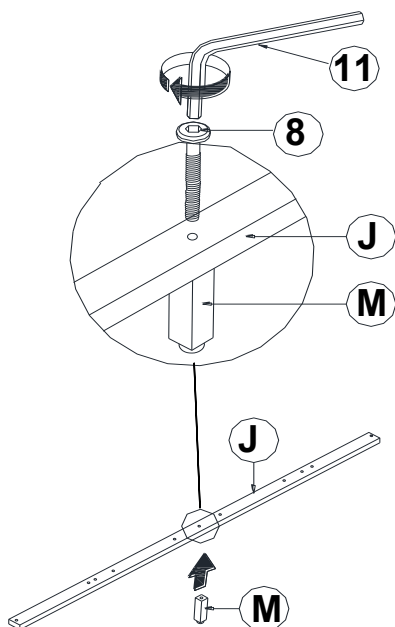

STEP 4

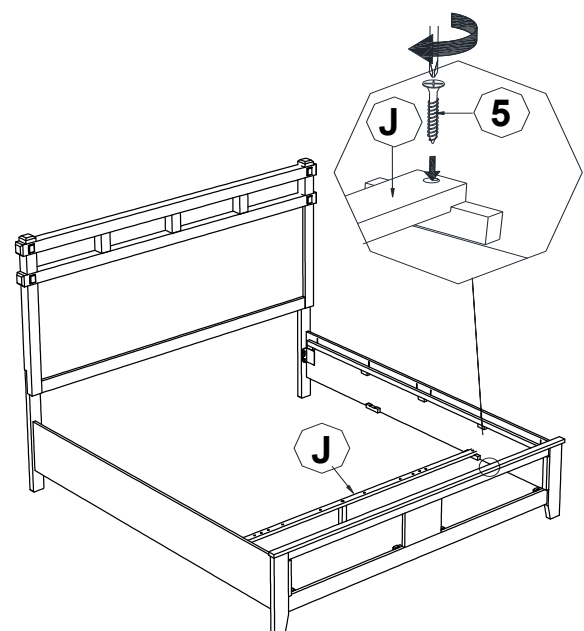


ITEM: 207530KE (B1-B3)


ASSEMBLY INSTRUCTIONS




STEP 5

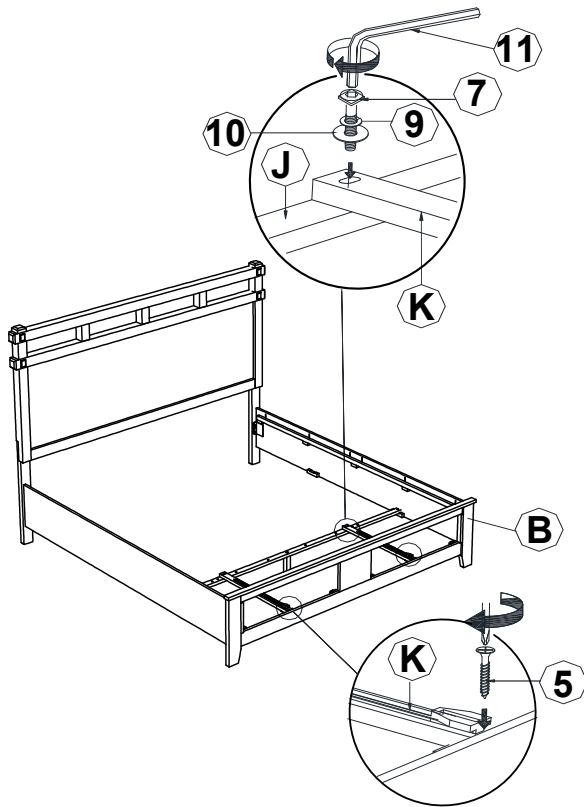


STEP 6

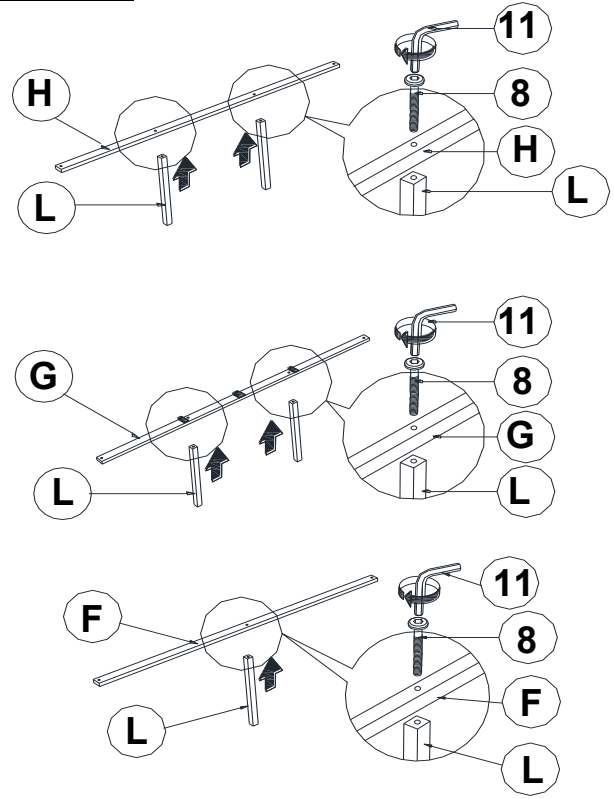

STEP 7

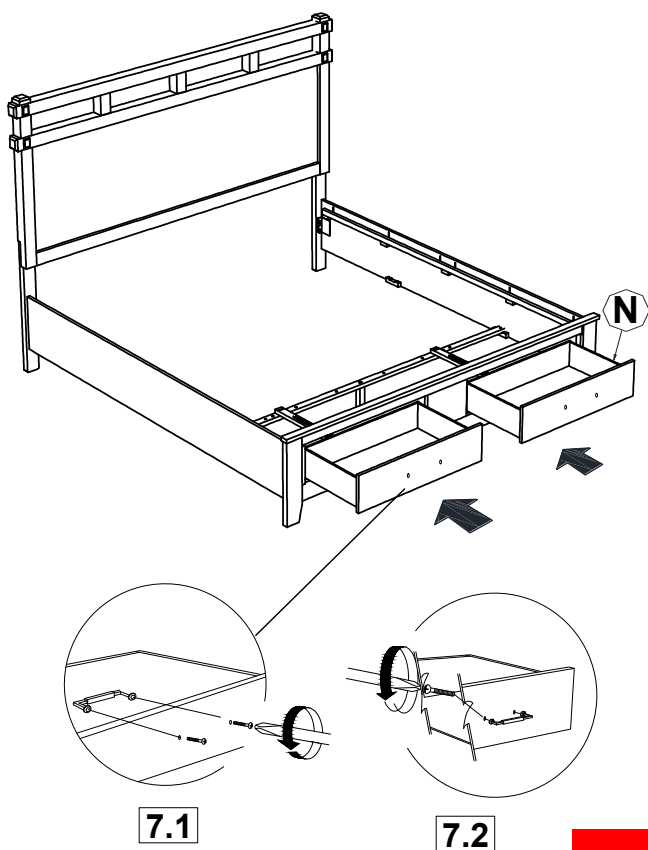

STEP 8

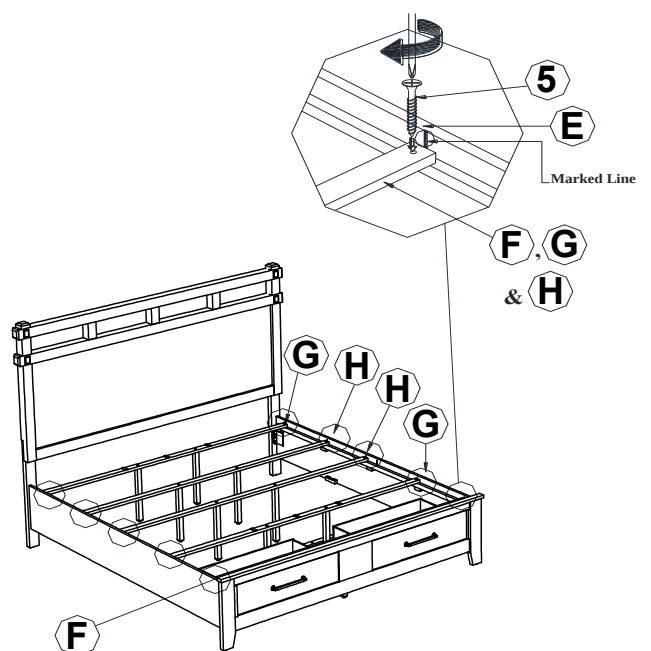


ITEM: 207530KE (B1-B3)


ASSEMBLY INSTRUCTIONS




STEP 9

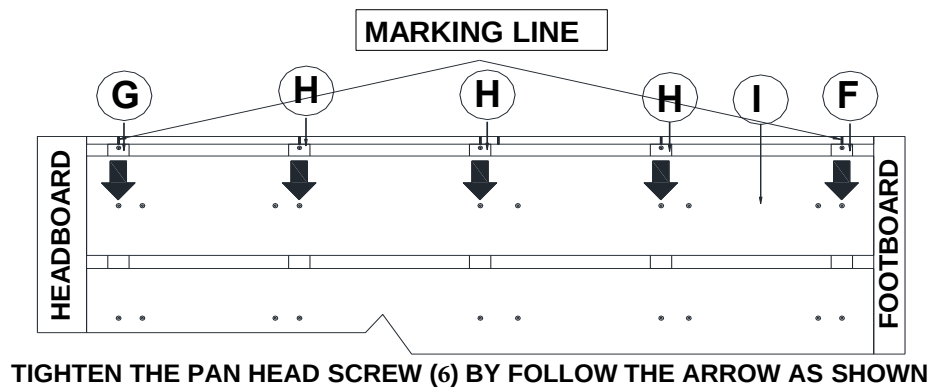

TIGHTEN THE PAN HEAD SCREW (6) BY FOLLOW THE ARROW AS SHOWN

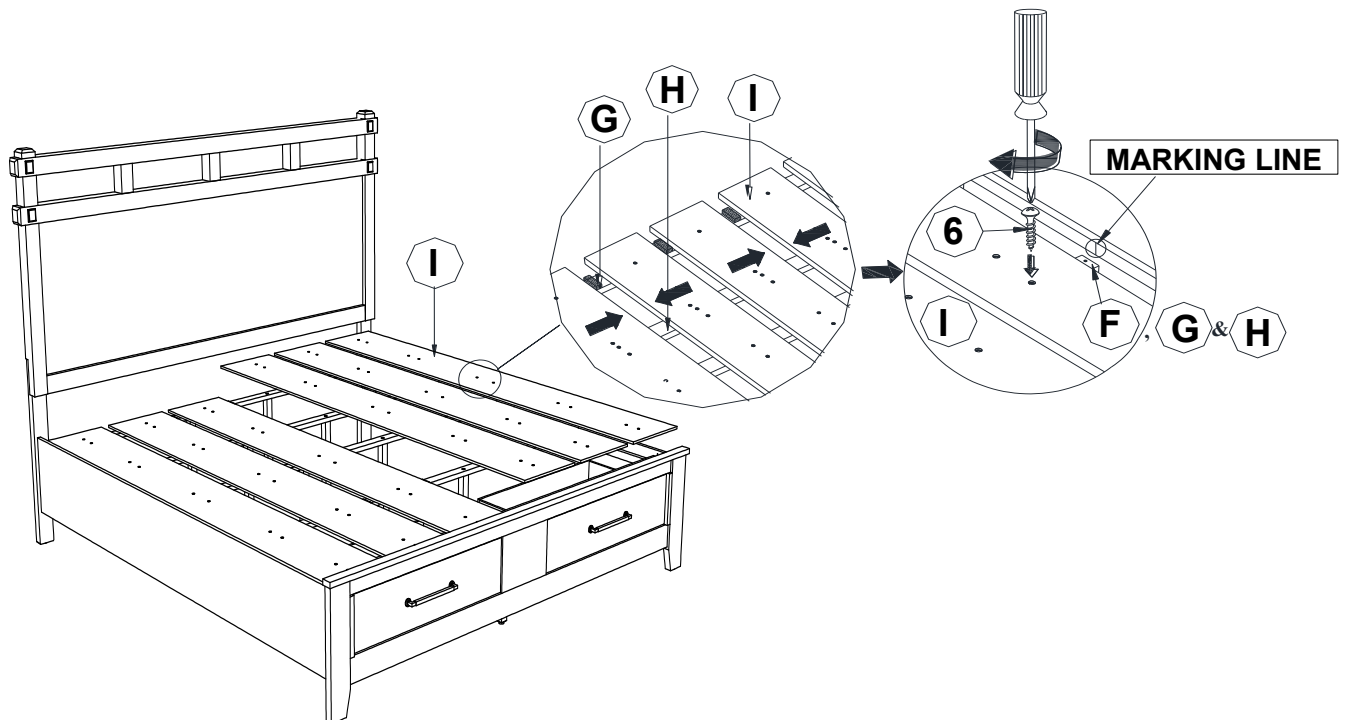

STEP 10 COMPLETE

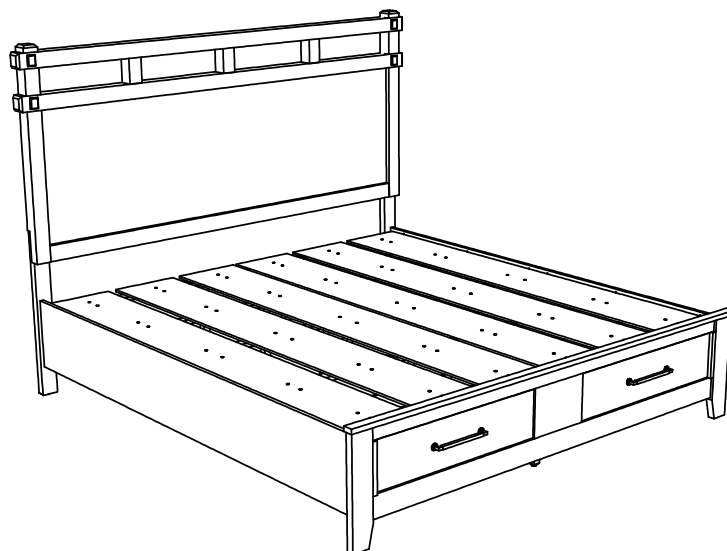


ITEM: 207530KE (B1-B3)




Inner Size of Bed: 77.00"W X 81.00"D

Inner Size of Drawer : 27.25"W X 15.00"D X 5.25"H X 0.25"T

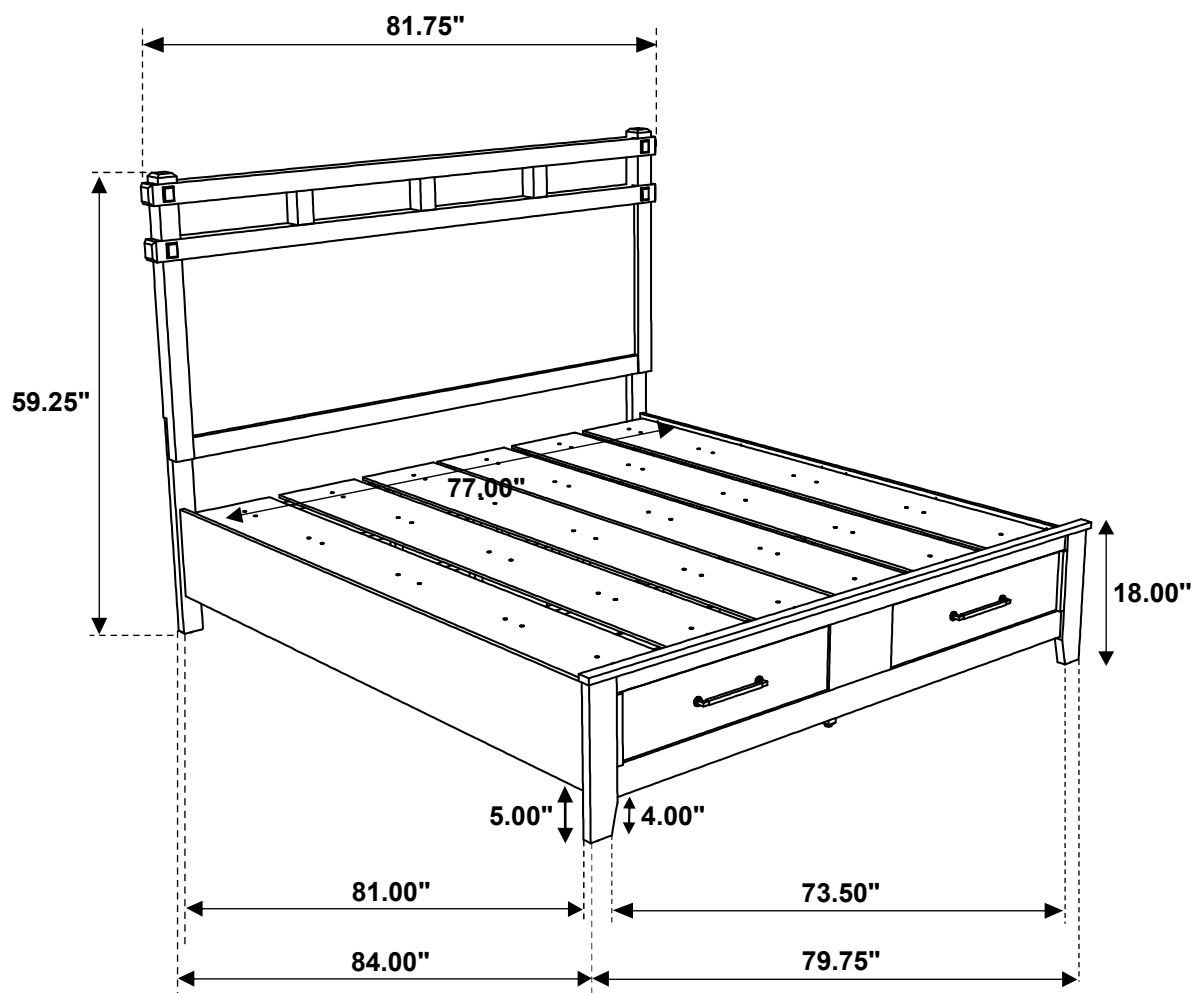

Note: Dimension tolerance $\pm 5\%$

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE

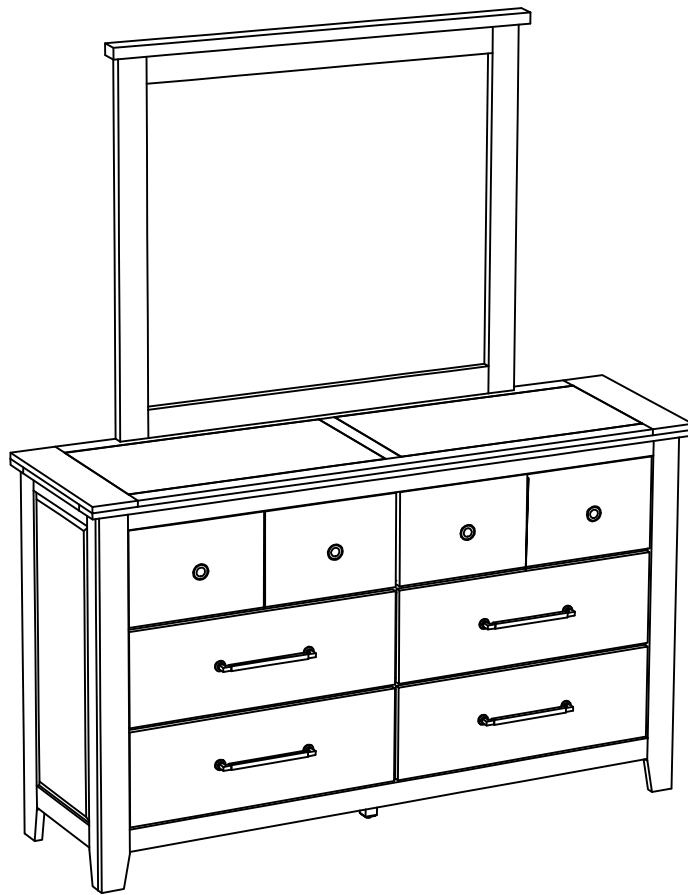

Fine Furniture for every stage of life

207534
Mirror

ITEM: **207534**



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.




ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A MIRROR

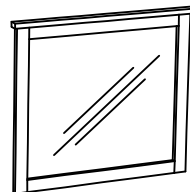

1PC

B DRESSER FROM
BOX ITEM #207533



1PC

C MIRROR SUPPORT
(PACK WITH DRESSER)



2PCS

HARDWARE IDENTIFICATION

1 FLAT HEAD SCREW
(M4 x 32mm - RBW)



10PCS


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **207534**

ASSEMBLY INSTRUCTIONS


STEP 1

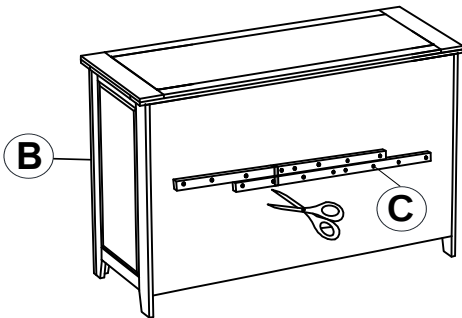


STEP 2

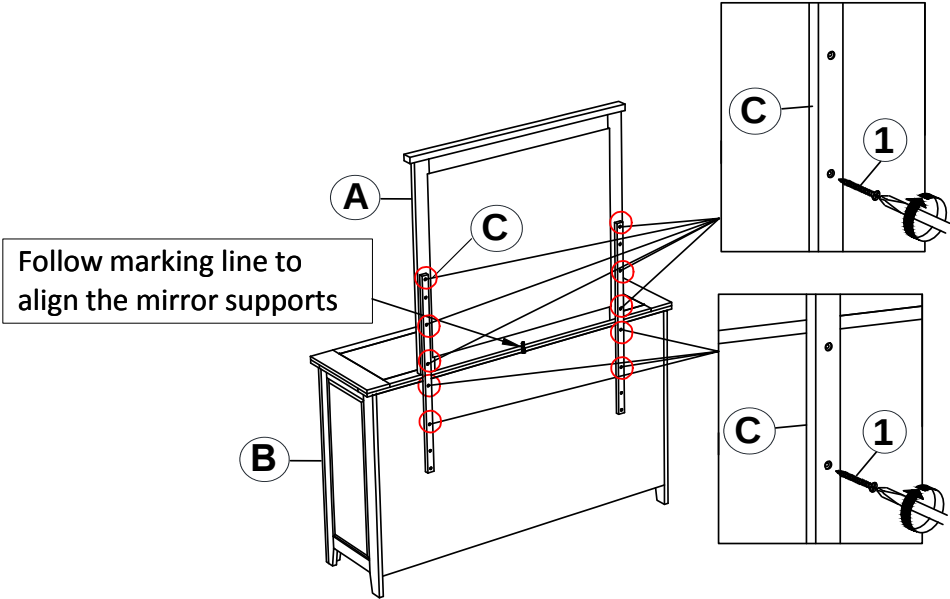

STEP 3
COMPLETE

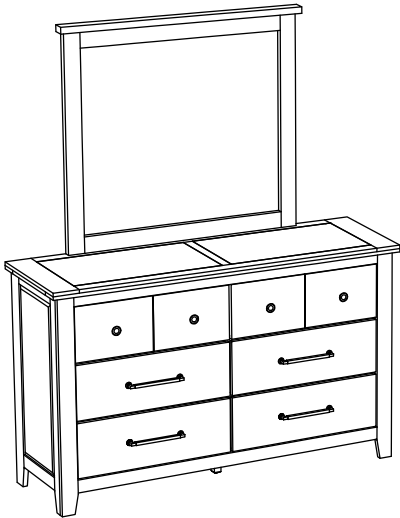

ITEM: **207534**

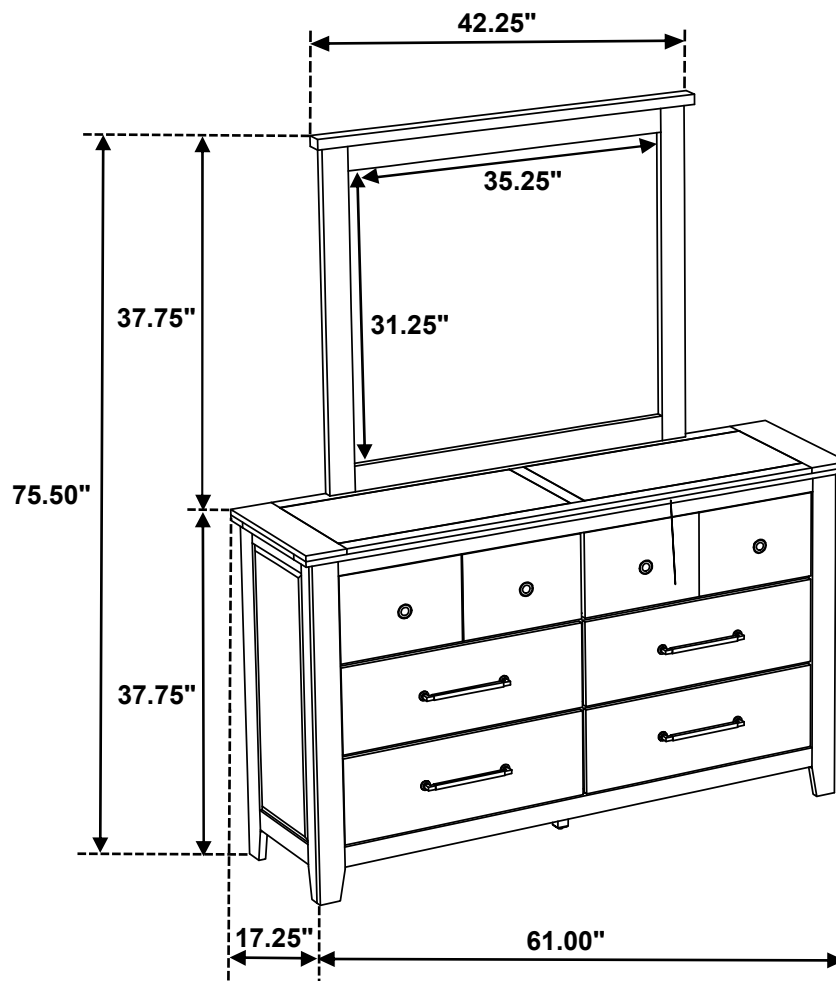

Note : Dimension tolerance $\pm 5\%$