

MODEL#

FM7670Q

Questions?

GIVE US CALL: 1-888-980-5122 MON-FRI 8:30AM - 5:30PM (PT)

TOOLS REQUIRED



Allen Wrench

(Included)



Phillips Screwdriver

(Not Included)




2 - People Recommended

ASSEMBLY RATING



EASY ---- DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.

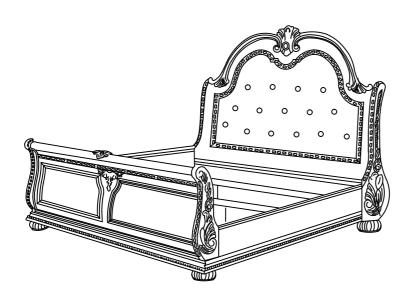

VERSION #24-04-12





Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday - Friday 8:30 AM - 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline Toll-Free 1-888-980-5122



WEBSITE www.foagroup.com











Monday to Friday 8:30AM- 5:30PM (PST)



E-MAIL cs.ec@foagroup.com



FurnitureOfAmerica



Are you missing anything? Double-check all parts, hardware and accessories listed on Page 6 are accounted for.	Check out our Quick Tips! We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!
Should we send any replacements? Are there any irregularities or flaws in the parts? We can send replacements!	Prep Time! Please review the assembly instructions and all diagrams prior to assembling. Set up your workspace by laying the parts and hardware out separately, then begin!

PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.





Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.





Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.





Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.





Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

ASSEMBLY AND CARE ADVICE




FAILURE TO FOLLOW THE GUIDELINES BELOW MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.



Position each part correctly and insert screws or bolts into their respective holes.



Use the appropriate hand tools or power tools for assembly. Select steps, such as tightening screws and/or bolts, may require hand tools to avoid causing damage during assembly.

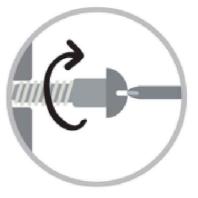

Turn clockwise to tighten and only tighten when step is completed or when instructed to do so.



Save the instructions and store any supplied tools for later maintenance.



After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

BED

FM7670Q



- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

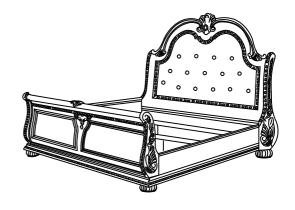

PARTS

















Headboard

Headboard leg(L&R)

Footboard

Siderail





















HB Cross bar

Slat

Slat support leg 190x30x30mm

Leg

Top Flower Of Headboard

HARDWARE



12pcs



12pcs



12pcs



Bolt Ø5/16" x 1-3/4"



Lock Washer Ø5/16"



Flat Washer Ø5/16"

#D 1pc







Allen key M4



Screw #4 x 32mm



Ø5/16"*3-1/4"

HARDWARE










Half Moon Washer (Ø5/16")



Hex Nut (Ø5/16")




Wrench 14mm

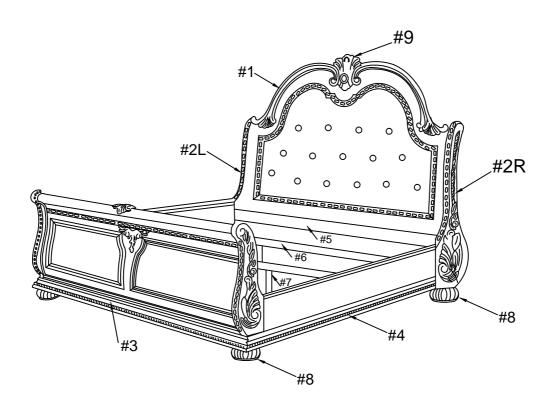

FM7670Q is packed in 4 cases

Carton	Disignation	Part		Hardware
	Headboard	#1		
FM7670Q-1	Top Flower Of Headboard	#9		
	HB Cross bar	#5		
	Footboard	#3		#A x12pcs #B x12pcs #C x12pcs
FM7670Q-2	Slat (4pcs)	#6		#D x1pc #E x8pcs #F x8pcs
	Slat support leg 190x30x30mm (4pcs)	#7		#G x8pcs #H x8pcs #I x1pc
	Leg	#8		
FM7670Q-3	Siderail (2pcs)	#4		
FM7670Q-4	Headboard leg(L&R)	#2		
	Leg	#8		

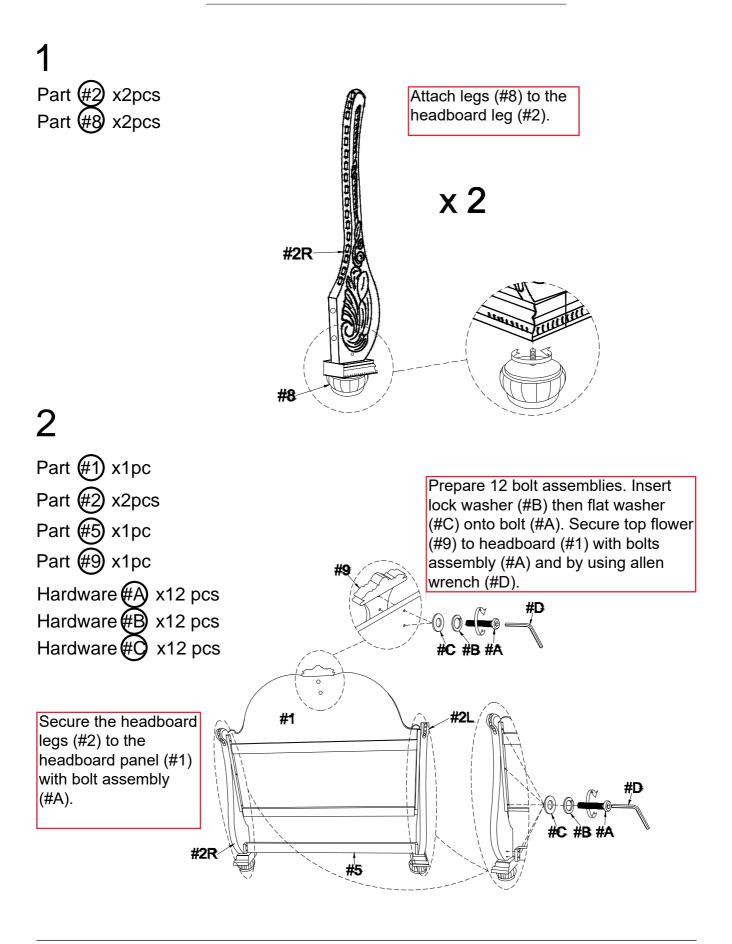

3

Part #1 x1pc

Part #2 x2pcs

Part #3 x1pcs

Part #4 x2pcs


Hardware #F) x8 pcs

Hardware (#G) x8pcs

Hardware (#H) x8pcs

Use thread studs (#F) to hold parts and secure by using half moon washer (#G) with hex nut (#H).

Align the side rails (#4) to the holes of the headboard (#1) and footboard (#3).

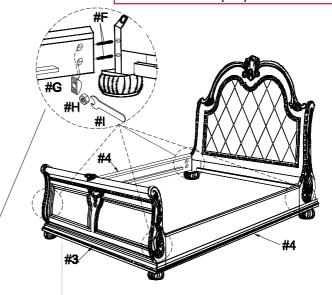


4

Part #6 x1pc


Part #7 x1pc

Attach the slat support leg (#7) to the slat (#6).

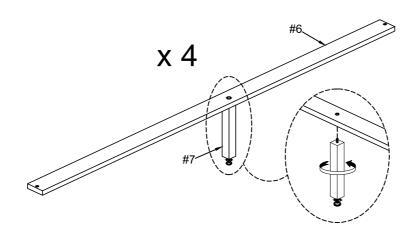


5
Hardware#D x8 pcs

Align the bed slats (#6) to the side rails (#4), then secure with screws (#E) with a screwdriver.

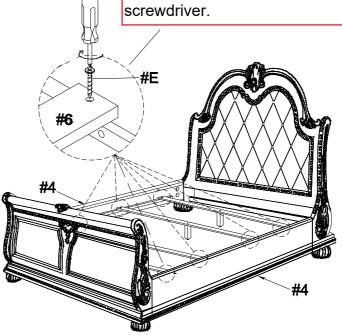

6

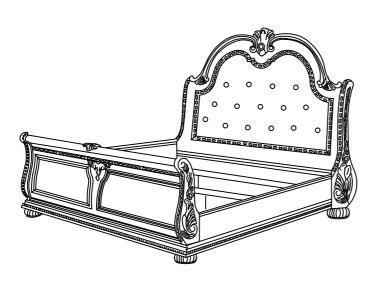

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.

✓ Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting of adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.