

CLA-024-106 Campaign Queen Bed with Canopy














CARACOLE CLASSIC


ASSEMBLY INSTRUCTIONS







PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!

*** NOTE KEEP THIS SHEET ***

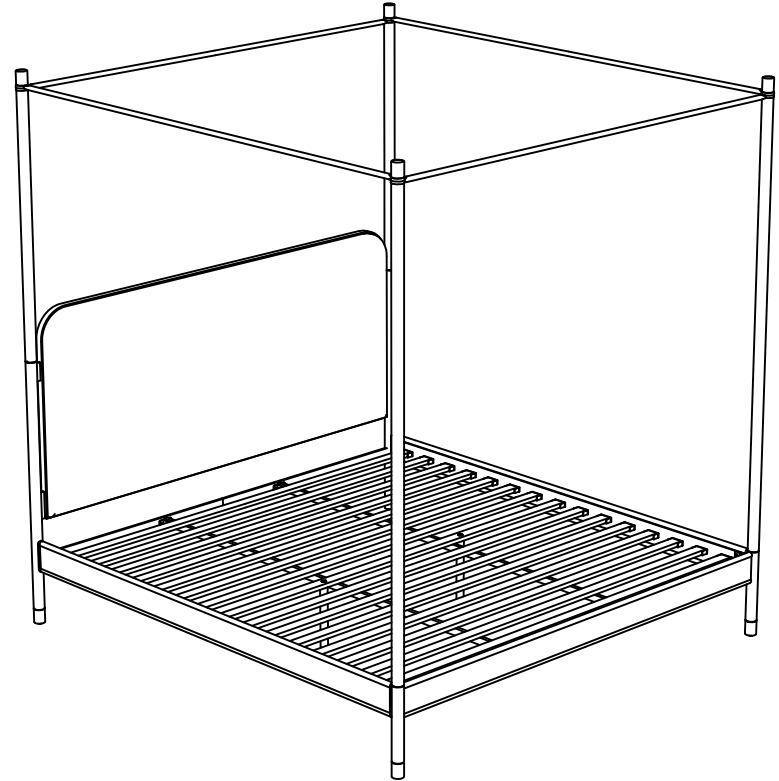In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Caracole International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

CLA-024-106 Campaign Queen Bed with Canopy				
CLA-024-104H & CLA-024-104F & CLA-024-104R & CLA-024-104P				
CAMPAIGN QUEEN BED HB & FB & SR & P				
Part List				
NO.	Hardware List		Part Number	QTY
A		Headboard	CLA-024-104 H -0246	1
B		Footboard	CLA-024-104 F -0362	1
C		LSF side rails	CLA-024-104 R-068	1
D		RSF side rails	CLA-024-104 R-069	1
E		Metal rod	CLA-024-104 R-0184	2
F		Support leg	CLA-024-104 R-0305	2
G		Decorative metal piece	CLA-024-104 H&F-0219	4
H		Bed slats	CLA-024-104 F-067	15
I		Adjustable Floor Glide	CLA-024-104 H&F&R-075	6
J		Headboard Post	CLA-024-106-0363	2
k		Footboard Post	CLA-024-106-0364	2
L		Long metal rod of canopy	CLA-024-106-0154	2
M		Short metal rod of canopy	CLA-024-106-0155	2




RTA Hardware			
Hardware List			QTY
1		M6*15mm	4
2		M8*40mm	8
3		M8	8
4		4*16mm	30
5		14mm	1
6		M4 Small Wrench	1

CLA-024-106 Campaign Queen Bed with Canopy


CARACOLE CLASSIC

Assembly steps:

1) Connect the side rails(C,D) and headboard (A) / footboard (B) by bolt (2). Connect nut (3) to bolt (2) and tighten with wrench (5),as shown in diagram ①.

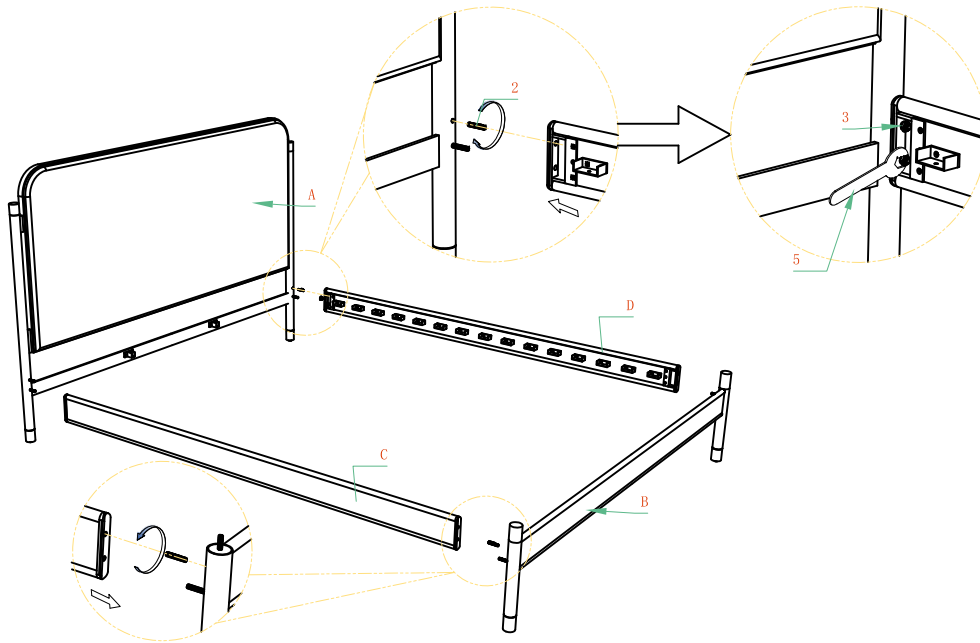

2) Screw the support leg (F) into the metal rod (E). Flip the component with the support leg (F) facing downwards. Place both ends of the metal rod (E) into the slots at the headboard and footboard. Connect with bolt (1), and tighten with wrench (6),as shown in diagram②.

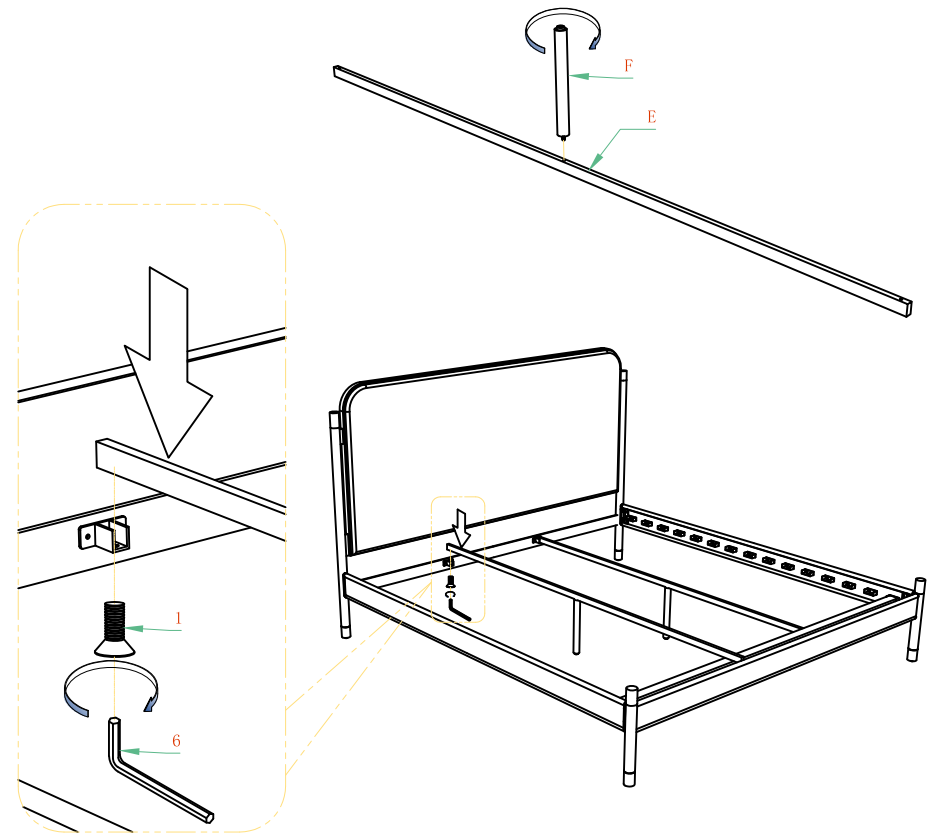


CLA-024-106 Campaign Queen Bed with Canopy


CARACOLE CLASSIC

Assembly steps:

3) Place the bed slats (H) into the slots on both sides of the side rails (C,D) and secure it with screws (4) from the back, as shown in diagram ③.

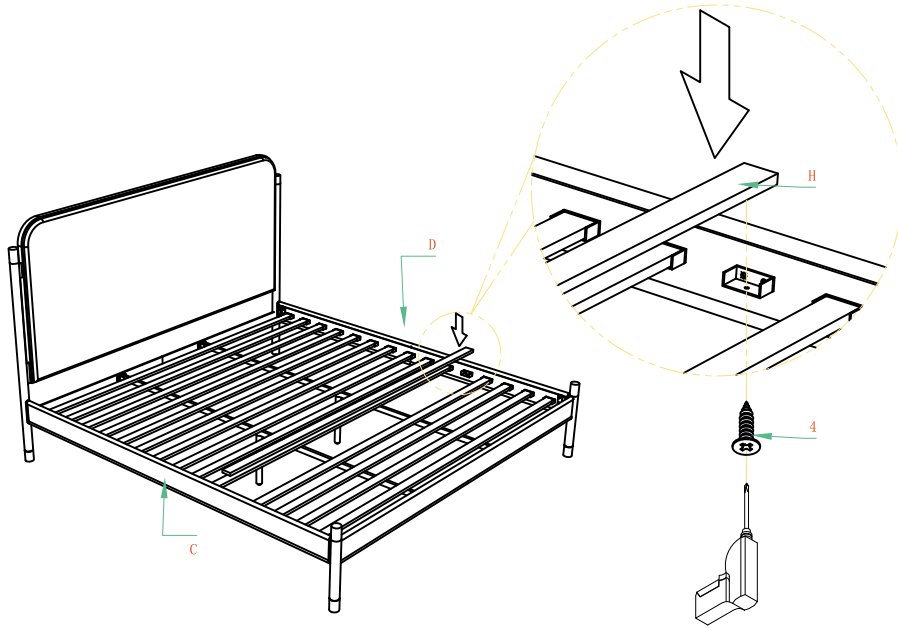

4) Twist off decorative metal piece (G) from the top of the headboard (A) and footboard (B), and place it on a soft and clean floor.

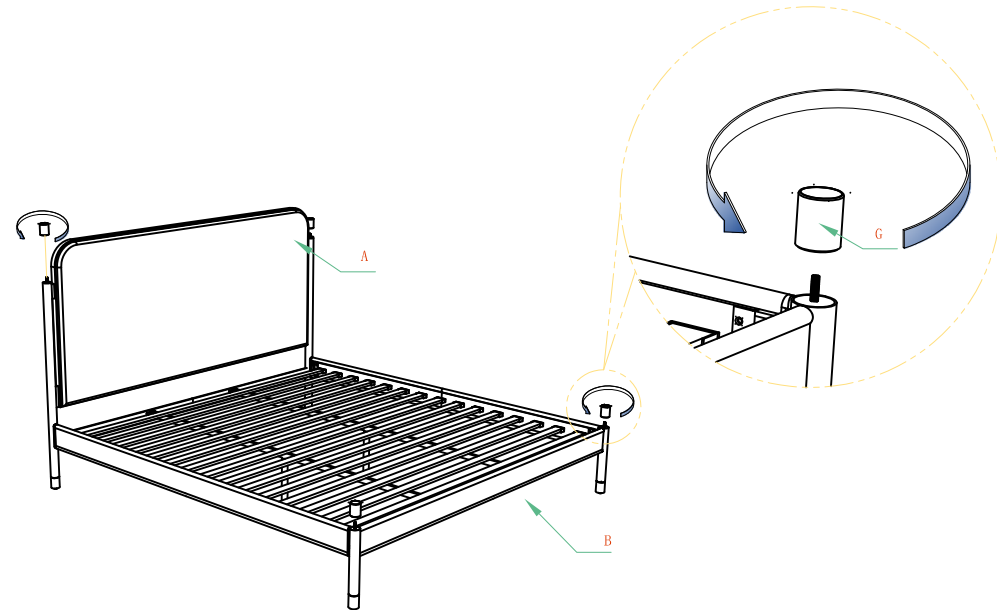


CLA-024-106 Campaign Queen Bed with Canopy

CARACOLE CLASSIC

Assembly steps:

5)Screw the headboard post (J) into the corresponding hole at the headboard (A), and screw the footboard post (K) into the corresponding hole at the footboard (B).

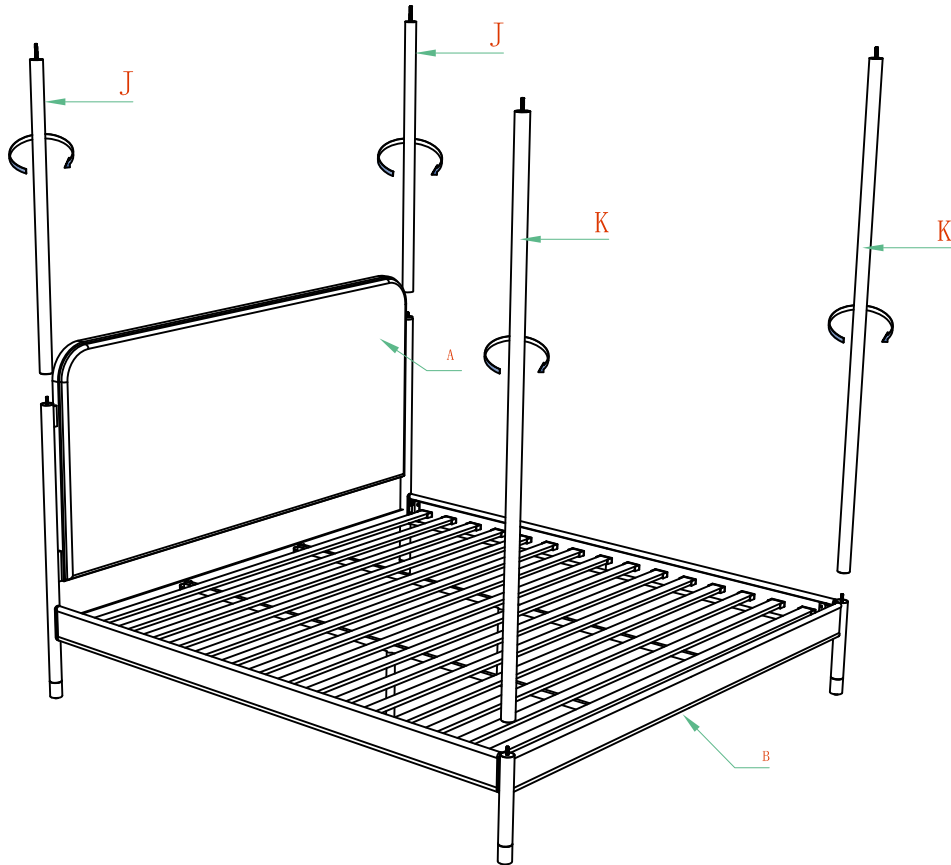

First, insert the short metal rod of canopy (M) into the headboard post (J) and footboard post (K), then stack the long metal rod of canopy (L) on both sides of the short metal rod of canopy (M). Install the decorative metal piece (G) and tighten it, as shown in diagram ⑥.

