



ASSEMBLY INSTRUCTIONS

MODEL

FM7212-Q

Questions?

GIVE US CALL: 1-888-980-5122
MON-FRI 8:30AM - 5:30PM (PST)

TOOLS REQUIRED




Allen Wrench

(Included)



Phillips
Screwdriver

(Not Included)

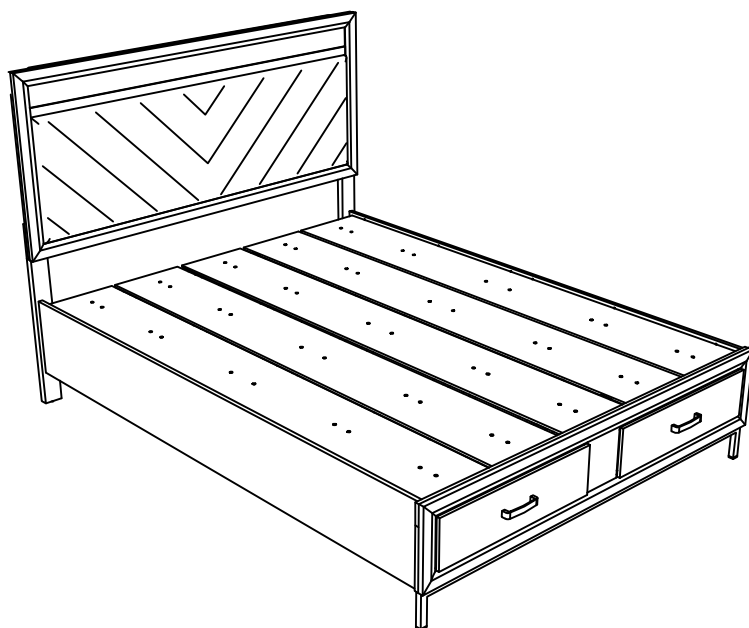

2 - Persons
Recommended

ASSEMBLY RATING



EASY ————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



FOA Intro

Thank you for your purchase!

We hope you enjoy this new addition to your home for many years to come.

Our commitment to providing quality products does not simply end when you purchase our product. We fully stand behind our products from start to finish. Our customer service department is available Monday – Friday 8:30 AM – 5:30 PM Pacific and can help with assembly questions as well as, if necessary, replacing damaged or missing parts. To help expedite our service, please have these assembly instructions readily available, along with your order receipt.



Consumer Hotline
Toll-Free 1-888-980-5122



WEBSITE
www.foagroup.com



Monday to Friday
8:30AM- 5:30PM (PST)



E-MAIL
cs.ec@foagroup.com



foagroup



FurnitureOfAmerica



CHECK BEFORE STARTING



Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.



Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!



Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!



Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Set up your workspace by laying the parts and hardware out separately, then begin!


PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

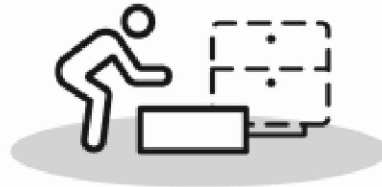

Suitable Location

Assembling near the area of the intended location is highly recommended.



Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.



Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly
and insert screws or bolts into
their respective holes.

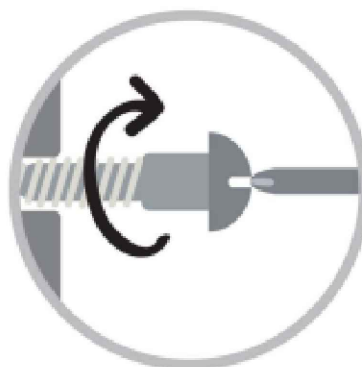


Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.



Save the instructions and store
any supplied tools for later
maintenance.

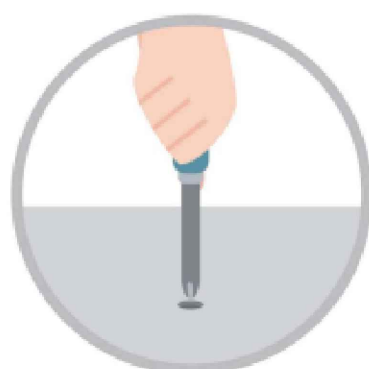

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

QUEEN BED

FM7212-Q




- Please keep instructions for future reference.
- Check the quantity and irregularity of parts and hardware before you start.

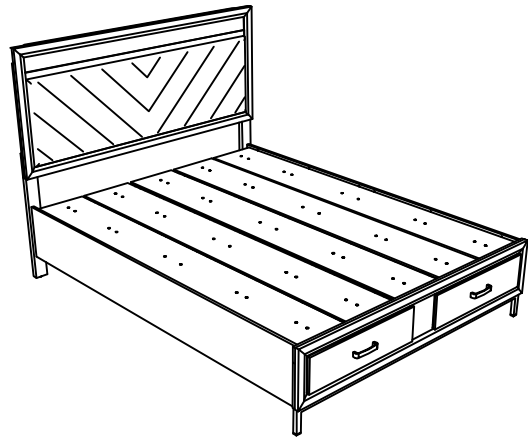

PARTS

Parts List (Box 1) Headboard Box

① 1pc




Headboard

② 1pc



Footboard


③ 2pcs



Headboard
Leg L&R

Parts List (Box 2) Side Rail Box

④ 2pcs



Side Rail

⑤ 1pc



T-Runner Center
Support

⑥ 3pcs



Bed Slat w/o marking
1545 x 45 x 18mm

⑦ 2pcs



Bed Slat with marking
1545 x 45 x 18mm

⑧ 5pcs




Bed Slat Support
365 x 30 x 30mm

⑨ 1pc



FB T-Runner Slat
Support
145 x 30 x 30mm


⑩ 5pcs



Concealed Panel
2040 x 295 x 9mm

Parts List (Box 3) Drawer Box

⑪ 2pcs

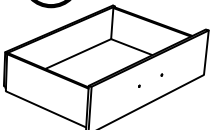


Footboard Drawer

HARDWARE

Hardware List (Box 1) Headboard Box

(A) 6pcs



Bolt 1/4" x 1-3/16"

(B) 6pcs




Lock Washer

(C) 6pcs



Flat Washer


(D) 1pc



Allen Key M4


Hardware List (Box 2) Side Rail Box

(E) 6pcs



Bolt 1/4" x 2"

(F) 8pcs




Flat Washer
(IF NECESSARY
USE ONLY)

(G) 12pcs



CSK m4 x 32mm

(H) 2pcs




CSK m4 x 20mm

(I) 25pcs




P.H Screw
m3.5x20mm

(J) 1pc
























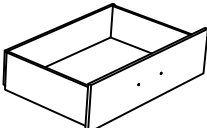
Allen Key M4

(K) 1pc



Allen Key M5

FM7212-Q is packed in 3 cartons

Carton	Designation	Part		Hardware
FM7212-Q-HBFB	Queen Size Bed HB, FB & HB Legs	1	 X 1	 A x 6pcs  B x 6pcs
		2	 X 1	 C x 6pcs  D x 1pc
		3	 X 2	
FM7212-Q-R	Queen Size Bed Rails	4	 X 2	 E x 6pcs  F x 8pcs
		5	 X 1	 G x 12pcs  H x 2pcs
		6	 X 3	 I x 25pcs
		7	 X 2	 J x 1pc  K x 1pc
		8	 X 5	
		9	 X 1	
		10	 X 5	
FM7212-Q-DR	Queen Size Drawer	11	 X 2	

ASSEMBLY INSTRUCTIONS

Prepare 6 bolts assembly by inserting lock washer (B), then flat washer (C) onto bolts (A).
Align HB legs (3R/L) to the holes of the headboard (1). Secure by using bolts (A).

1


Part ① x 1pc

Part ③ x 2pcs

Hardware ① x 6pcs

Hardware ② x 6pcs

Hardware ③ x 6pcs

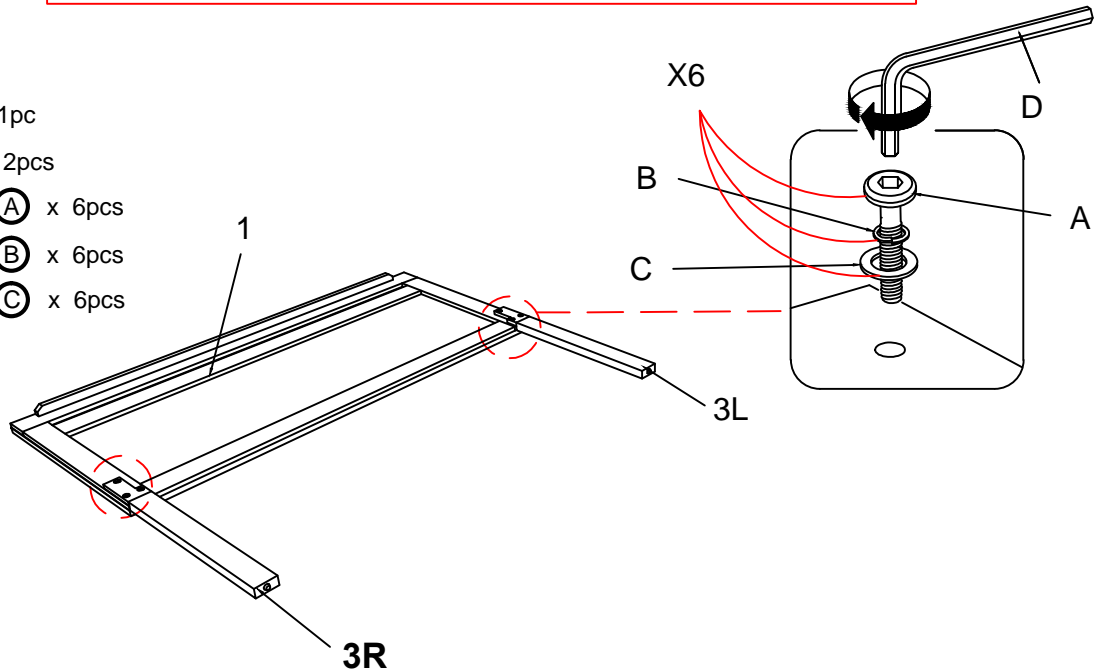


2

Part ② x 1pc

Part ④ x 2pcs

1) Loosen the bolts attached to headboard (1) and footboard (2), then hook the side rails (4) to the loosed bolts on the headboard (1) and footboard (2).
2) Tighten the bolts on the headboard (1) and footboard (2) to the side rail hooks (4).

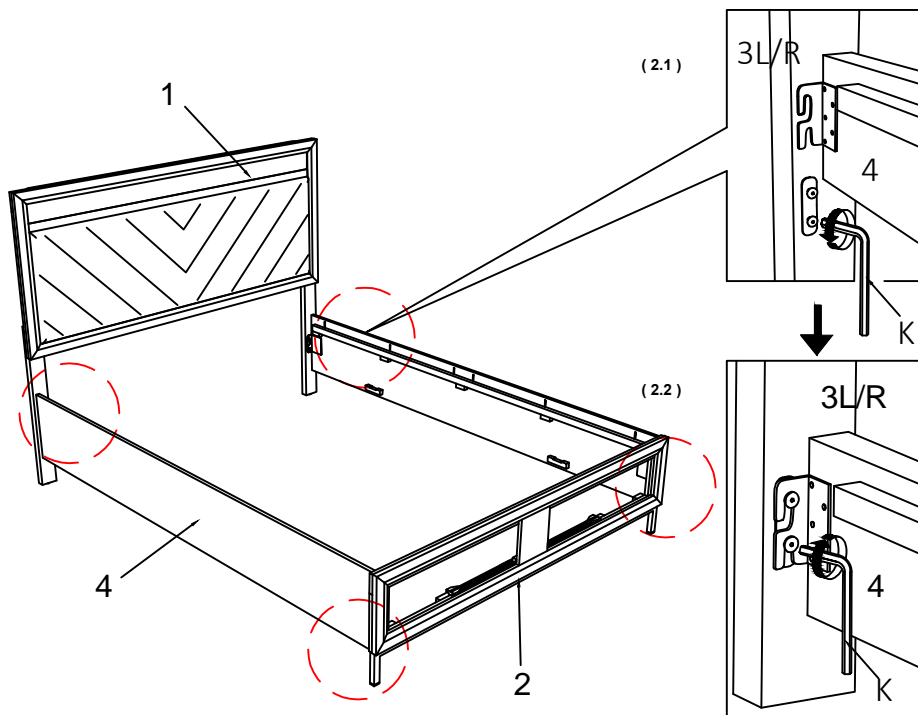


ASSEMBLY INSTRUCTIONS

3

Part ⑤ x 1pc
Hardware ⑥ x 2pcs


Align T-Runner Center Support (5) to the side rails (4), then secure by using screws (G).

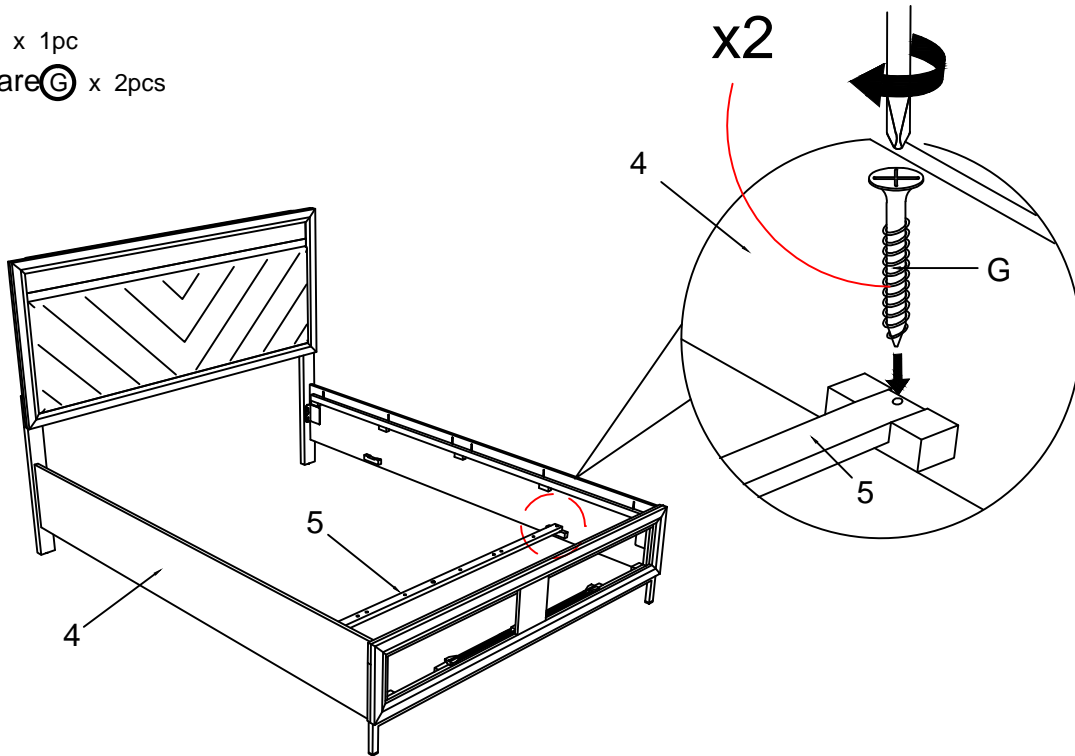

4

Part ⑨ x 1pc
Hardware ⑦ x 1pc


Align Footboard T-Runner Slat Support (9) to the hole of the T-Runner Center Support (5), secure with JCBC (E) tighten with Allen Key (J), then adjust leveler of the Footboard T-Runner Slat Support (9) according to ground level.

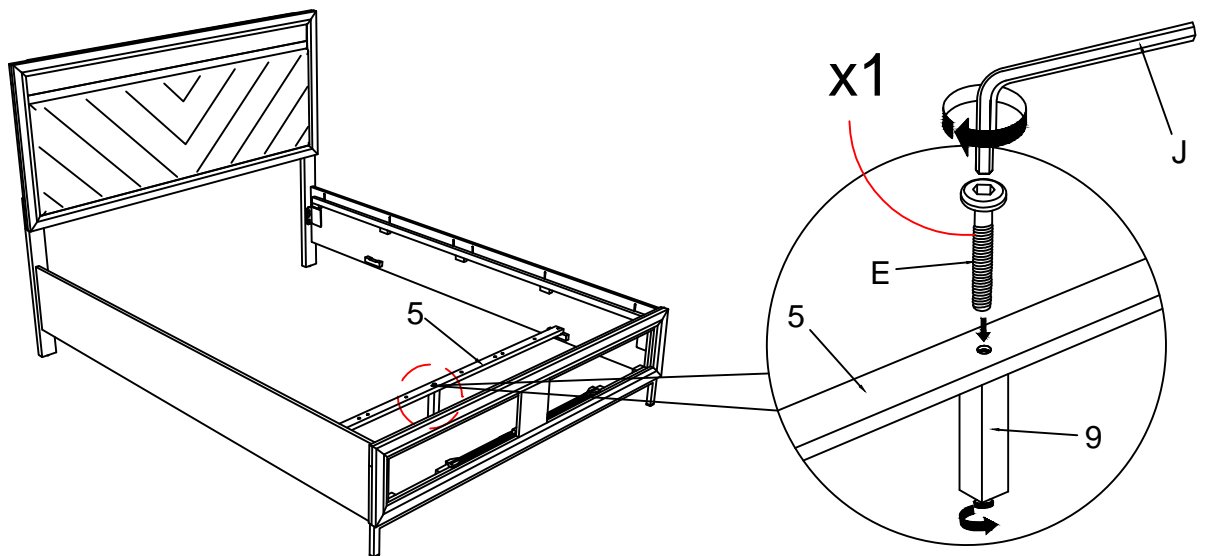

ASSEMBLY INSTRUCTIONS


5

Hardware **H** x 2pcs

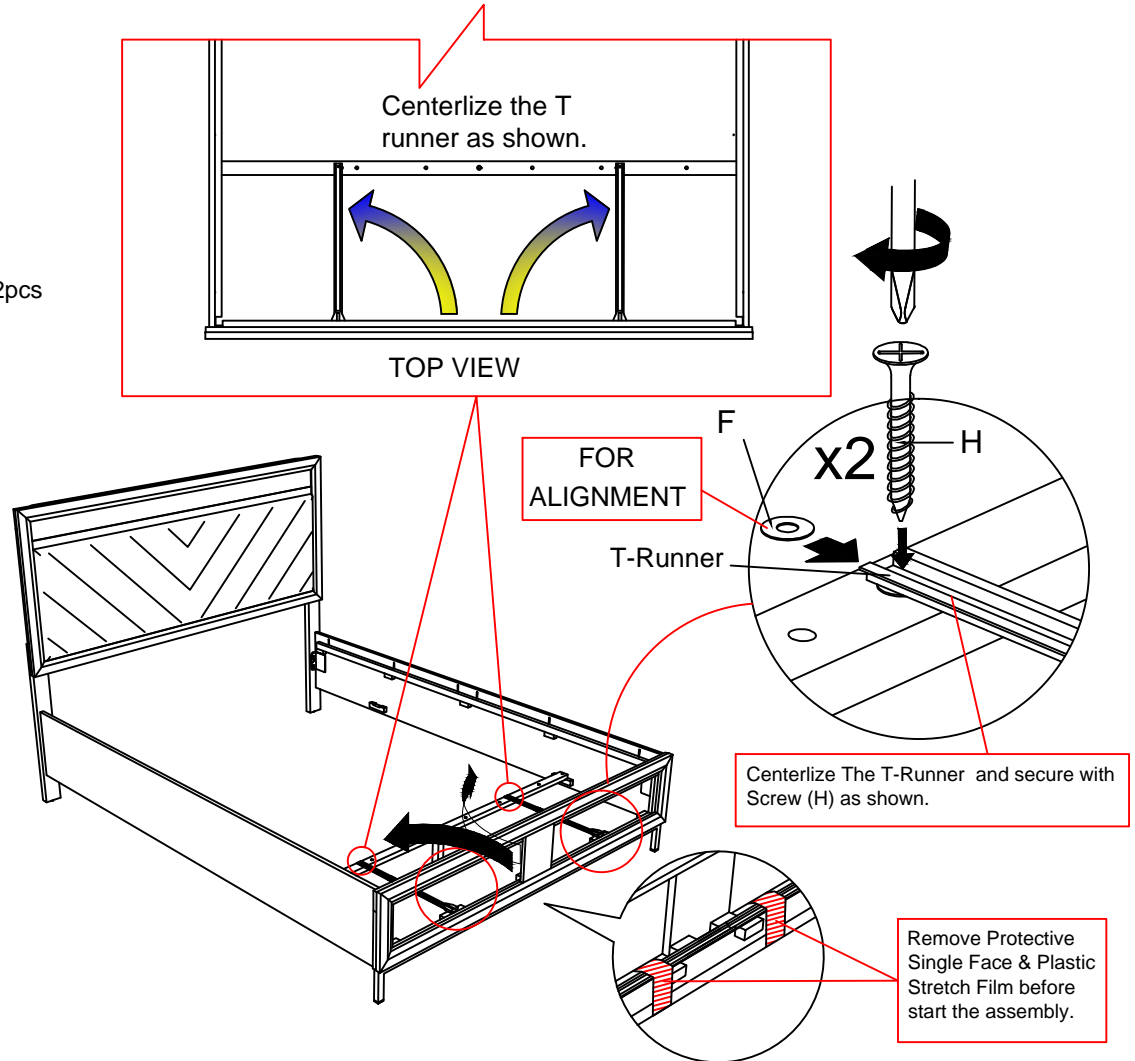

6


Part **11** x 2pcs

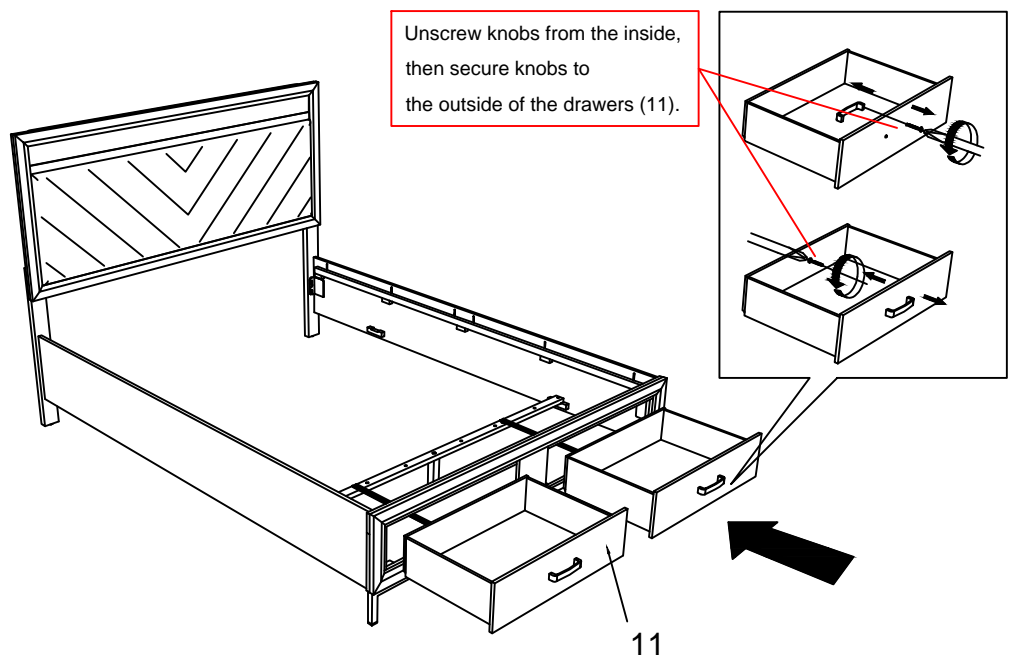

ASSEMBLY INSTRUCTIONS



7

Part ⑥ x 3pcs
Part ⑦ x 2pcs
Part ⑧ x 5pcs
Hardware ⑤ x 5pcs

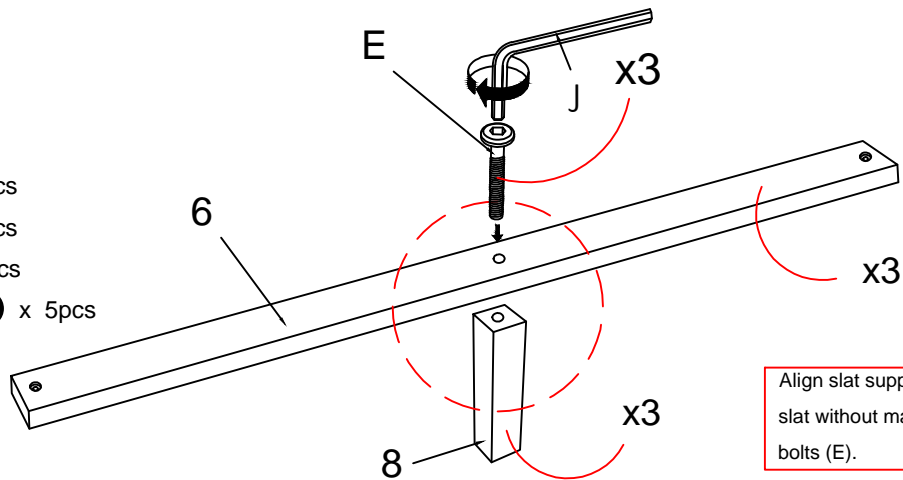

Align slat support (8) to the hole of the bed slat without marking (6). Secure by using bolts (E).

Align slat support (8) to the hole of the bed slat with marking (7). Secure by using bolts (E).

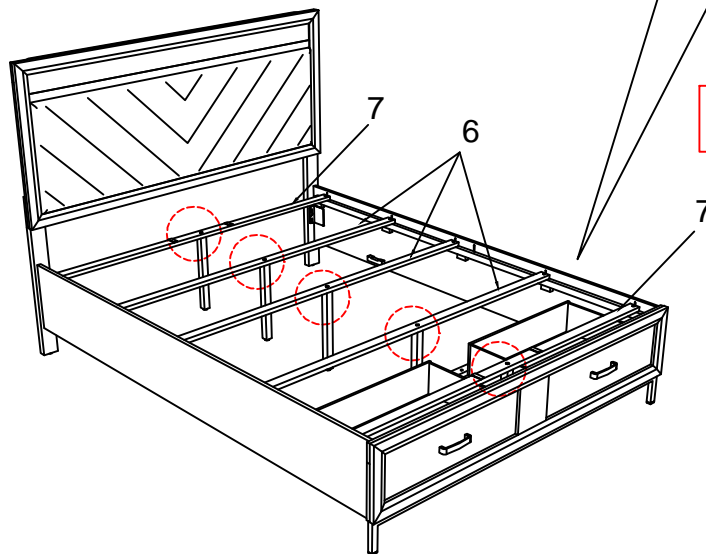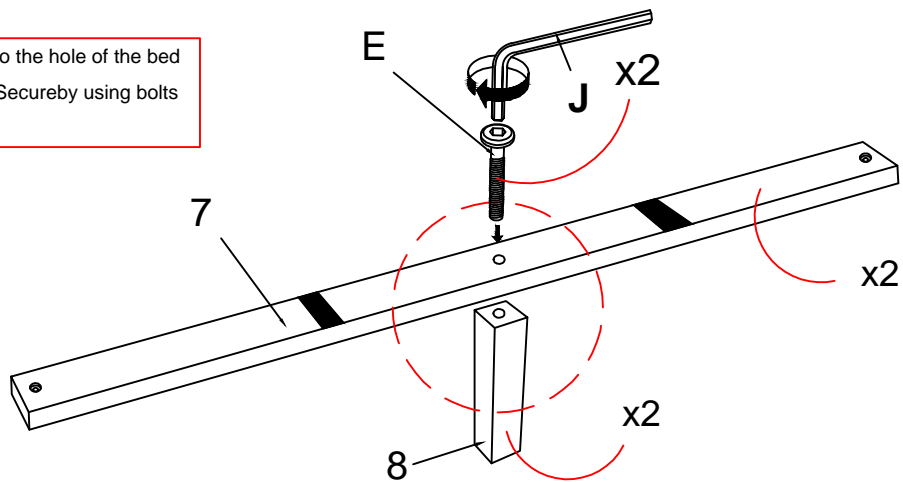


Align slats (6,7) to the side rails (4) by follow the Marking Line provided .

ASSEMBLY INSTRUCTIONS


8

Hardware **G** x 10pcs

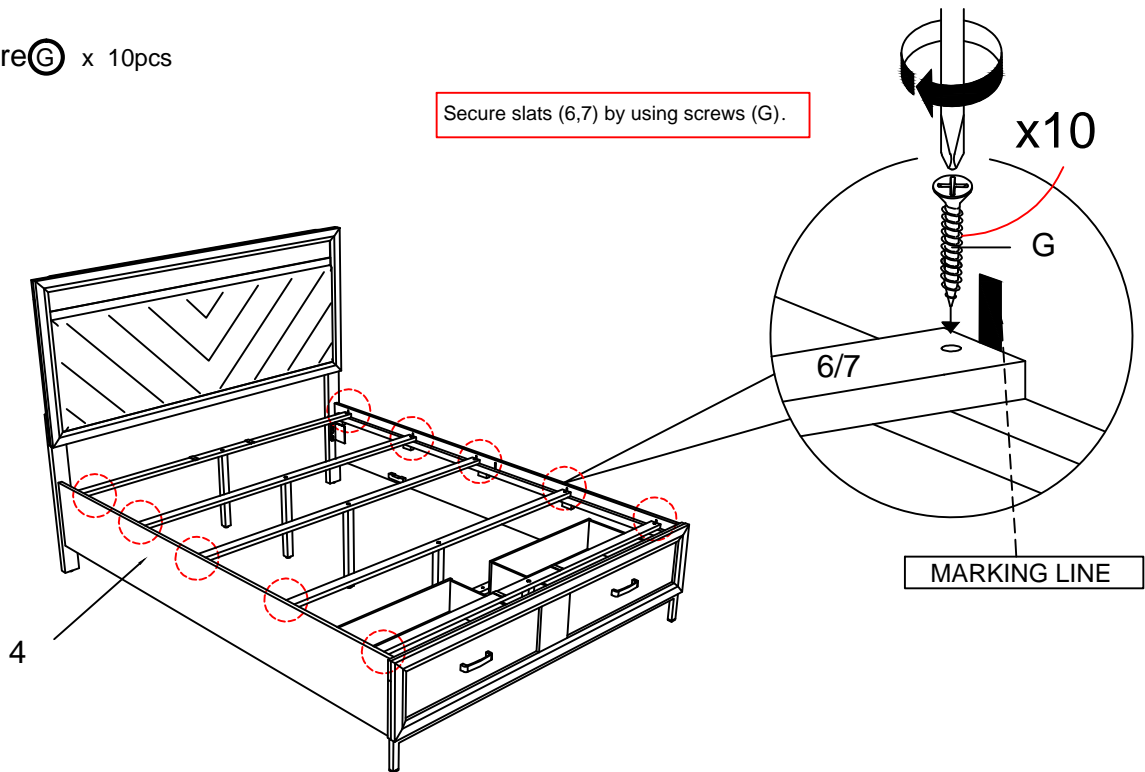


9

Part **10** x 5pcs
Hardware **I** x 25pcs

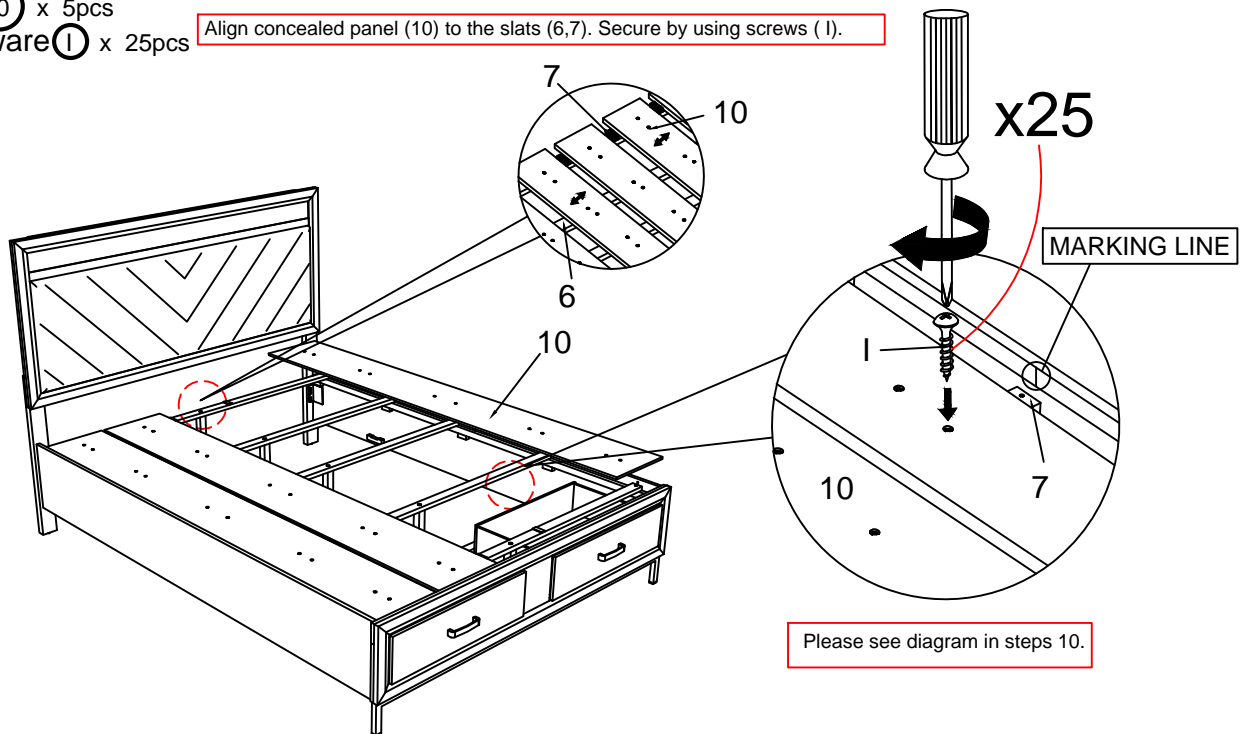


ASSEMBLY INSTRUCTIONS

10

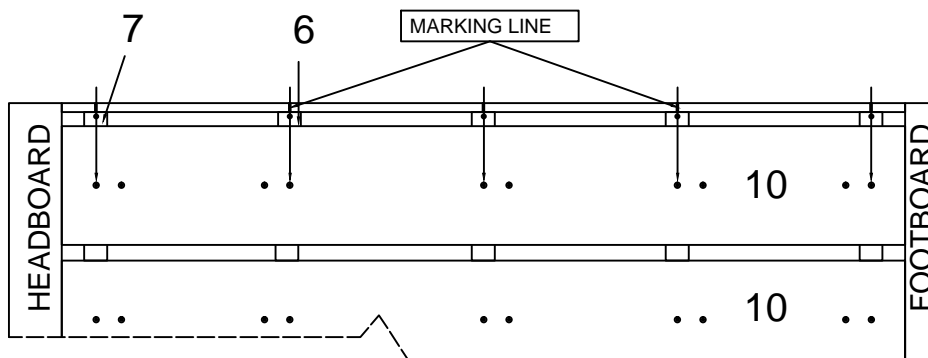

11

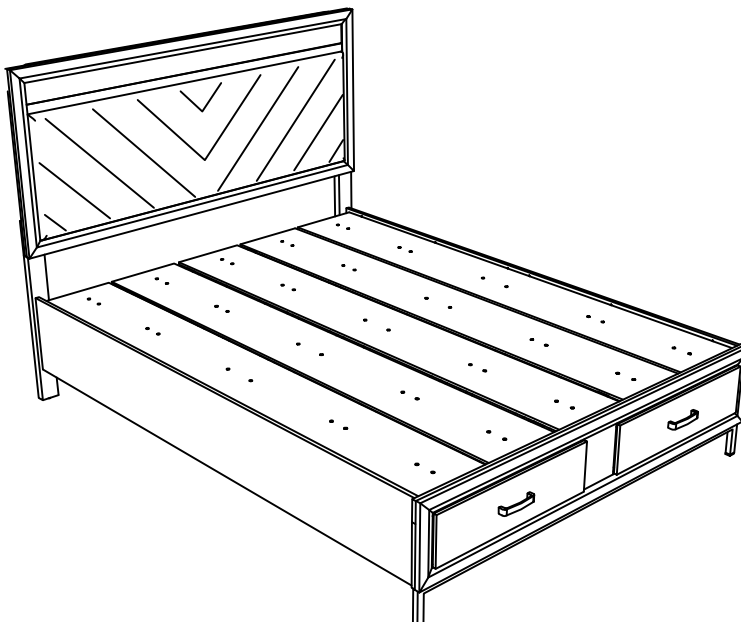

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.



Lift, don't drag!

To avoid damage to product please always LIFT the product when transporting or adjusting the placement.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.