
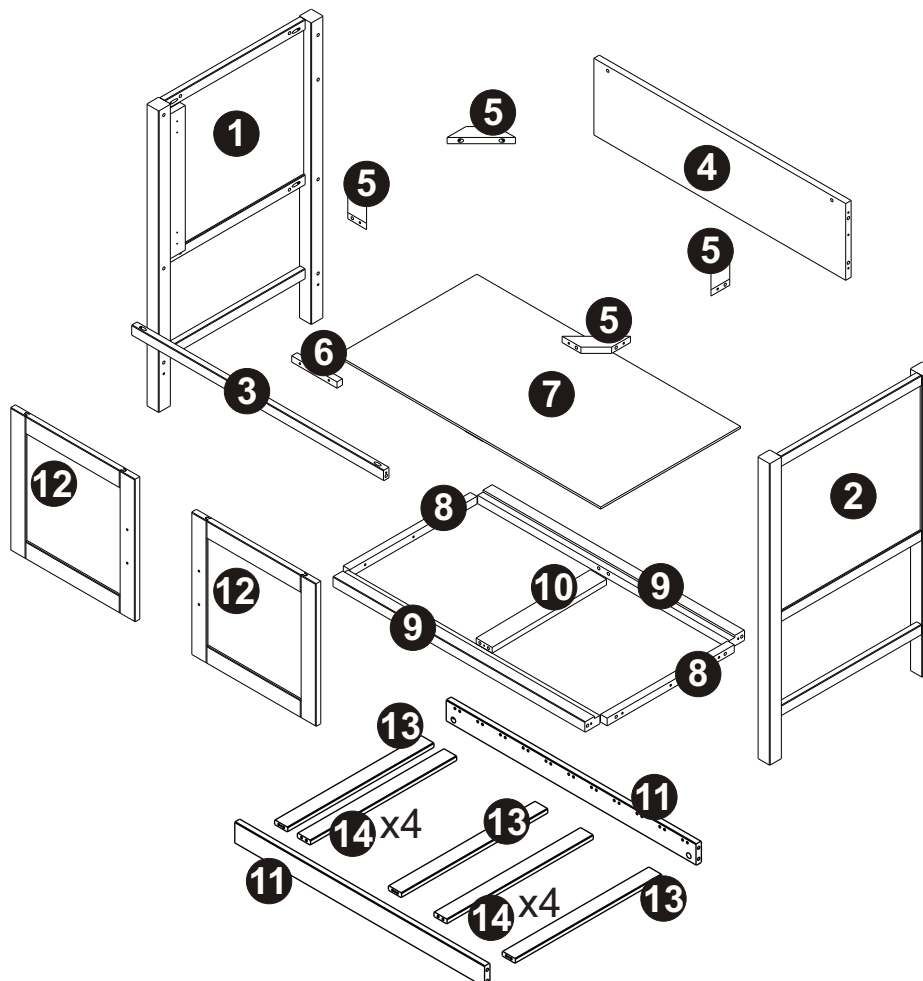
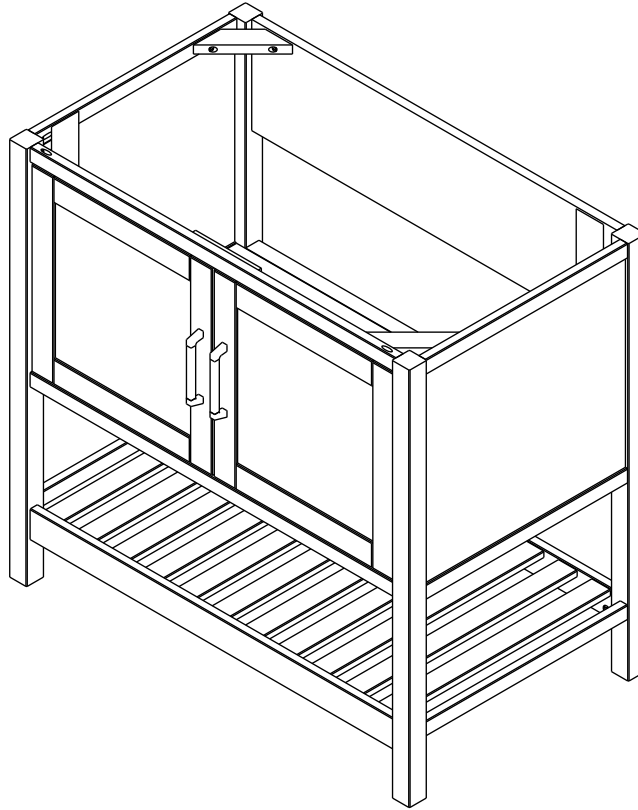







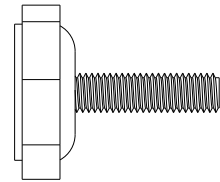


ASSEMBLY INSTRUCTIONS

BENNET 36" VANITY



A	 Ø8x30mm	26
B	 Ø8x20mm	04
C	 Ø3,5x30mm	30
D	 Ø4x25mm	04
E	 Ø3,5x14mm	16
F	 Ø3,5x14mm	02
G	 Ø4x25mm	04
H		02

I		04
J		04
K		02
L	 27x23mm	04
M	 Ø4x25mm	06
N	 Ø6x30mm	44

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at ``[www.boltonfurniture.com](http://www.boltonfurniture.com)``.

Tools Required




Phillips Tool



Hammer


* These tools are not supplied by the manufacturer


01

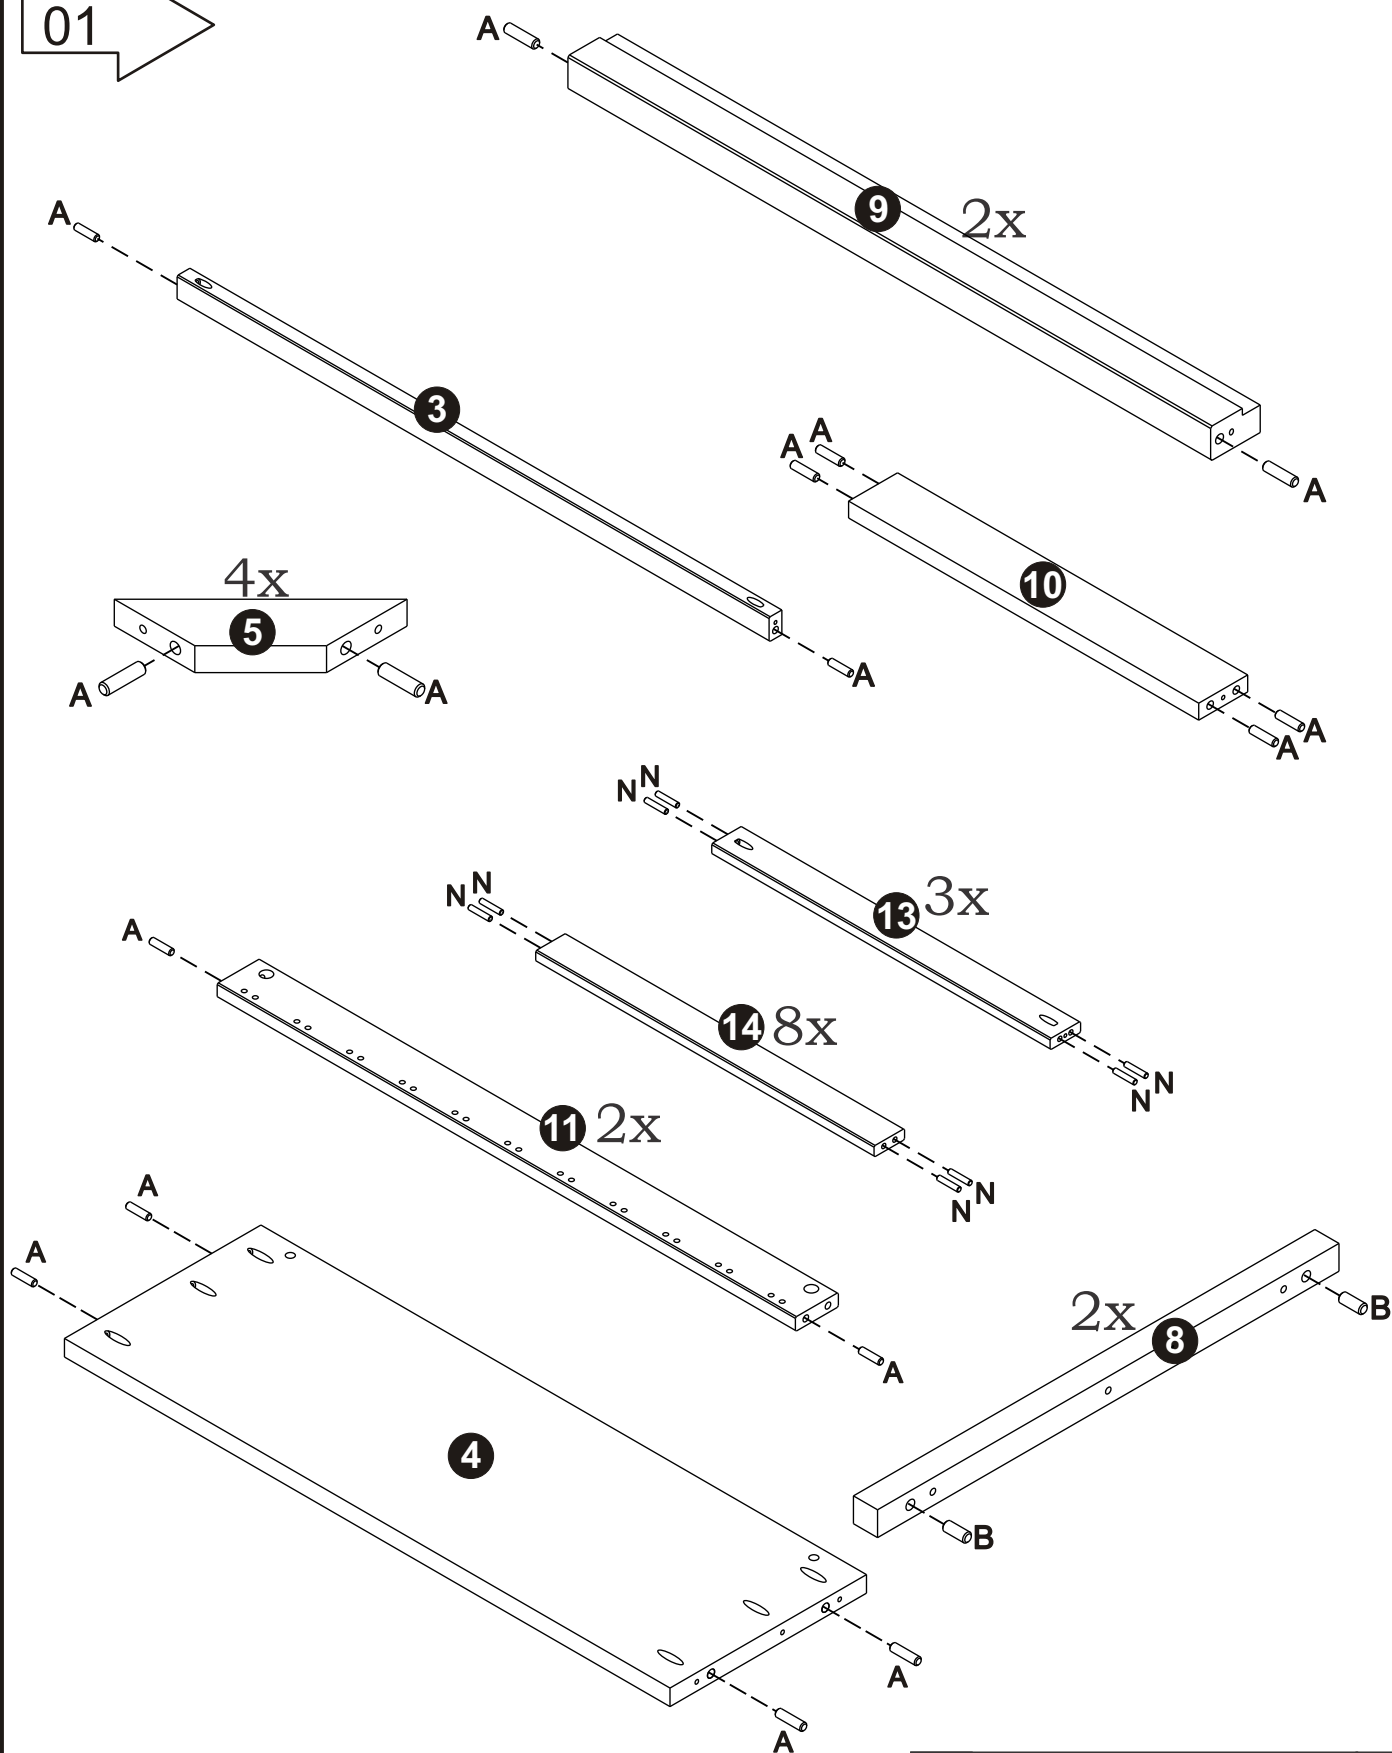


A	 Ø8x30mm	26
B	 Ø8x20mm	04
N	 Ø6x30mm	44


02

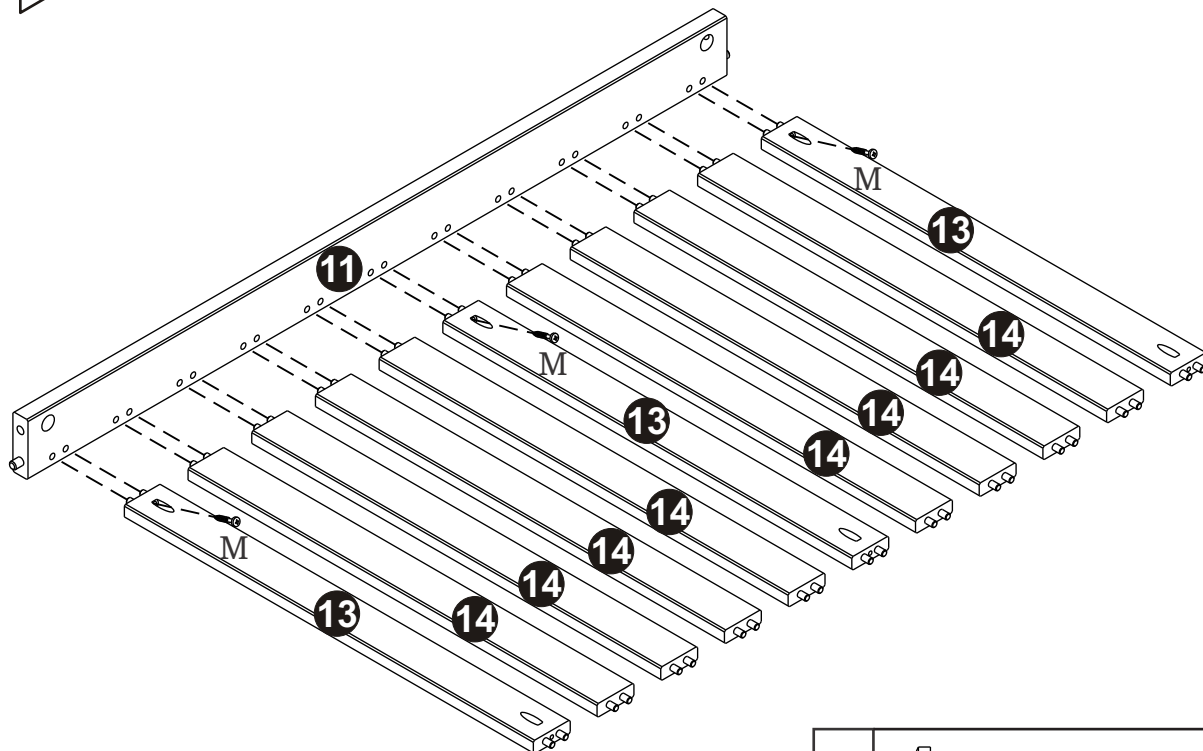


M		Ø4x25mm	03
---	---	---------	----


03

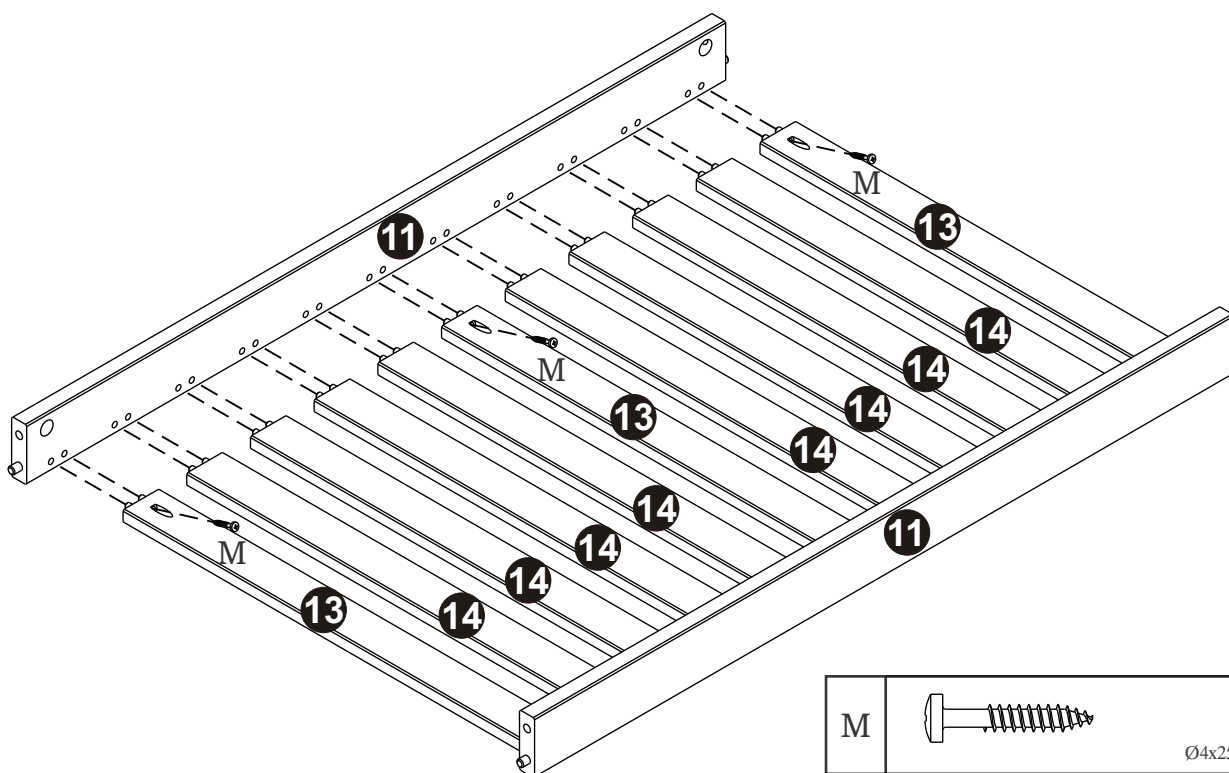


M		Ø4x25mm	03
---	---	---------	----

04

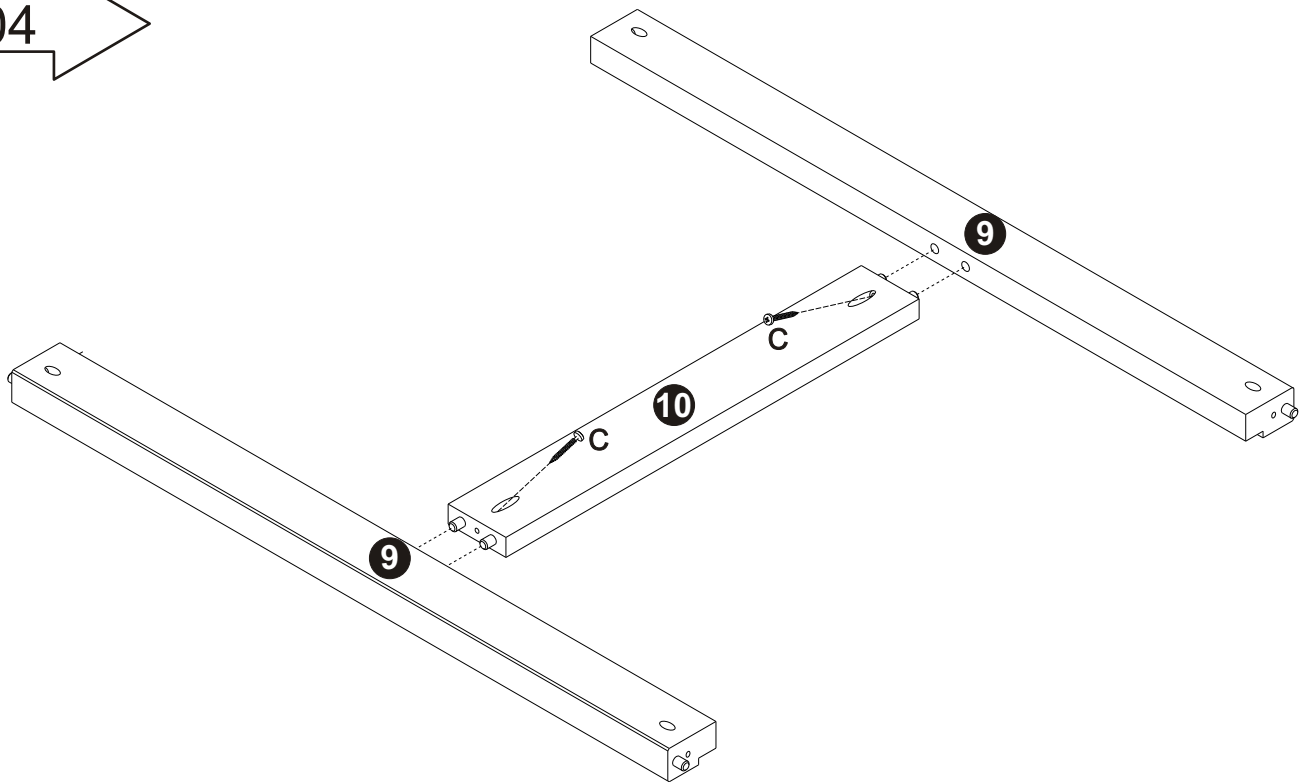


C		02
Ø3,5x30mm		


05

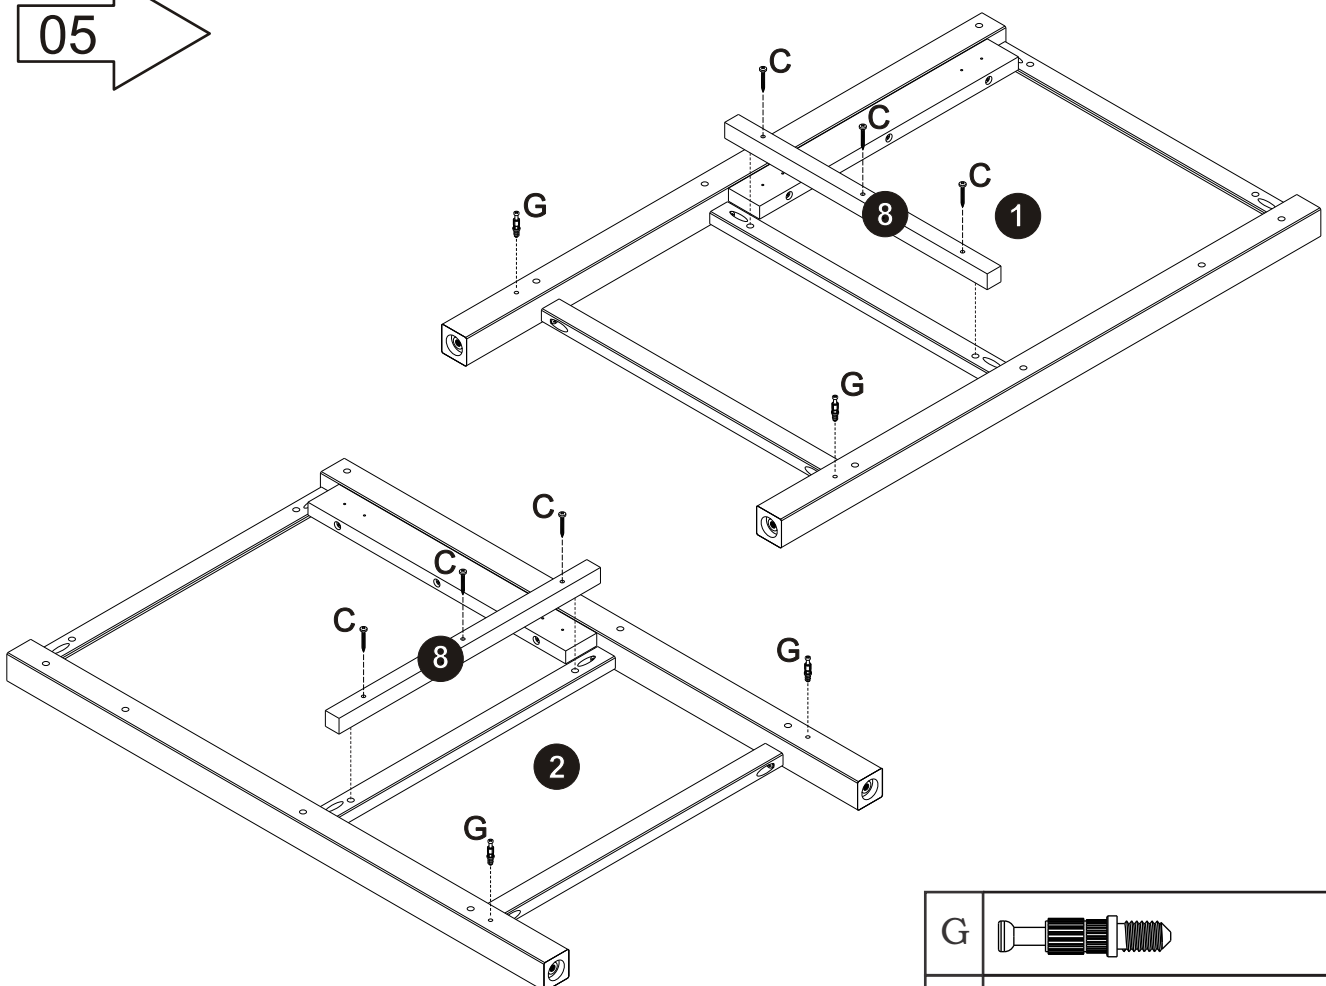


G		04
C		06
Ø3,5x30mm		

06


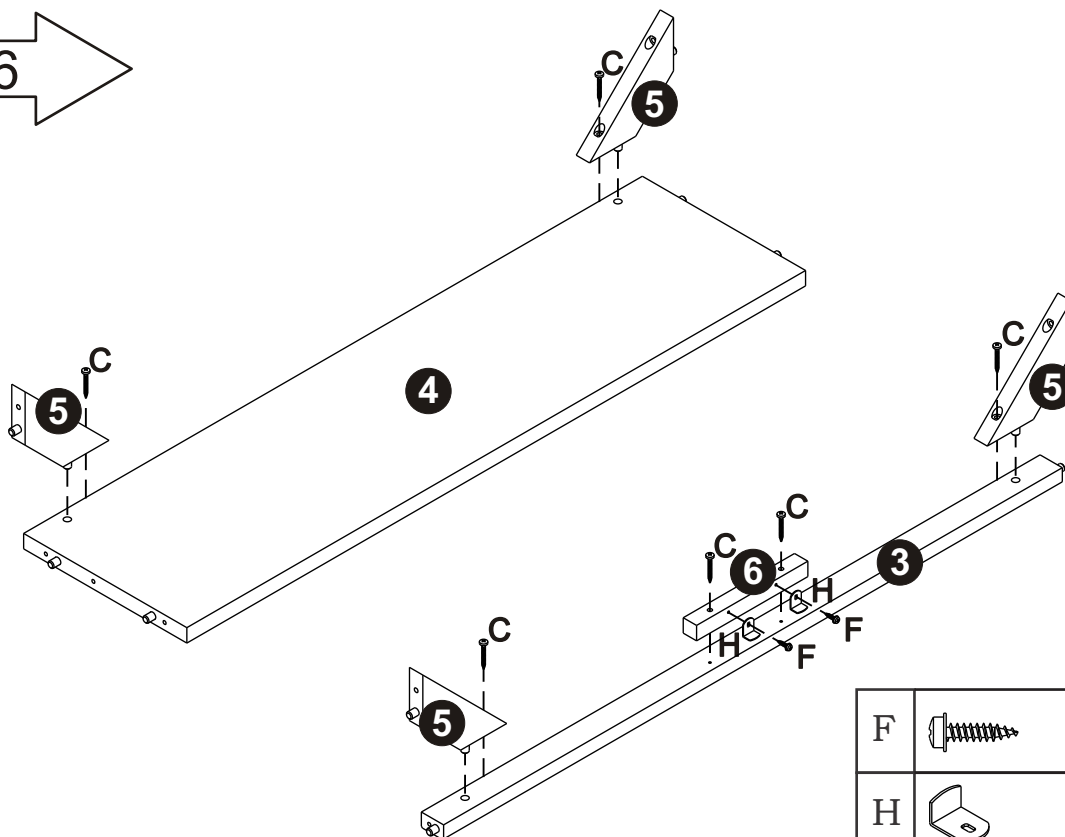


F		Ø3,5x14mm	02
H			02
C		Ø3,5x30mm	06



07

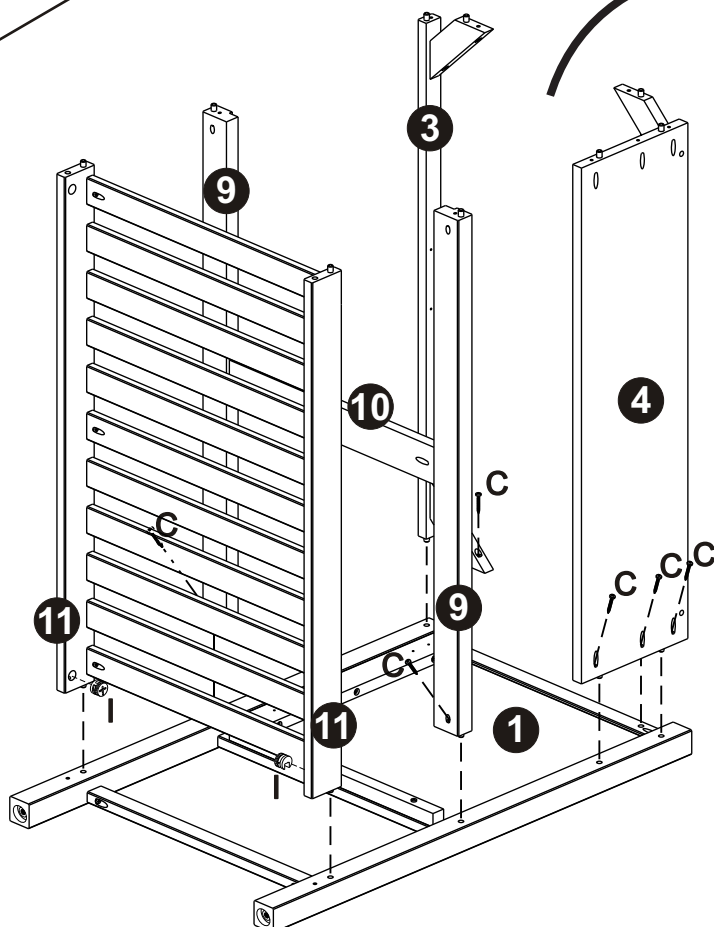



I			02
C		Ø3,5x30mm	08

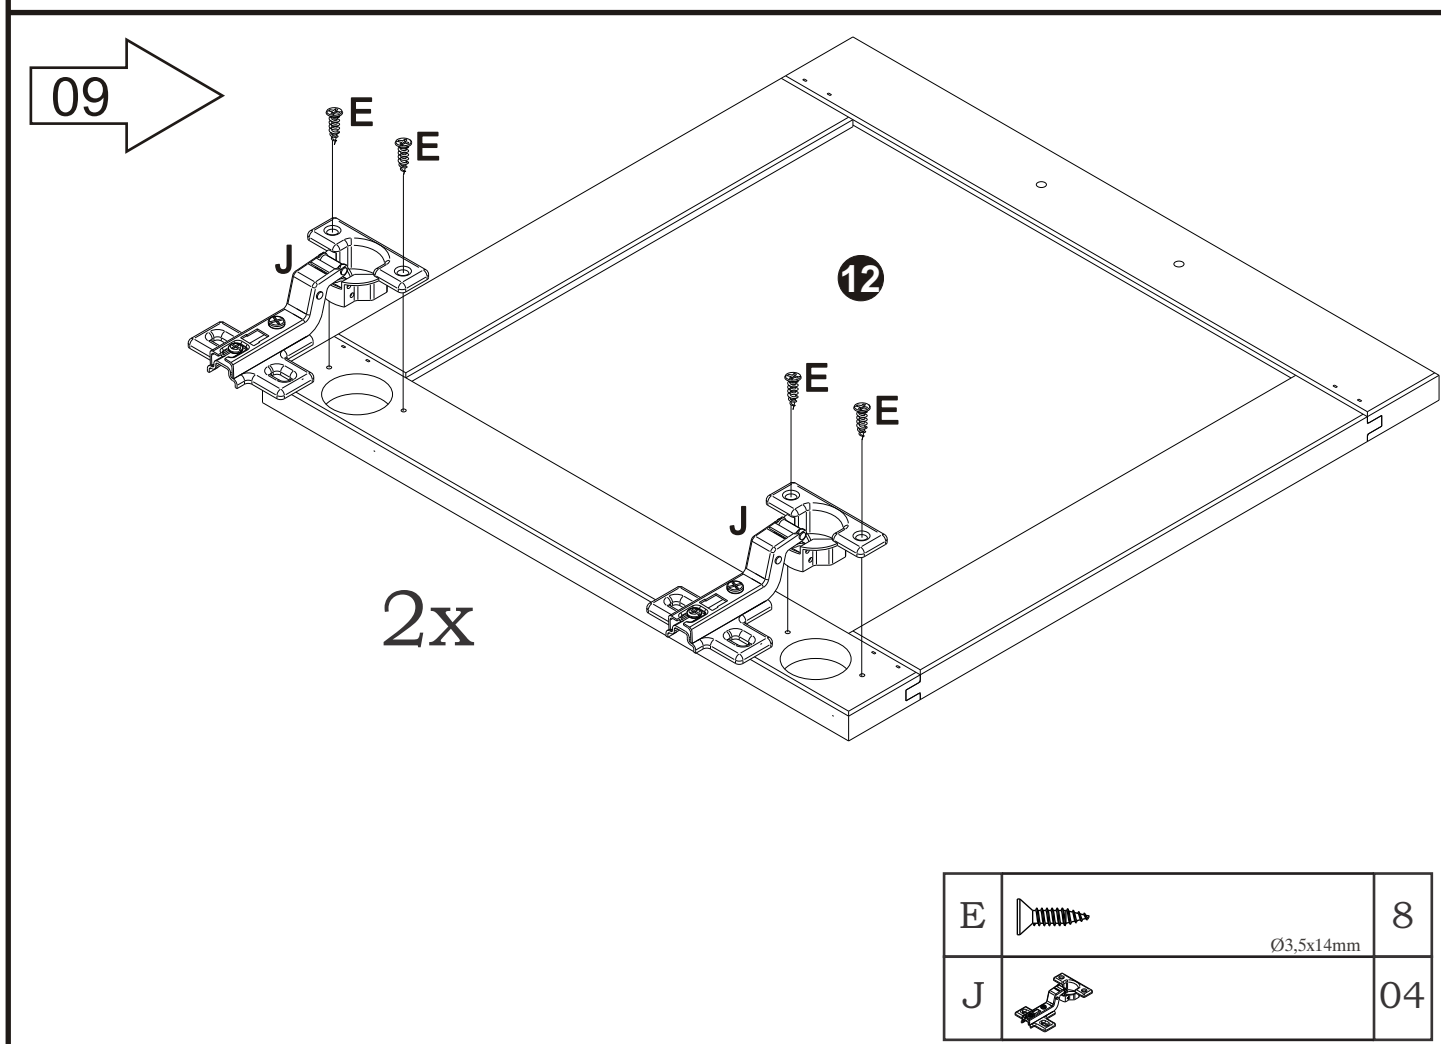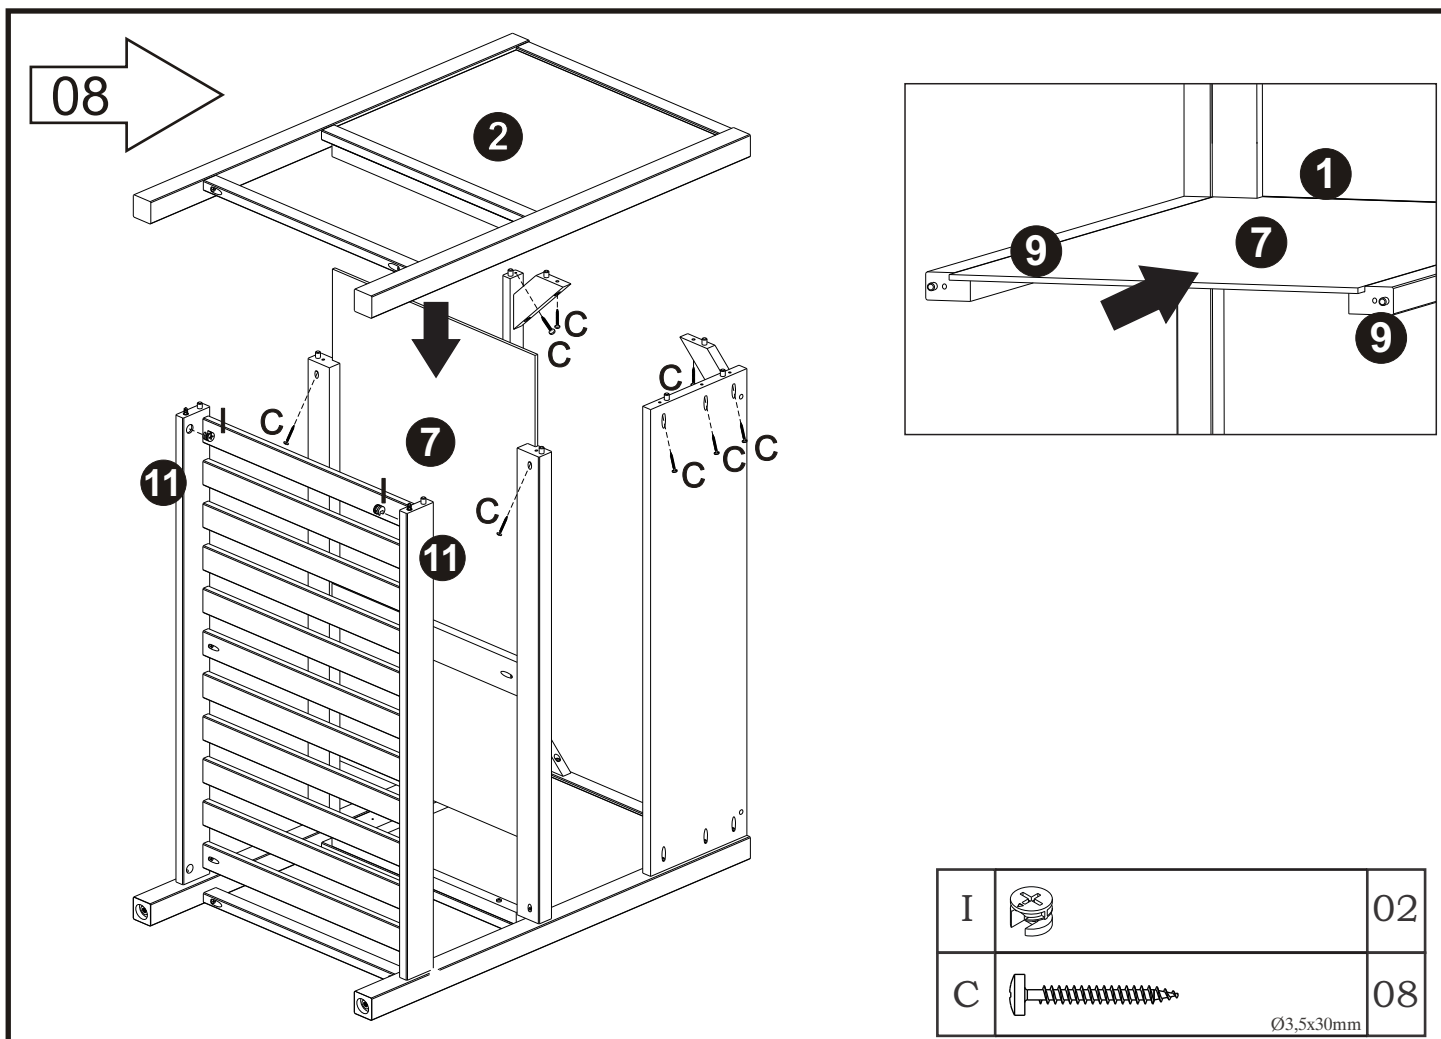

10

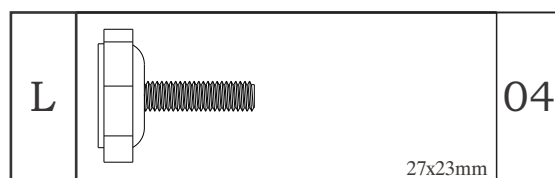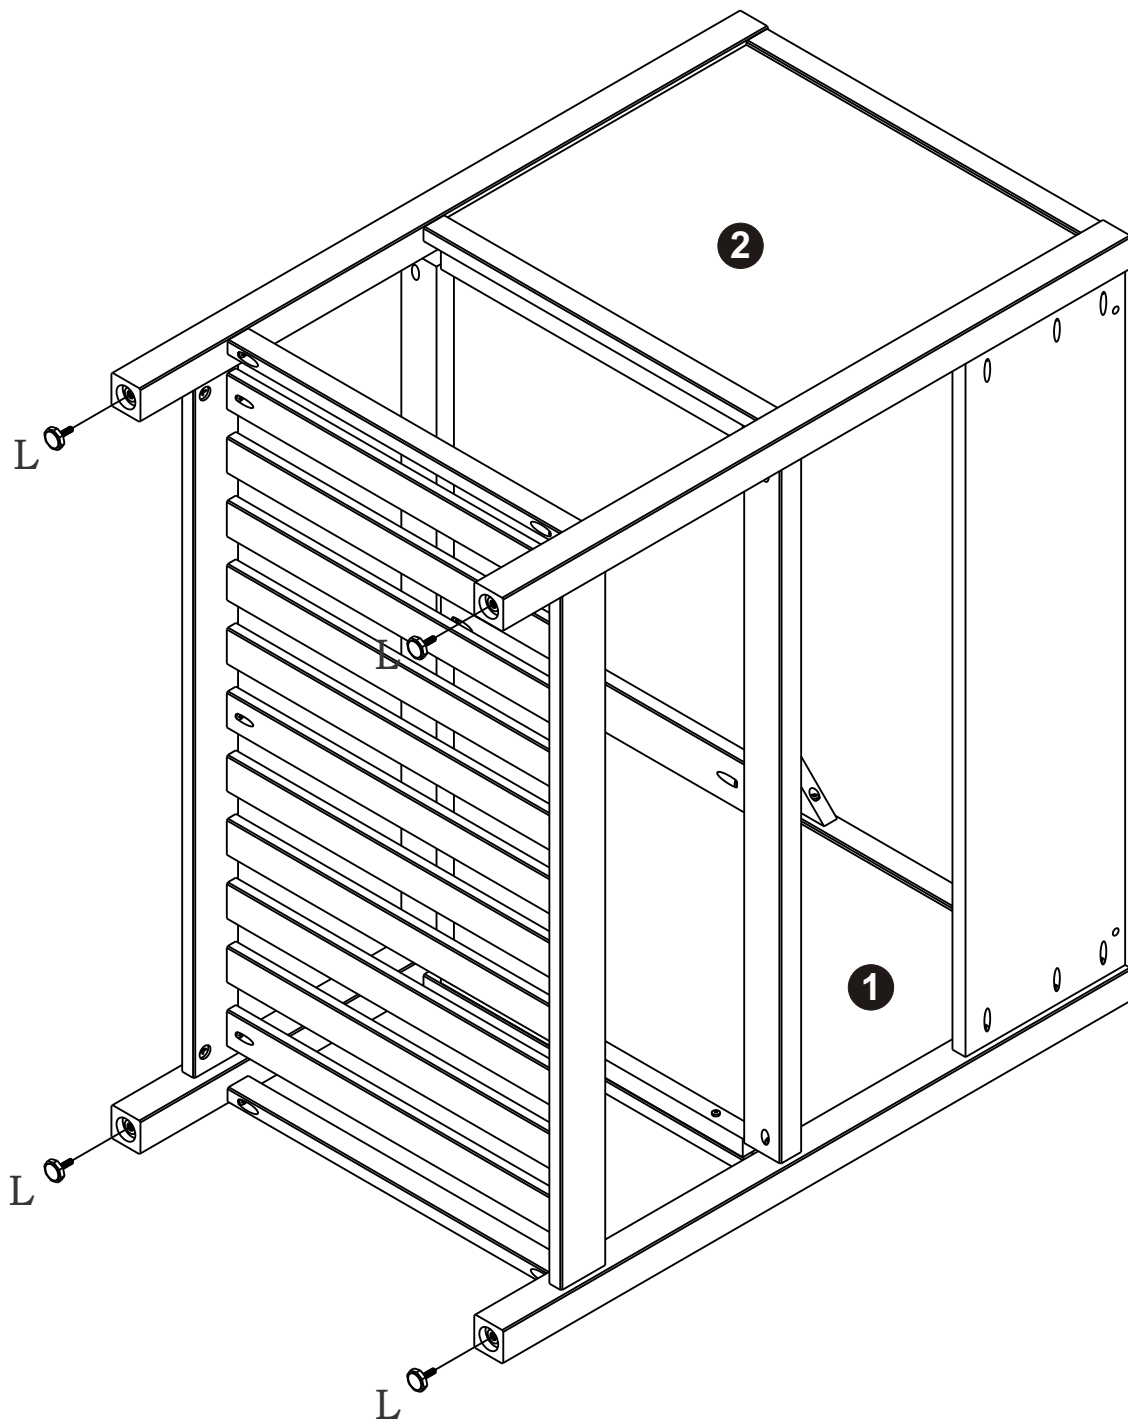

11

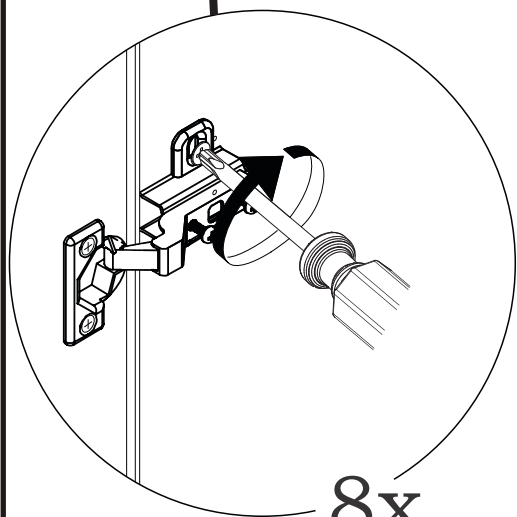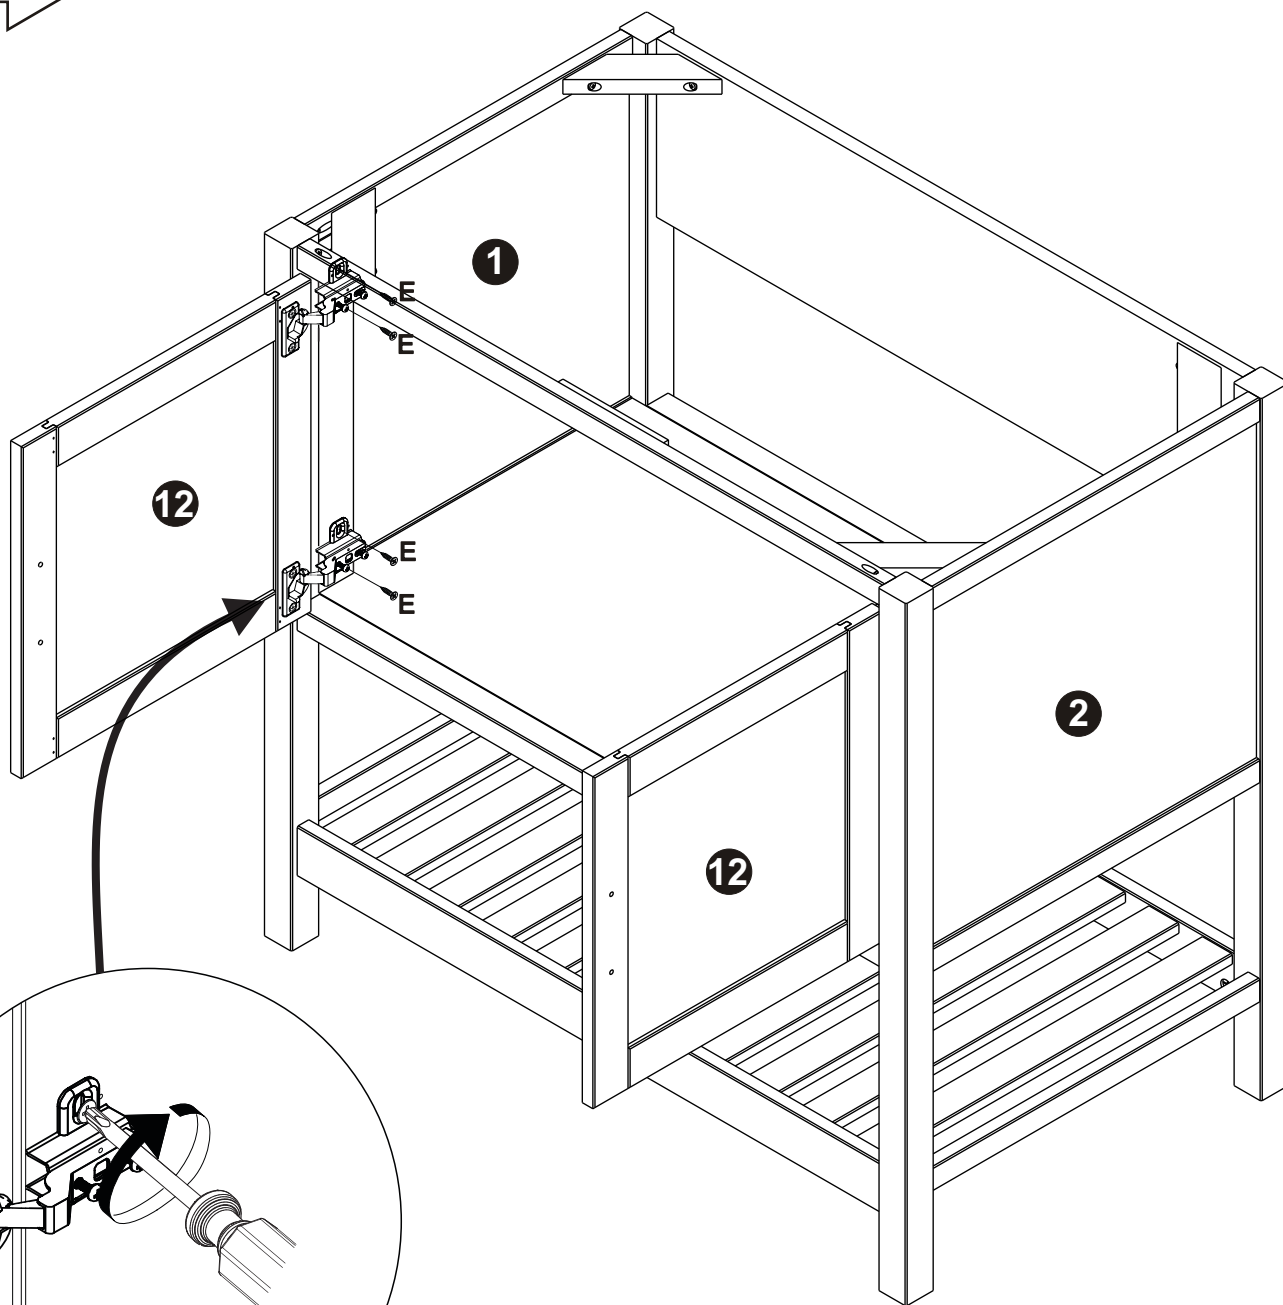

8x



E



Ø3,5x14mm

08

12

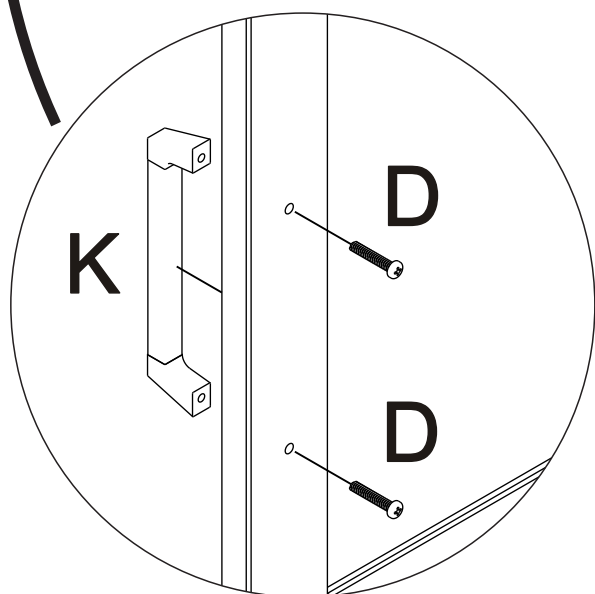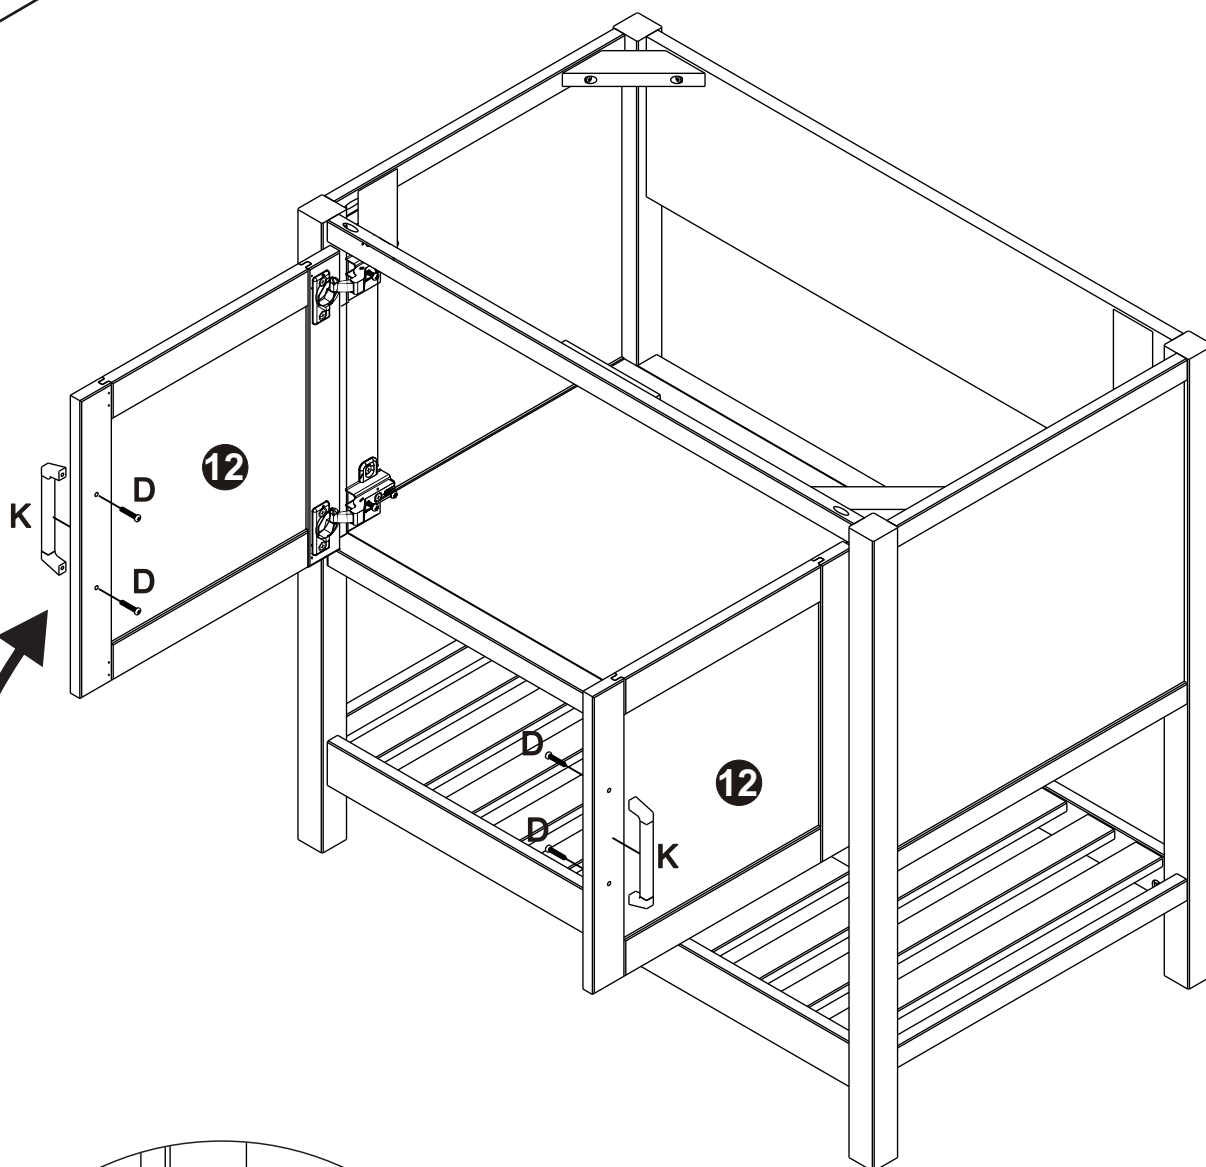

K		02
D		04

Ø4x25mm

13

