

Decker Commercial Metal Swivel Stool

Model #4900-827 Counter Stool Model #4900-831 Barstool


Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

CODE	QTY	HARDWARE		
1	4	1/4" x 32mm Allen Bolts		
2	4	1/4" x 35mm Allen Bolts		
3	8	Ф6.5 Spring Washers	0	
4	4	Φ6.5 x δ1.5 x Φ13 Flat Washers	<u></u>	
5	4	Φ6.5 x δ1.5 x Φ16 Flat Washers	0	
6	1	Allen Wrench		

CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Back	В	1	Seat
			С	1	Base

Date: 07-24-2018

Page 1 of 2

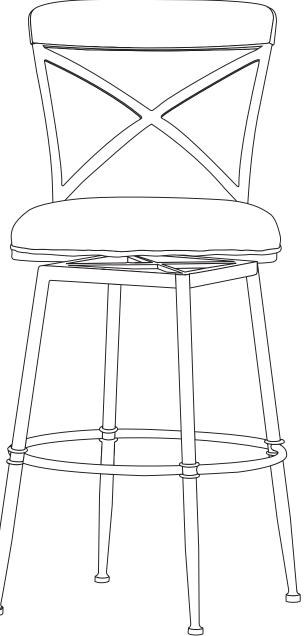

AWARNING

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- Do not tighten all bolts and screws completely until the entire unit has been assembled and set up.
- Be careful if using power tools as they can over tighten screws and strip threads.


CARE & MAINTENANCE: The touch of a soft cloth is all the maintenance the finish will ever need. Please do not use harsh or abrasive cleaners for polishing, as they may cause damage to the finish. Periodic checks are recommended to make sure that all hardware is securely tightened.



Decker Commercial Metal Swivel Stool

Date: 07-24-2018 Page 2 of 2

Model #4900-827 Counter Stool Model #4900-831 Barstool

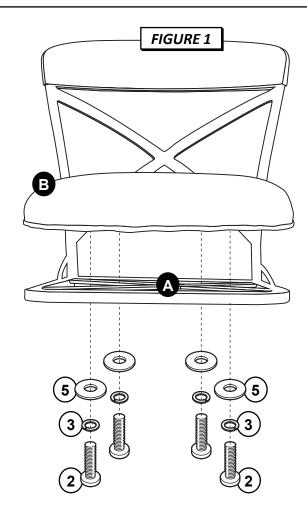

STEP 2 - Figure 2

Attach seat assembly to Base (C) using 4 Allen Bolts (1), 4 Spring Washers (3) and 4 Flat Washers (4). Tighten bolts with Allen Wrench (6) provided.

STEP 1 - Figure 1

Begin assembly by attaching Seat (B) to Back (A) using 4 Allen Bolts (2), 4 Spring Washers (3) and 4 Flat Washers (5). Tighten bolts with Allen Wrench (6) provided.

