

# WINNERS ONLY®











## ASSEMBLY INSTRUCTIONS
















PROD. NO : BWS3001CK, BWS3001K  
BW3001CK, BW3001K

Thank you for purchasing this quality product . Please read instructions thoroughly before unpacking assembly parts

Caution: Sharp, exposed staple tips can cause injury. Therefore, for your protection, please remove any exposed staples used in packing. Please keep all hardware parts out of the reach of children.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier and will help to prevent personal injury and to insure parts are not damaged during assembly process.
2. Before beginning, please check packing materials carefully for small parts that may have come loose inside the carton during shipping. Do not discard any packing material until all parts have been located. If any parts are missing, please contact your dealer for prompt replacement.
3. To prevent damage to your floor or carpet, please check the bottom of each piece of furniture for stain residues and rough surfaces and also check for staples or nails left after removing the packing materials .The manufacturer will not be held responsible if preventive steps are not taken prior to installation.
4. Please do not over tighten screws or bolts. During normal use everyday, screws, bolts , nuts and wooden plugs may loosen up. They should be periodically inspected and re-tightened to prevent damage to the furniture and (or) personal property or cause Always check to be sure all hardware on this list and below mentioned components are attached to the furniture property and kept tightened.
5. Please lay all parts and hardware on a non-abrasive surface such as a carpet and follow the assembly.

Components List : BW-3001CKH/BW-3001KH			
NO.	DESCRIPTION		Q' TY
A		H Right Leg	1pc
B		H Left Leg	1pc
C		Headboard	1pc
D		Wood stretcher	1pc
Components List : BW-3001CKF/BW-3001KF			
E		Footboard	1pc
F		Slat Roll (13pcs)	1Set
Components List : BW-3001CKR/BW-3001KR			
J		Slat Support Legs	3pcs
G		Side rail	2pcs
H		Cap rail ( For CK Bed Only)	2pcs
I		Slat Support Bar	1pc

Hardware List : BW-3001CKH/BW-3001KH				
NO.	DESCRIPTION	SIZE	SKETCH	Q' TY
1	Flat Washers	8*19*2mm		8pcs
2	Spring Washers	8mm		24pcs
3	Allen Bolts	1/4"*15mm		8pcs
4	Allen Bolts	5/16"*40mm		8pcs
5	Allen Key	4*30*80mm		1pc
6	Allen bolt	5/16" * 70mm		8pcs
7	Half moon washer	Ø5/16"		8pcs
8	Hexagon	Ø5/16"*12mm		8pcs
9	Wrench	12mm		1pc
10	"U" Bracket	64*59*52*2		2pcs
11	Wood Screw	#8 * 20mm		4pcs
12	Wood Screw	#8 * 32mm		6pcs
Hardware List : BW-3001CKR				
13	Flat Washers	8*19*2mm		8pcs
14	Spring Washers	8mm		8pcs
15	Allen Bolts	1/4"*55mm		8pcs


**TIP:** Store the Allen key and Wrench in assembly in this product drawer or use masking or painter tape to affix it to the underside of the product. This will make it easier to find if you want to periodically tighten bolts or disassemble the product.

# WINNERS ONLY®


## ASSEMBLY INSTRUCTIONS

PROD. NO : BWS3001CK, BWS3001K  
BW3001CK, BW3001K

STEP 1: Screw Metal Bracket to Wood Strecher (D) as shown in FIG.1

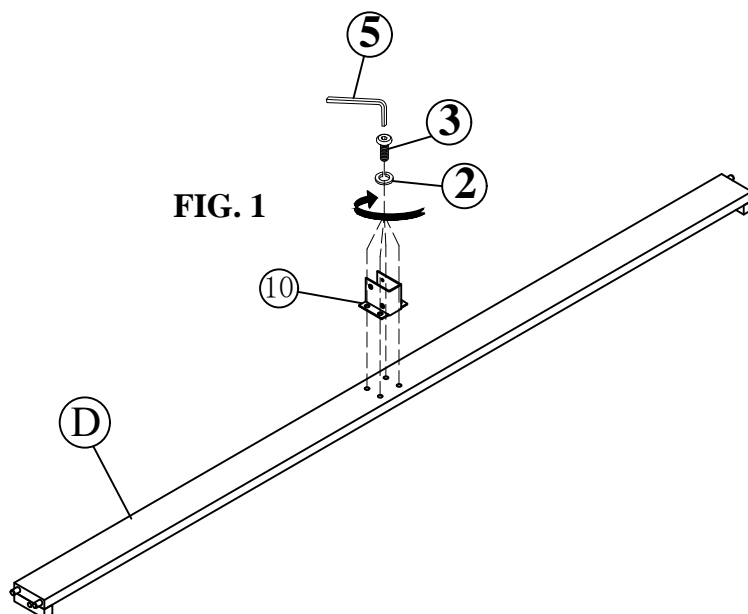

STEP 2: Attach the Wood Stretcher (D) to both Headboard Legs (A&B) using provided hardware as shown on FIG.2

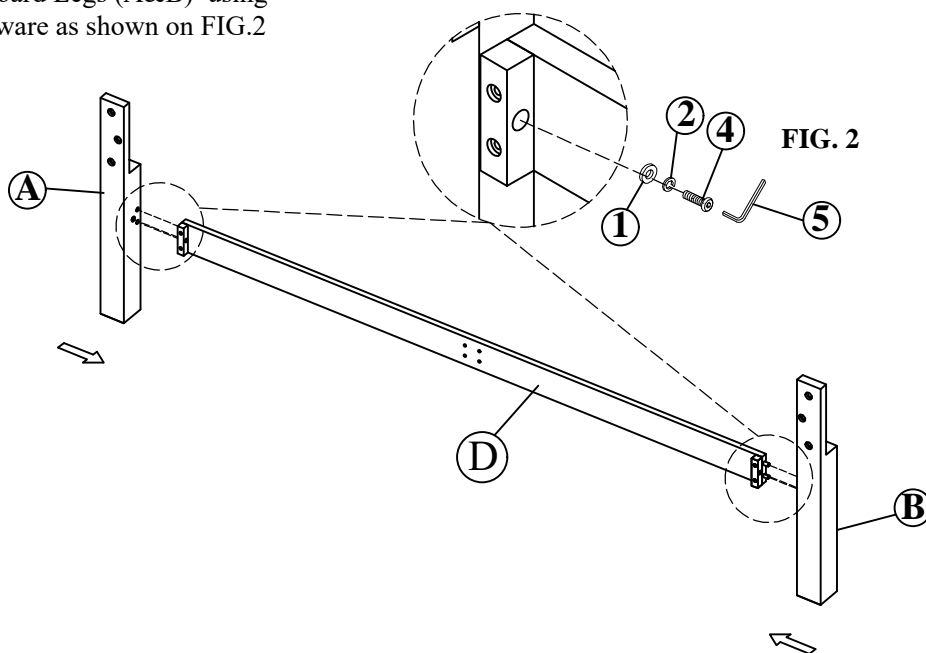


# WINNERS ONLY<sup>®</sup>

## ASSEMBLY INSTRUCTIONS

PROD. NO : BWS3001CK, BWS3001K  
BWX3001CK, BWX3001K


STEP 3: Attach the Headboard (C) to the Legs assembly (A,B&D) using provided hardware as shown on FIG.3

FIG.3

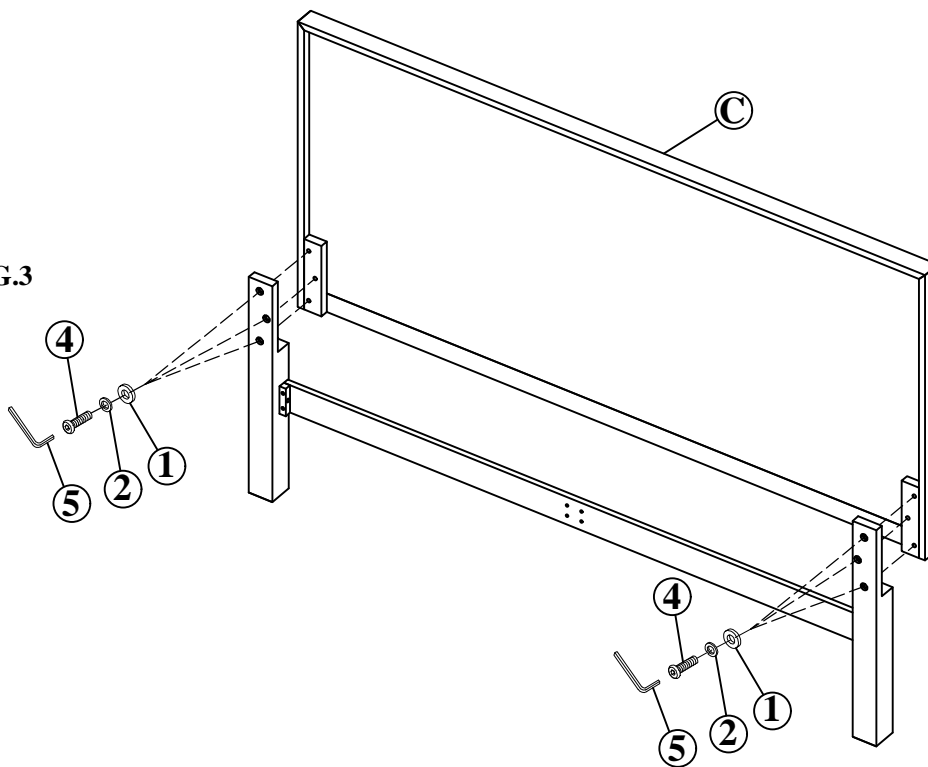

STEP 4: Screw Metal Bracket to Footboard (E) as shown in FIG.4

FIG. 4

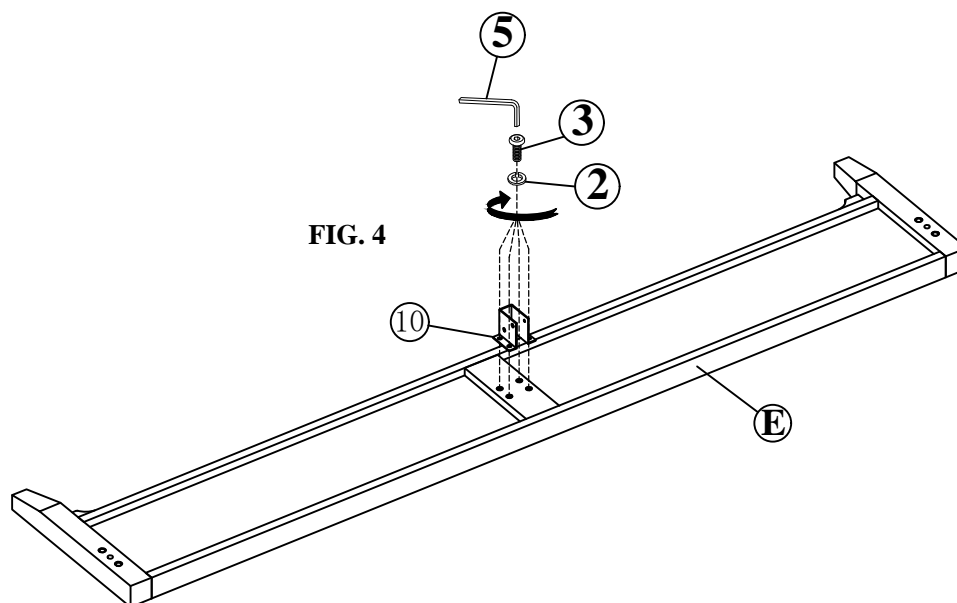


# WINNERS ONLY<sup>®</sup>

## ASSEMBLY INSTRUCTIONS

PROD. NO : BWS3001CK, BWS3001K  
BW3001CK, BW3001K

STEP 5: Attach both Side Rails (G) to the Headboard (A,B,D &C) and Footboard (E) using the provided hardware as shown on FIG.5

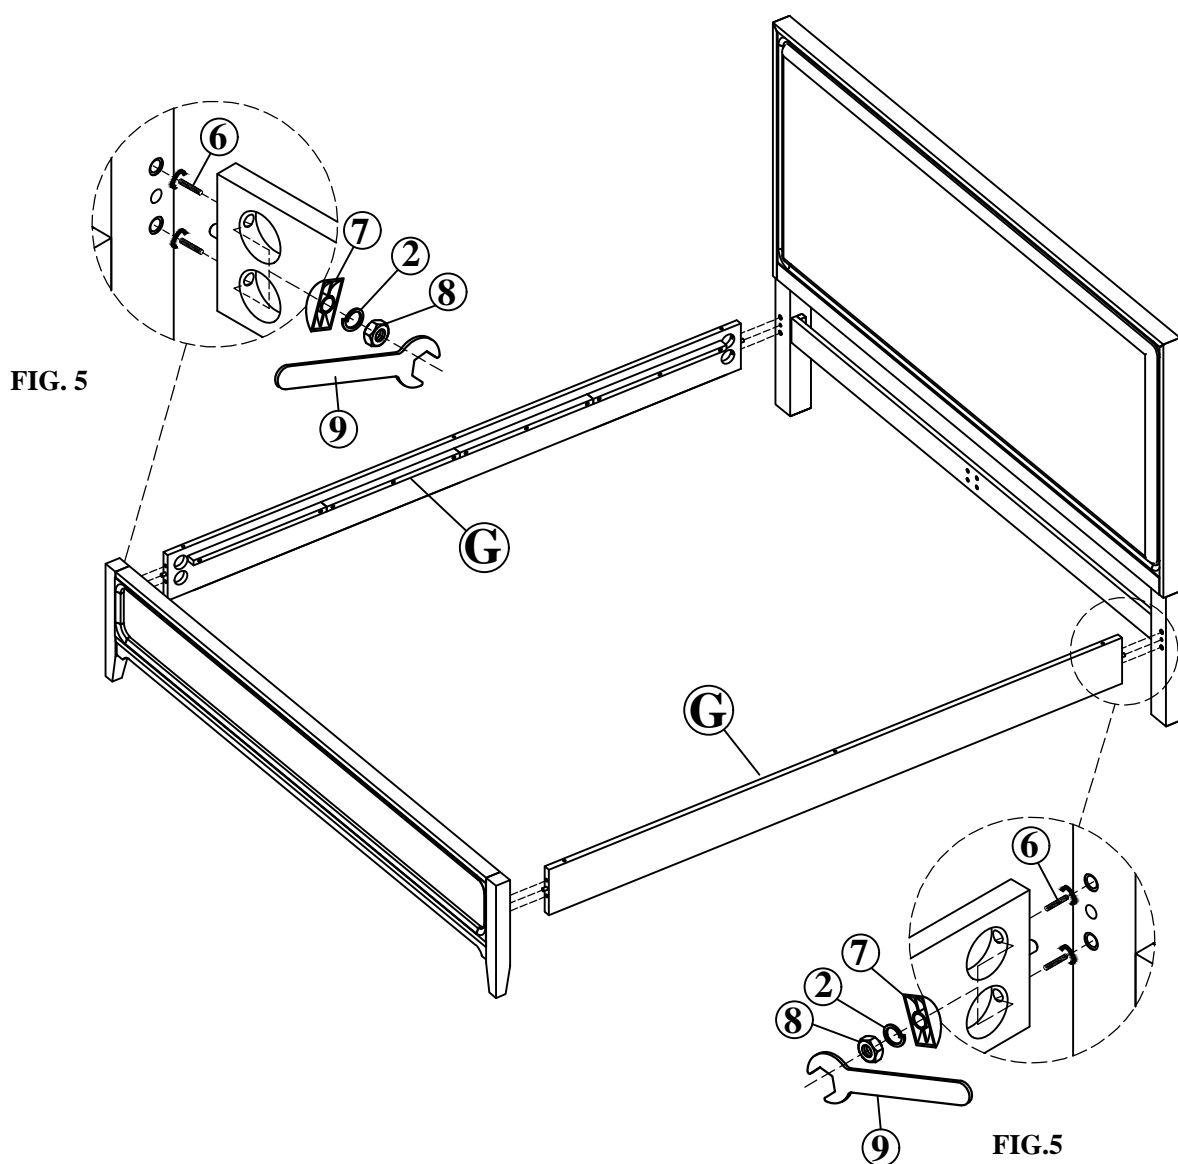

# WINNERS ONLY®

## ASSEMBLY INSTRUCTIONS

PROD. NO : BWS3001CK, BWS3001K  
BW3001CK, BW3001K

STEP 6: Attach the Slat Support Legs (J) to Slat Support Bar (I) as shown in FIG.6

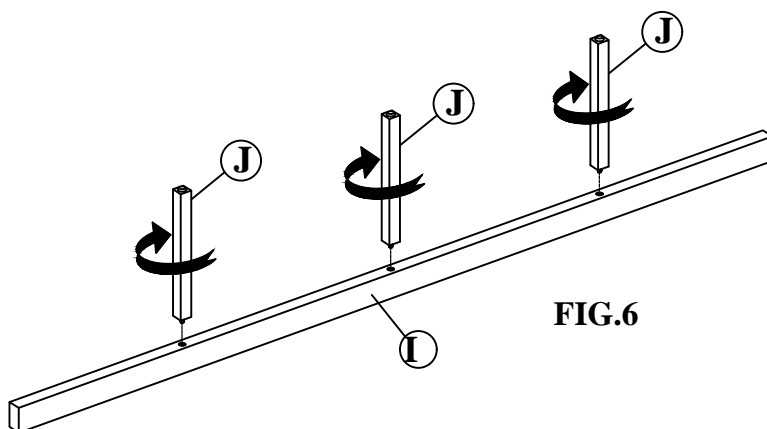


FIG.6

STEP 7: Insert and screw Slats Support Bar (I) to fit the metal bracket using provided hardware as shown in FIG.7

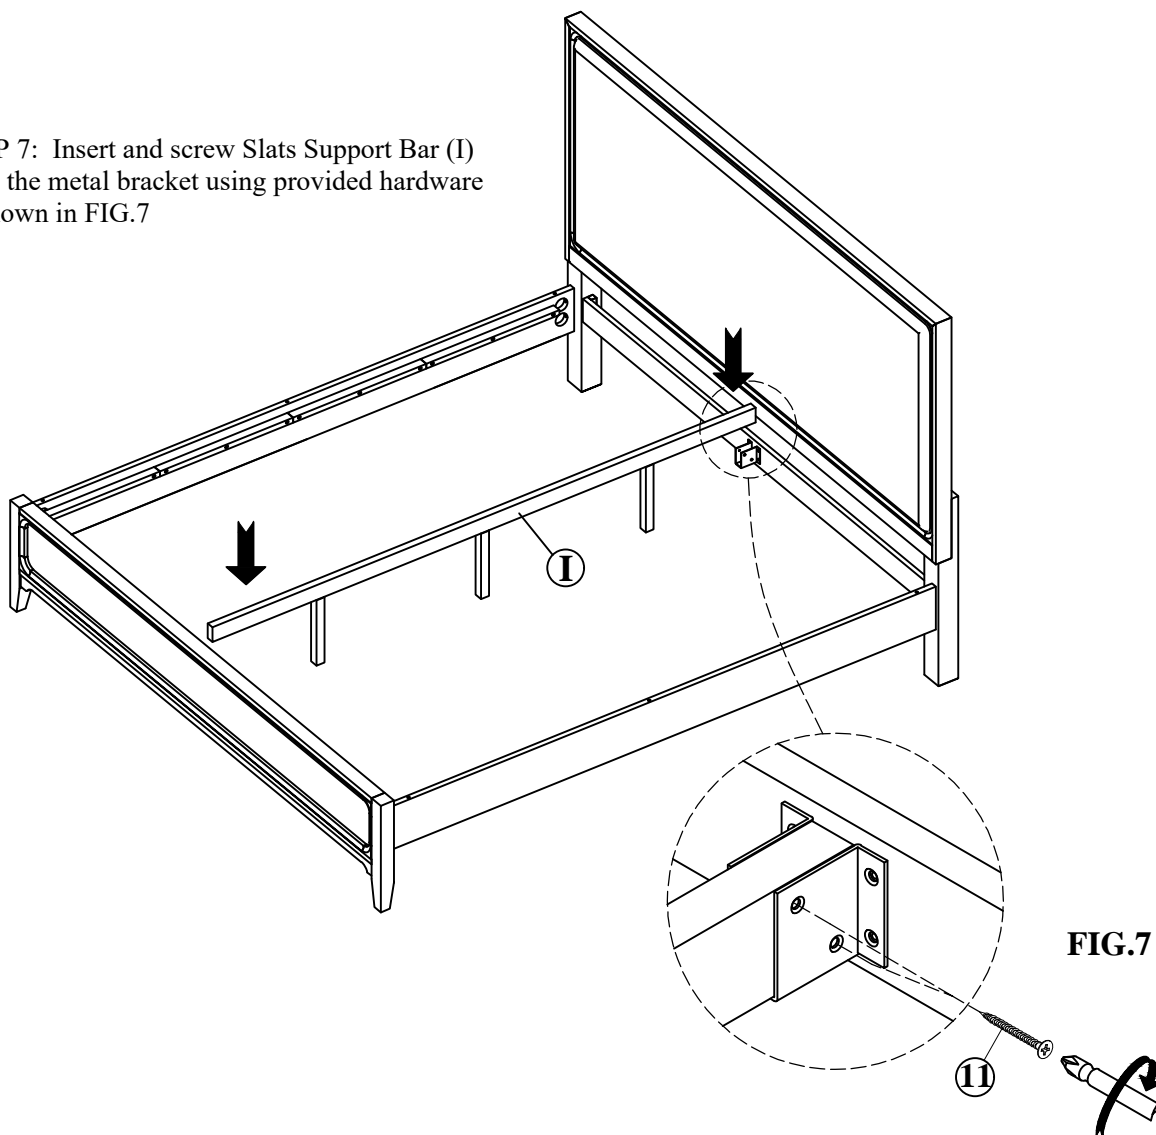



FIG.7

# WINNERS ONLY<sup>®</sup>

## ASSEMBLY INSTRUCTIONS

PROD. NO : BWS3001CK, BWS3001K  
BW3001CK, BW3001K

STEP 8: Attach the Slats Roll (F) to the Side Rails (G) using provided hardware as shown in FIG.8

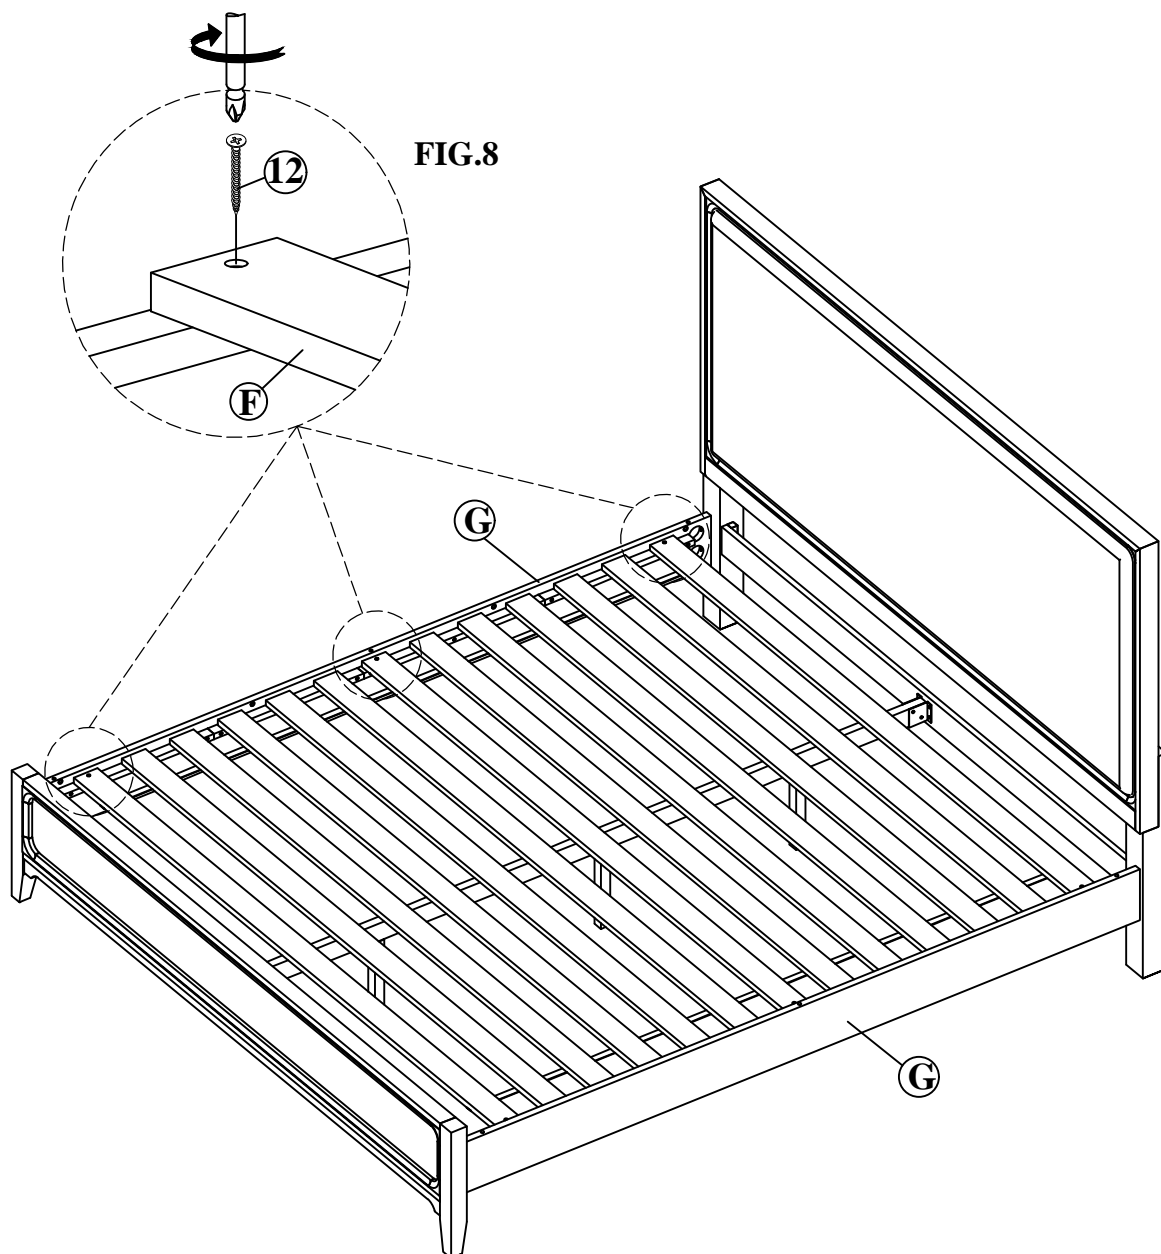


# WINNERS ONLY®

## ASSEMBLY INSTRUCTIONS

For California King Bed only

PROD. NO : BWS3001CK, BWS3001K  
BWX3001CK, BWX3001K

STEP 9 : Attach the Cap Rails (H) to top of the Side Rails (G) using provided hardware as shown in FIG.9

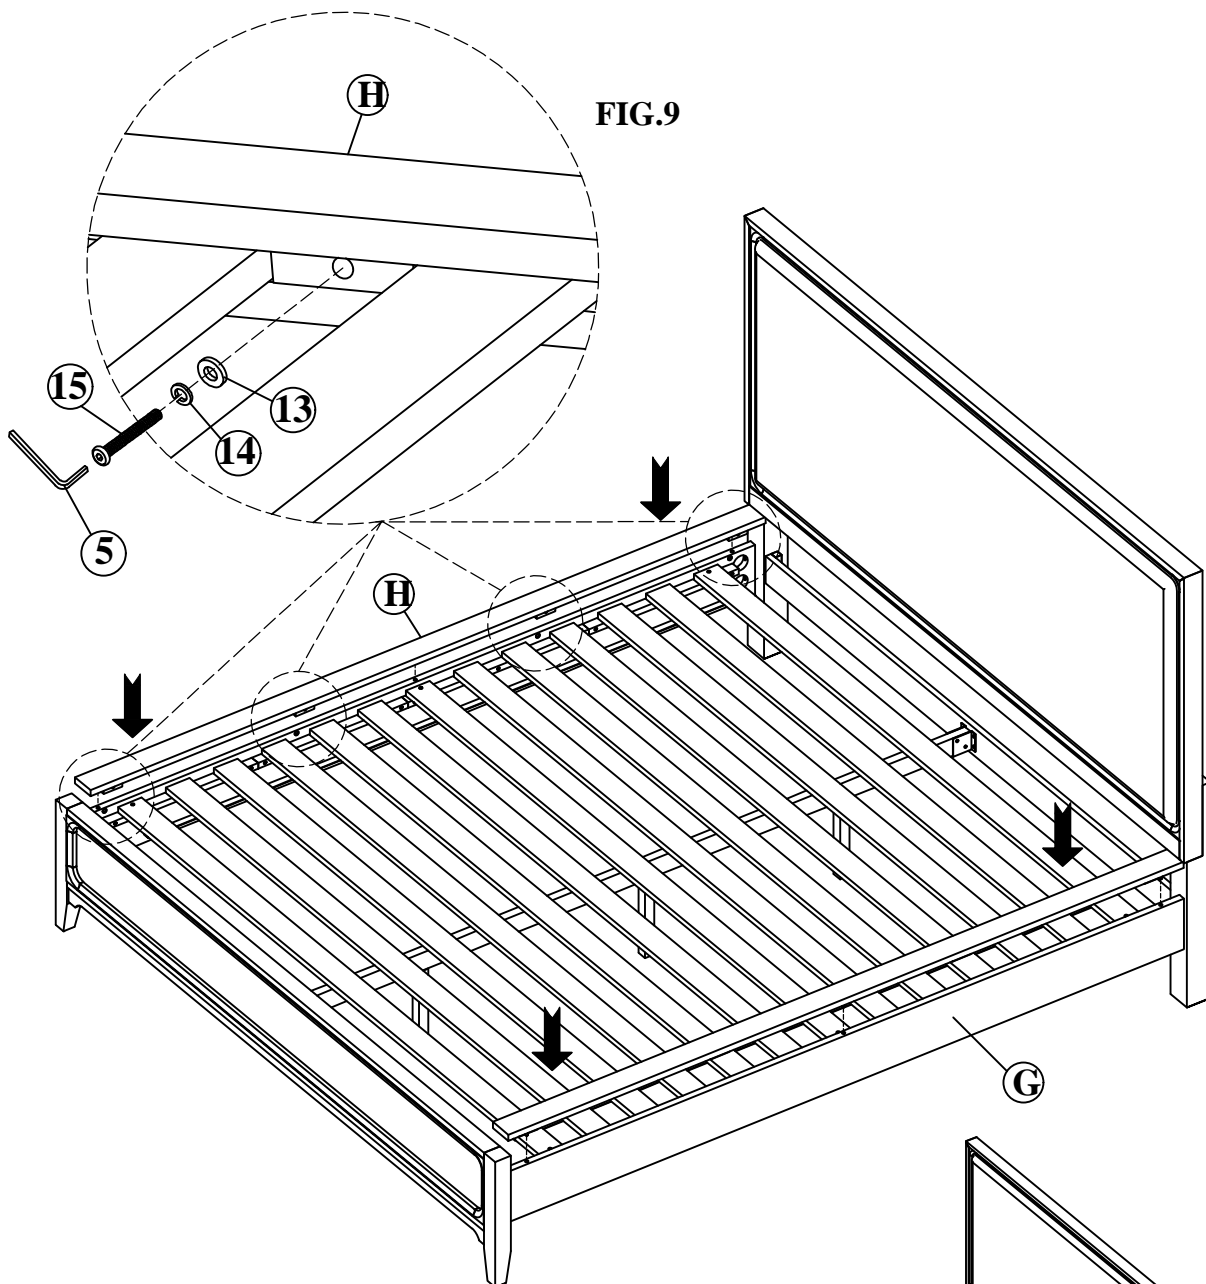

Assembly is now completed.

