



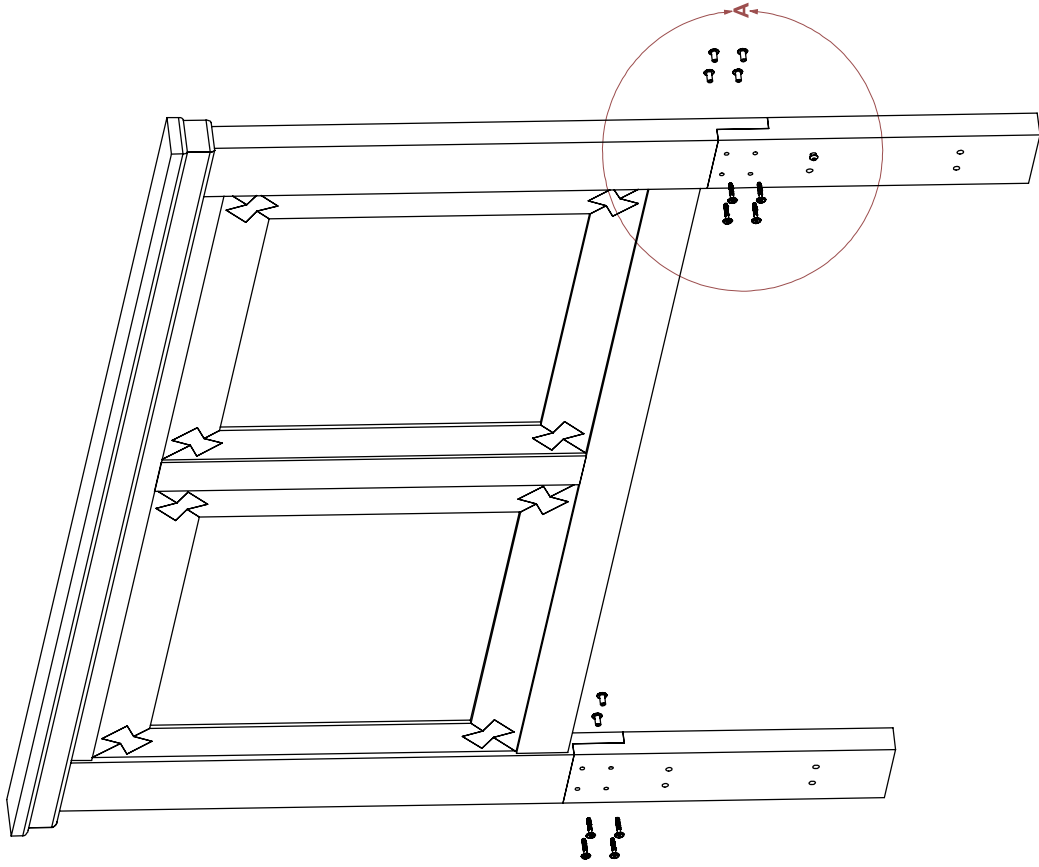

- 1.- WITH SOMEONE ELSE'S PLACE THE HEADBOARD IN FLAT SURFACE AND ALING THE LEGS.
- 2.- THEN FIX BOTH LEGS AS SHOWN IN THE IMAGE A AND INSERT THE JOINT CONNECTOR IN THE HOLES.

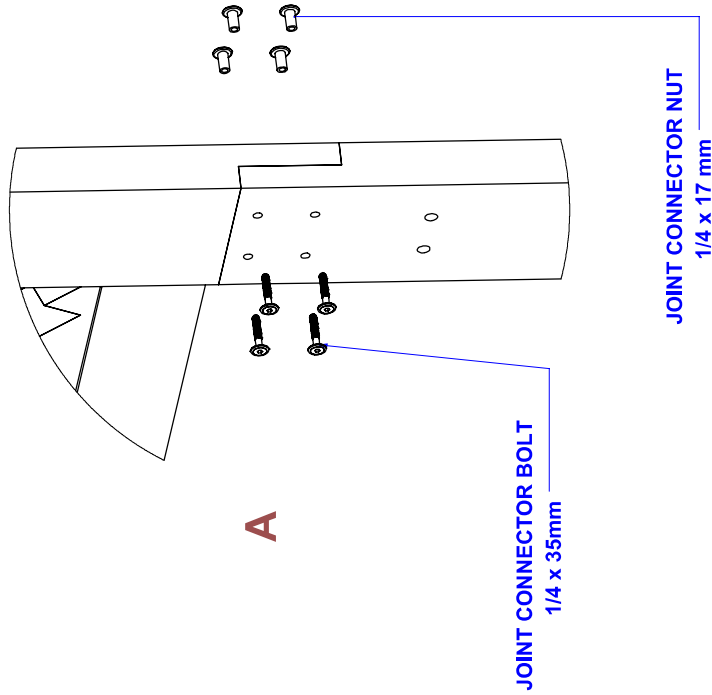

ASSEMBLY INSTRUCTION

1141 Y 1101 HBD

UI-HBD-E001

DESCRIPTION	#
JOINT CONNECTOR BOLT 1/4 x 35mm	8
JOINT CONNECTOR NUT 1/4 x 17mm	8
KEY ALLEN 5/32	2

ITEM	DESCRIPTION	#
1TOR043	TORNILLO PERNO UNION 1/4 x 35mm	8
1TUER006	TUERCA PERNO UNION 1/4 x 17mm	8
1HER250	LLAVE ALLEN 5/32	2



INTERNATIONAL
FURNITURE DIRECT

ASSEMBLY INSTRUCTION

1141 Y 1101 HBD

UI-HBD-E001