email: info@riverside-furniture.com

 (G)

Rafferty Pavestone Home Office Assembly Instructions

 (J)

8 pcs.

8 pcs.


Page 1 of 2

Made in Viet Nam

Warning:


 (F)

- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture MUST BE ASSEMBLED BY TWO PEOPLE on a soft surface such as a blanket or carpet.

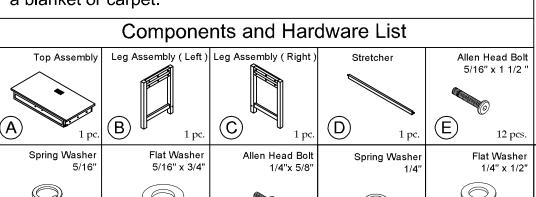

 (H)







(M)

Restraint Kit

1 pc.

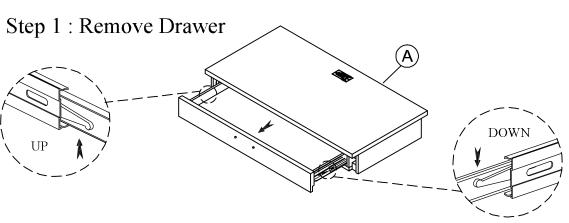

Step 2: Do not fully tighten the bolts

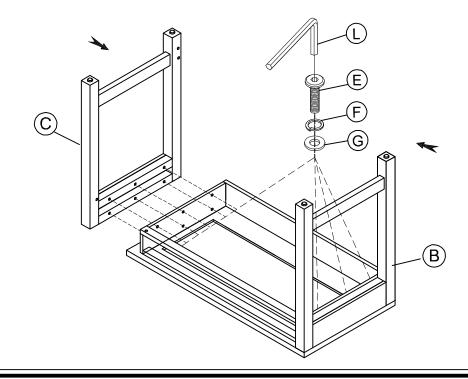

Riverside

email: info@riverside-furniture.com


Rafferty Pavestone Home Office Assembly Instructions

Page 2 of 2


Made in Viet Nam

#38330 Writing Desk


Step 3: Using the Allen key to tighten all bolts

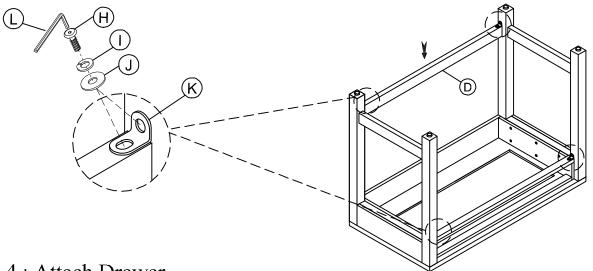

Step 4 : Attach Drawer

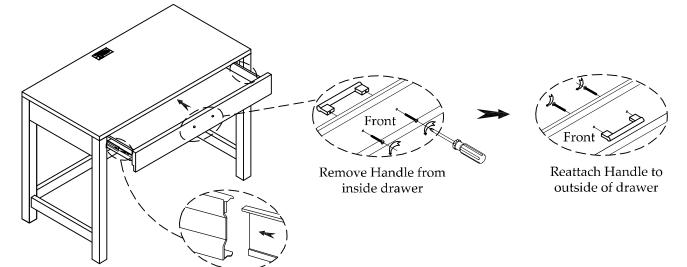

Step 5:

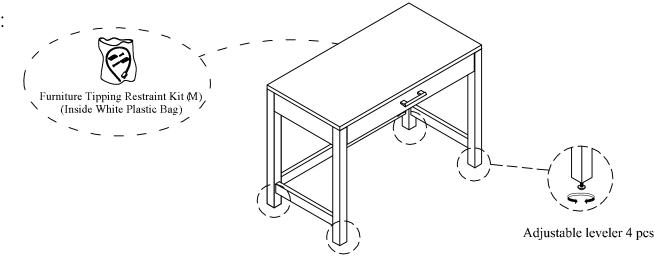

For product and personal safety, a Funiture Tipping Restraint kit has been included with this unit which can help to minimize the risk of the unit accidentally tipping forward, if used and properly installed per the manufacturer's instructions.