

C022-417-272
AVONDALE

1 of 2

ASSEMBLY INSTRUCTIONS


TWO (2) PEOPLE AND PHILIP WRENCH REQUIRED

PLEASE UNPACK ALL PARTS AND CHECK AGAINST PARTS LIST ON THIS INSTRUCTION SHEET BEFORE DISCARDING PACKING AND CARTON!!






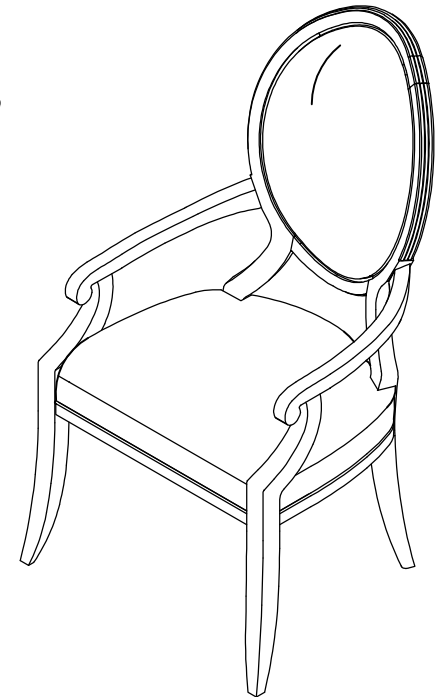

- 1) Assemble the Back Assembly (1) and the Seat Assembly (2) using Flat Washer (E) , Lock Washer (F) and Bolt (A) to fit into the center hole on the back of the Seat Assembly (2) tighten by Wrench provided (G) as shown in (Drawing A).
- 2) Assemble the Back Leg of the Back Assembly (1) and the Seat Assembly (2) securely using Flat Washers (E) , Lock Washers (F), Bolts (B) and Wrench provided (G) as shown in (Drawing A).
- 3) Assemble the Left Arm Assembly (3) & Right Arm Assembly (3) and the Seat Assembly (2) using Flat Washers (D) , Lock Washers (E), Bolt (C) and Wrench provided (G) as shown in (Drawing B).
- 4) Tighten all of the Bolts by Wrench provided (G) then return the chair to upright position.

***** NOTE KEEP THIS SHEET!!! *****

In the unlikely event that you would need a replacement part for your table, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.



C022-417-272		
ARM CHAIR		
Part Description	Part No.	QTY
Chair Back (1)	C022-417-272-4062	1
Seat Assembly (2)	C022-417-272-4061	1
Left Arm Assembly (3)	C022-417-272-4063	1
Right Arm Assembly (4)	C022-417-272-4064	1
Nail-in Floor Glide	CLA-417-272-4086	4

NO	Hardware List			Q'ty
A		Bolt	5/16"x2-1/2"	1
B		Bolt	5/16"x3-1/4"	4
C		Bolt	1/4"x1-1/2"	2
D		Nut	5/16"	4
E		Flat Washer	5/16"	9
F		Lock Washer	5/16"	9
G		Wrench	5/16"	1

