




## CLAW FOOT ALUMINUM




## **FOOT PLACEMENT**

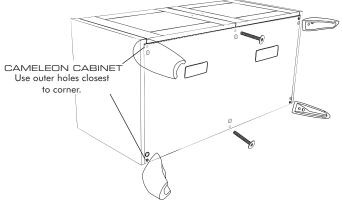







**A.** Slip a bolt through the bottom of each foot and through the bottom shelf into threaded aluminum post.



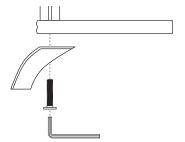



**C.** Fasten posts not requiring feet with provided connector bolts.

\*Chameleon triples require center foot provided with fastening nut/bolt to be located in bottom center hole.