

ASSEMBLY INSTRUCTION

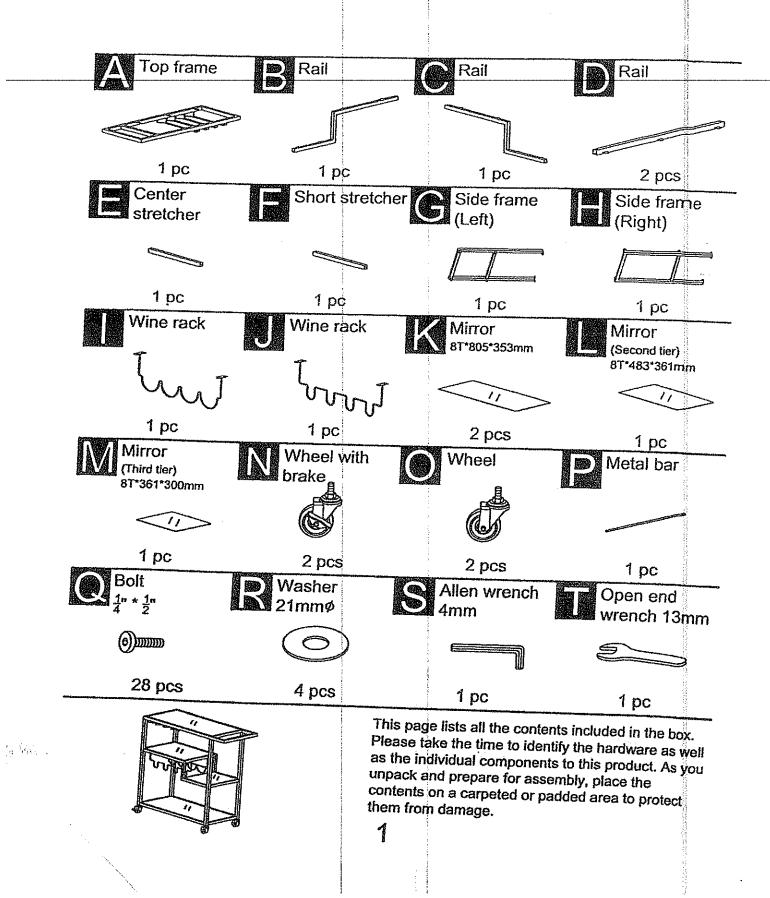

Assemble side frame (G) to top frame (A) with bolt (Q) as shown in drawing then tighten with Allen wrench (S).

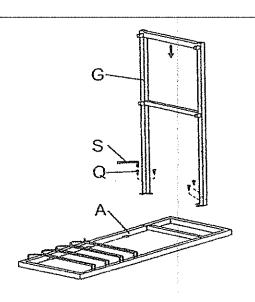

Q @______() X 4 pcs

X 1 pc


X 1 pc

X 4 pcs

 α


2

Install center stretcher (E) and short stretcher (F) to rail (C) with bolt (Q) as shown in drawing then tighten with Allen wrench (S). Install center stretcher (E) and short stretcher (F) to rail (B) with bolt (Q) as shown in drawing then tighten with Allen wrench (S).

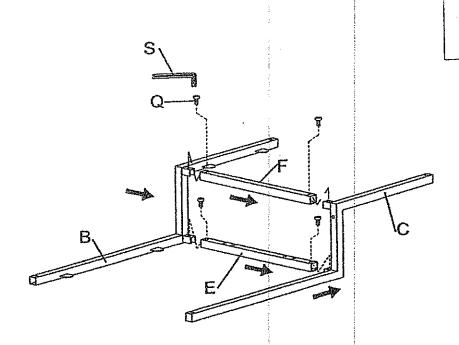




Install rail (B) and (C) and (D) to side frame (G) with bolt (Q) as shown in drawing then tighten with Allen wrench (S), install metal bar (P) to rail (C), install rail (B) and (C) and (D) to side frame (H) with bolt (Q) as shown in drawing then tighten with Allen wrench (S), side frame (H) to top frame (A) with bolt (Q) as shown in drawing then tighten with Allen wrench (S).

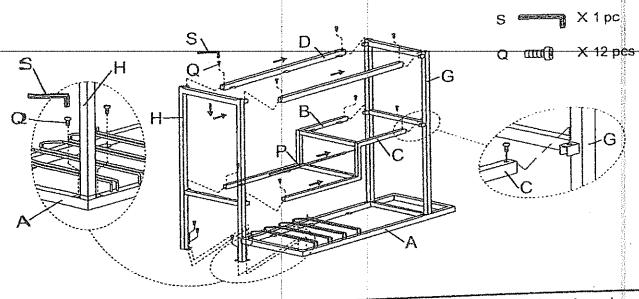


4

Install wine rack (I) and (J) to center stretcher (E) and side frame(H) with bolt (Q) as shown in drawing then tighten with Allen wrench (S).

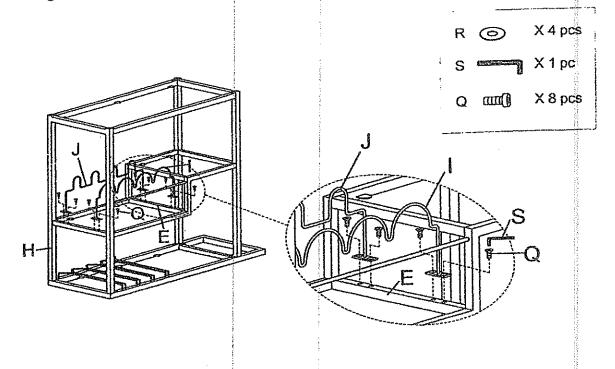




Install wheel (O) to side frame (H) with washer (R) then tighten with open end wrench (T), install wheel (N) to side frame (G) with washer (R) then tighten with open end wrench (T).

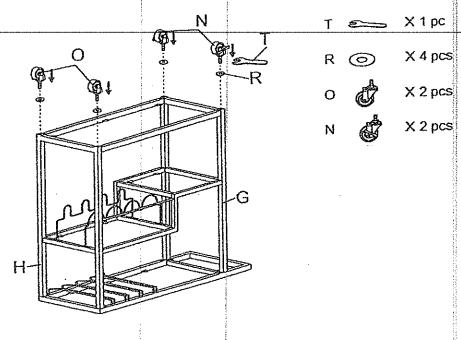



Upright the glass metal kitchen cart and mirror (K) into the top frame and bottom frame. Then place mirror (L) into the second tier of the glass metal kitchen cart and place mirror (M) into the third tier of the glass metal kitchen cart.

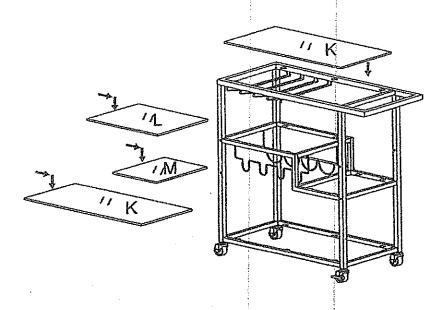

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.