

T399-0 HARDWARE KIT

(H) M6x11/2inch (4)
ALLEN BOLT

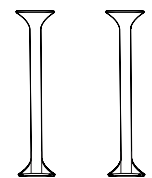

(F) M6x3/8inch (8)
ALLEN BOLT

(G) ALLEN WRENCH - 4mm

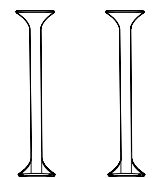

(I) FLAT PAD (4)

FRONT VIEW

T399-0

A x 2 	B x 2 	C x 1 	D x 1 
E x 1 	F x 8  M6X3/8inch	G x 1  4mm	H x 4  M6X11/2inch
			I x 4 

A x 2 	B x 2 	C x 1 	D x 1
E x 1 	F x 8 M6X3/8inch	G x 1 4mm	H x 4 M6X11/2inch
I x 4 			

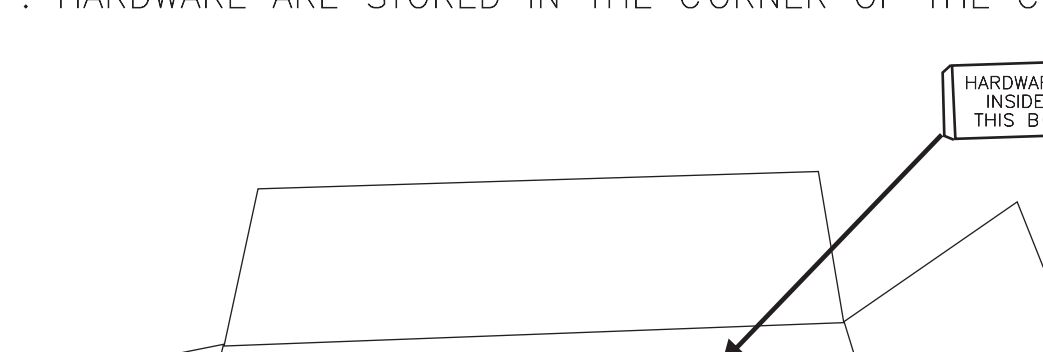
A x 2 	B x 2 	C x 1 	D x 1 
E x 1 	F x 8  M6X3/8inch	G x 1  4mm	H x 4  M6X11/2inch
			I x 4 


RTAParts@ashleyfurniture.com

1-844-966-0809

T399-0

NOTE : HARDWARE ARE STORED IN THE CORNER OF THE CARTON



The diagram shows a 3D perspective of an open-top rectangular box. The box is drawn with simple black outlines. The top flaps are folded outwards. In the bottom-left corner of the box's interior, there is a small square representing hardware. A black arrow points from a text box to this square. The text box is a rectangle with a double border and contains the text "HARDWARE INSIDE THIS BOX" in all caps.

NOTE : ASSEMBLY INSTRUCTION FOR MULTIPLE UNITS, THE PARTS/LABEL INDEX ARE SEPARATED FOR DIFFERENT UNITS.
THE PARTS ARE LOCATED INSIDE THE BOX AS BELOW.



A B C D E

NOTE : ASSEMBLY INSTRUCTION FOR MULTIPLE UNITS, THE PARTS/LABEL INDEX ARE SEPARATED FOR DIFFERENT UNITS.
THE PARTS ARE LOCATED INSIDE THE BOX AS BELOW.



A B C D E

T399-0

1

Fx8
M6x3/8inch

A

B

C

F

G

x8

T399-0

3

1x4

x4

T399-0

⑤

NOTE: Level the table and tighten all bolts with the allen wrench.

NOTA: Nivele la mesa y apriete todos los pernos con el destornillador.

REMARQUE : Remarque : nivelez la table et serrez tous les boulons avec le tournevis.

