


ASSEMBLY INSTRUCTION


ITEM : Vanna Full / Queen Bed

NO	PARTLIST		QTY
1		HEADBOARD	1PC
2		HEADBOARD LEG WITH LABEL "L"	1PC
3		HEADBOARD LEG WITH LABEL "R"	1PC
4		FOOTBOARD	1PC
5		FOOTBOARD LEG	2PCS
6		SIDE RAIL (L)	1PC
7		SIDE RAIL (R)	1PC
8		SLAT	4PCS
9		SUPPORT LEG WITH ADJUSTABLE FEET	4PCS
10		PLUG	1PC
ITEM	HARDWARE		QTY
A		JCBB SCREW M8 x 20MM	4PCS
B		JCBB SCREW M8 x 50MM	4PCS
C		JCBC SCREW M6 x 35MM	8PCS
D		WOOD DOWEL M10 x 30MM	4PCS
E		SPRING WASHER M6 x 12MM	4PCS
F		FLAT WAHSER M6 x 19MM	4PCS
G		SPRING WASHER M8 x 13MM	4PCS
H		FLAT WAHSER M8 x 22MM	4PCS
I		CSK SCREW M4 x 32MM	8PCS
J		L-KEY M4 x 100MM	1PC
K		L-KEY M5 x 65MM	1PC
L		JCBC SCREW M6 x 70MM	2PCS
M		WOOD DOWEL M8 x 30MM	2PCS


STEP 1

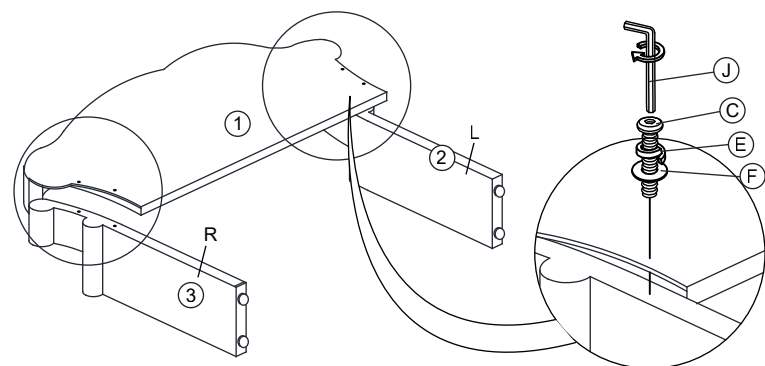


STEP 2

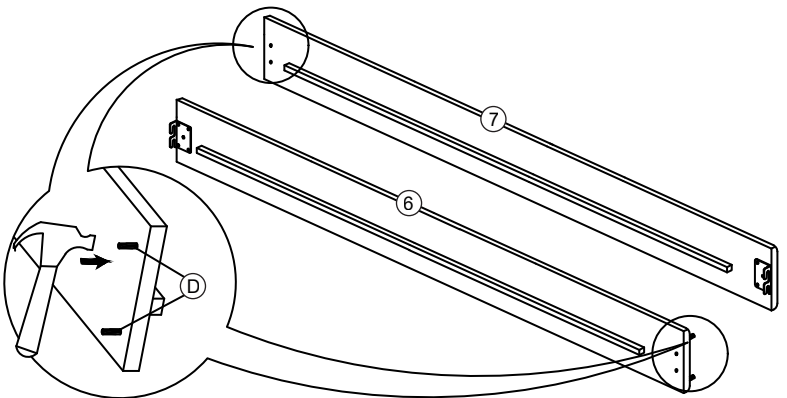

STEP 3

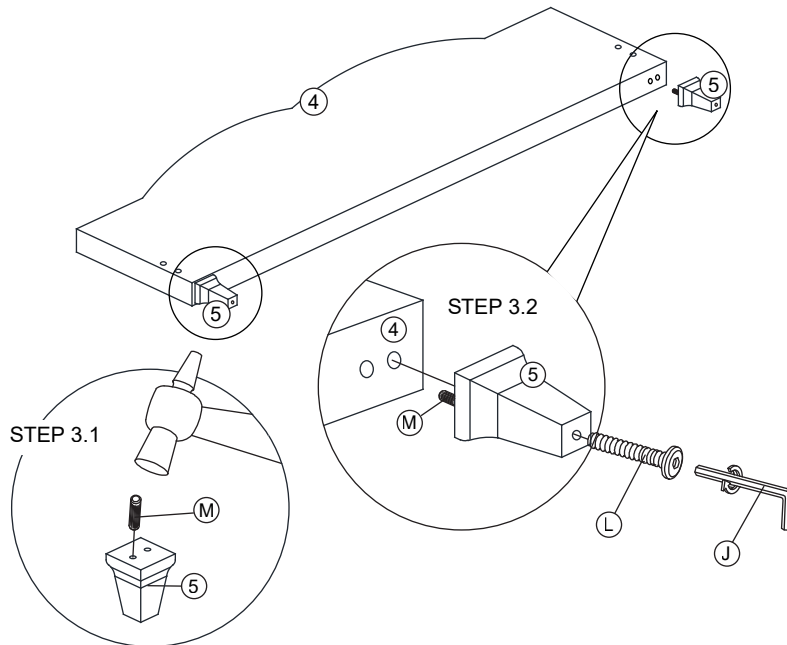


STEP 4

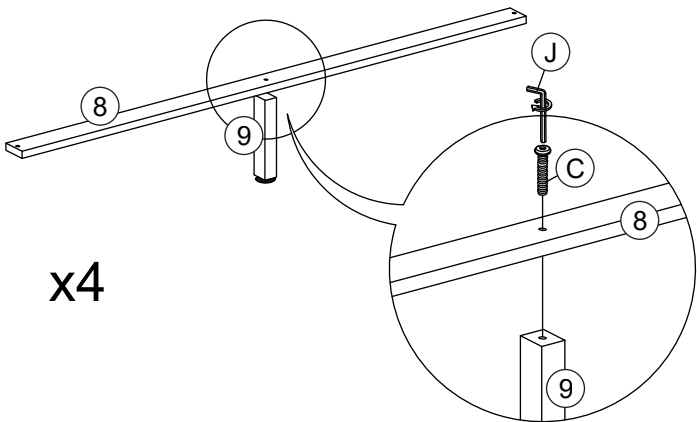


ASSEMBLY INSTRUCTION


STEP 5

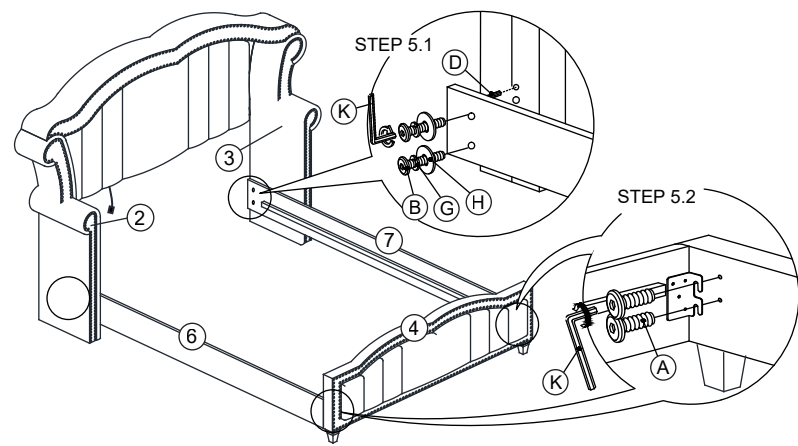

STEP 6

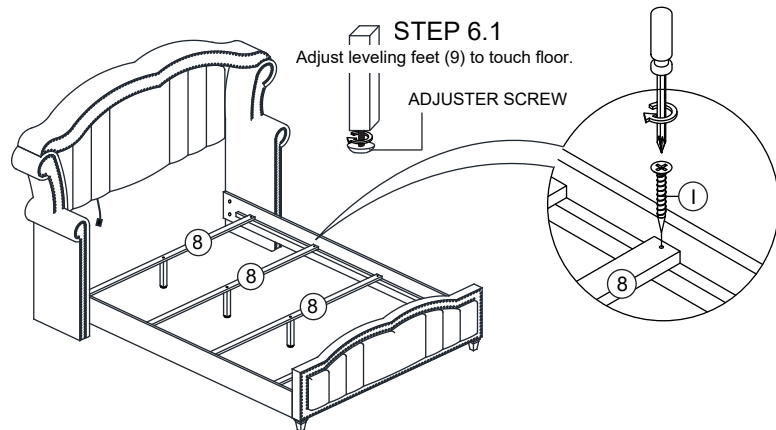

STEP 7

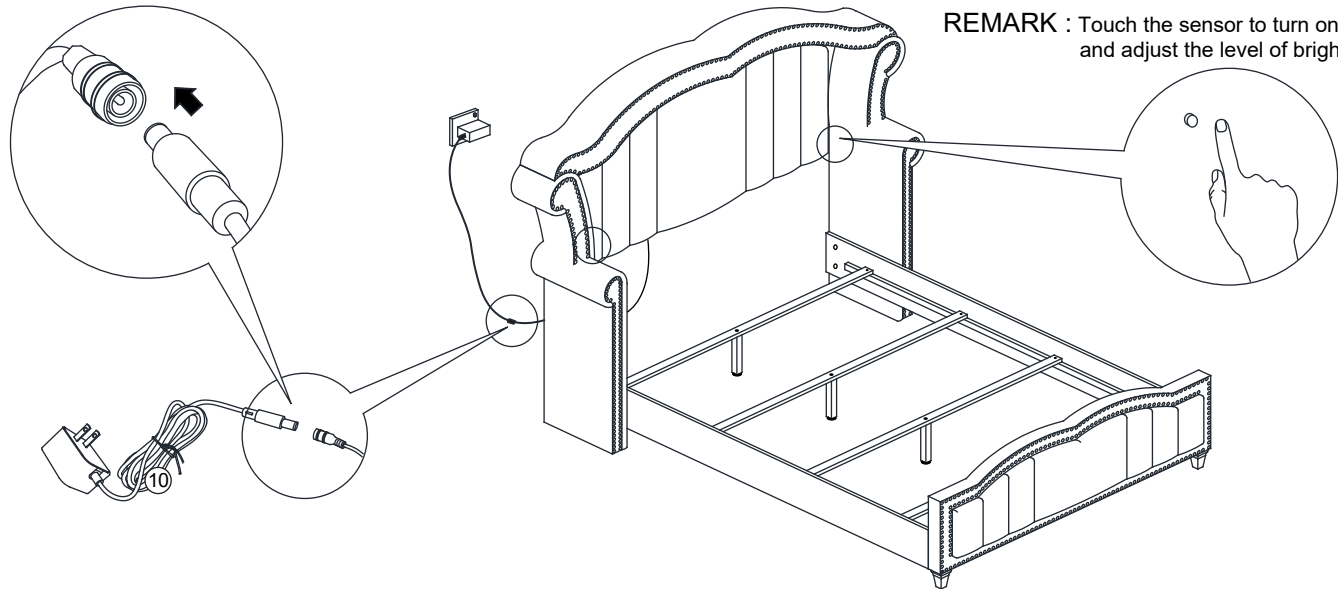

REMARK : Touch the sensor to turn on the light and adjust the level of brightness.