

TOV



Follow us!

Show your new purchase some love by tagging it on our Instagram!

 @tovfurniture


 516-888-3355

 hello@tovfurniture.com

 www.tovfurniture.com

If the future is female—your furniture should be, too. No mahogany in sight. Sexy settees shaped like lips. Price points for any budget. At TOV, we do things differently.

TOV

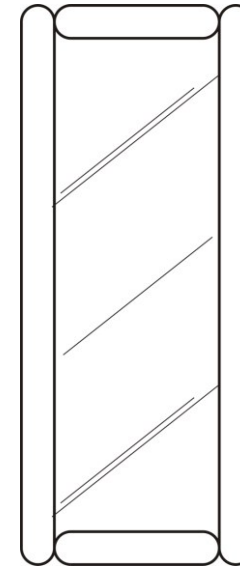


Cozzi Mirror

DON'T BE BORING.

Hardware and Components

 **A** x 1 pc

 **B** x 4 pcs


 **C** x 4 pcs (40mm x 3mm)

Step 1

Main box contain a hardware pouch inside. Look for the red streamer.


Step 2

Use the cleat (A) make four marks where holes will be drilled into the wall.

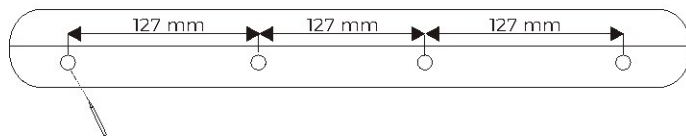


Step 3

Drill holes into the wall.

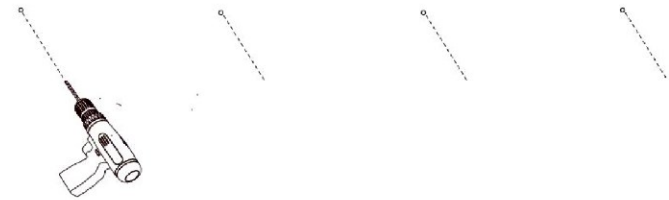


Step 4

Screw the cleat into the wall

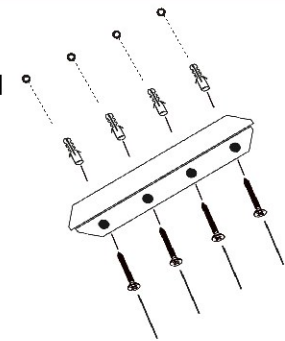

Step 5

Hang the Mirror on Wall

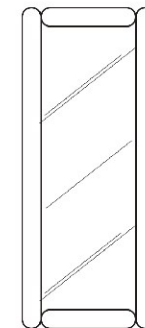

Stuck?
Contact our team @ 516-888-3355

Scan for product care!

