



# ASSEMBLY INSTRUCTIONS

ITEM NO : B2180-1  
DRESSER

## BOX OF DRESSER


ITEM	DRAWING	DESCRIPTION	QTY
A		DRESSER	1
B		BUN FOOT **Is inside the Dresser Bottom Right Drawer	4
C		GLASS TOP **Packed in an inner box inside the Dresser Please handle with care	1
D		SUPPORT LEG WITH PLASTIC WASHER & ADJUSTER **Located in the Bottom Drawer	1

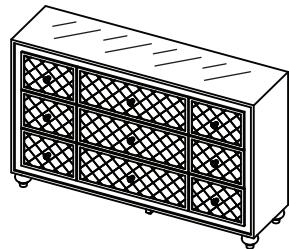

**COMPLETED DRESSER ASSEMBLY**


NOTE: GLASS TOP HANDLE WITH CARE "FRAGILE"

## STEP 1

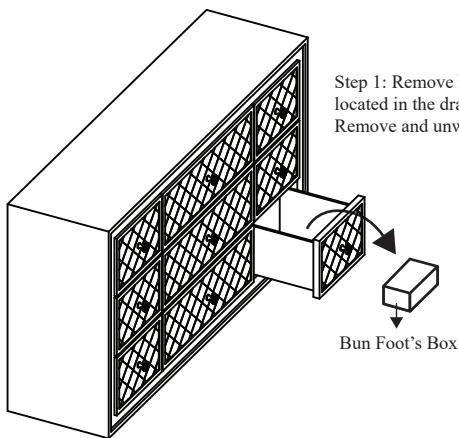


Step 1: Remove Bun Foot carton located in the drawer of the casegood. Remove and unwrap each foot.


## STEP 2

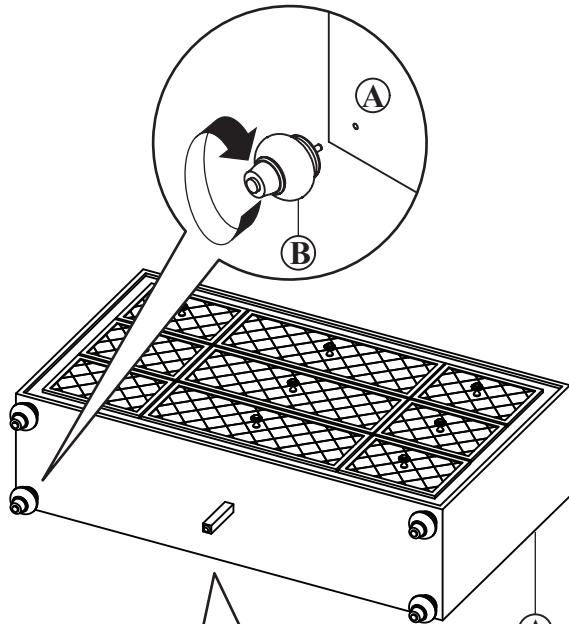

## STEP 3

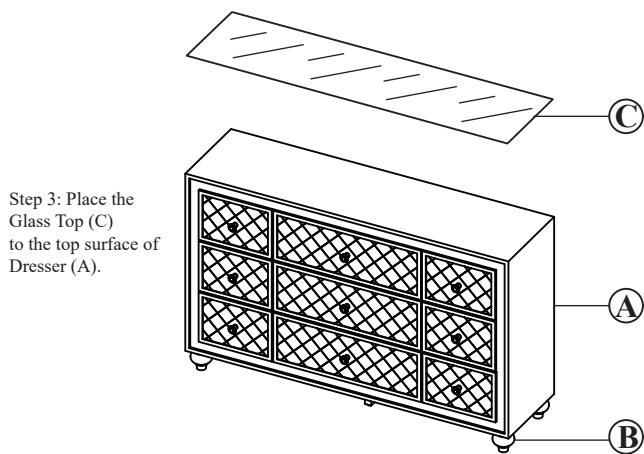

Step 3: Place the Glass Top (C) to the top surface of Dresser (A).

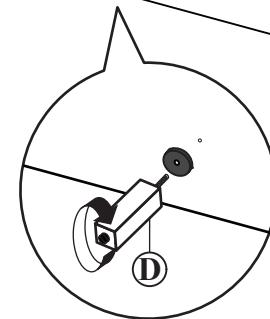

THE ANTI TIPPING HARDWARE IS LOCATED IN THE TOP RIGHT SIDE FRONT DRAWER OF THE DRESSER.

NOTE : MUST TIGHTEN SCREWS PERIODICALLY. WITH USE SCREW MAY BECOME LOOSE.  
CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

## CLEANING INSTRUCTION

After assembly, clean & polish the completed parts if necessary with soft cloth and industrial recognized furniture polish

MADE IN MALAYSIA