


MOE'S

h o m e c o l l e c t i o n

ASSEMBLY INSTRUCTIONS.

ELLISON MIRROR

EW-1036-16 EW-1036-34

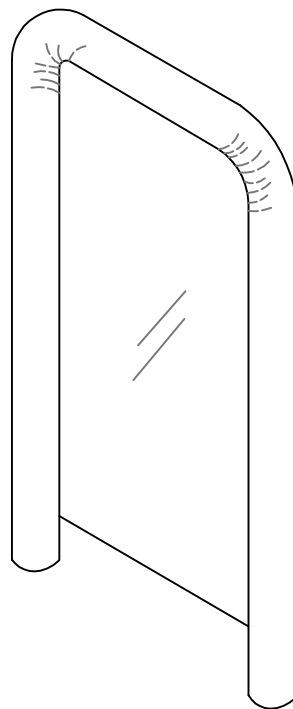

THANK YOU FOR YOUR PURCHASE!

PARTS AND HARDWARE.

NO.	DESCRIPTION	IMAGE	QTY
A	Mirror		1
B	Anti Tip Kit 1		2
C	Anti Tip Kit 2		4
D	Anchor bolt		4
E	SCREWS (M4*20mm)		4
F	SCREWS (M4*40mm)		4


NOTES.

Thank you for purchasing this quality product! Be sure to check all packing material carefully for small part that may have come loose inside the carton during shipping.

Caution: The item is heavy, assembly should be performed by two people.

STEP 1.

Assembling Anti Tip Kit 2 (C) with screws (E) at the Back of the Mirror Top.

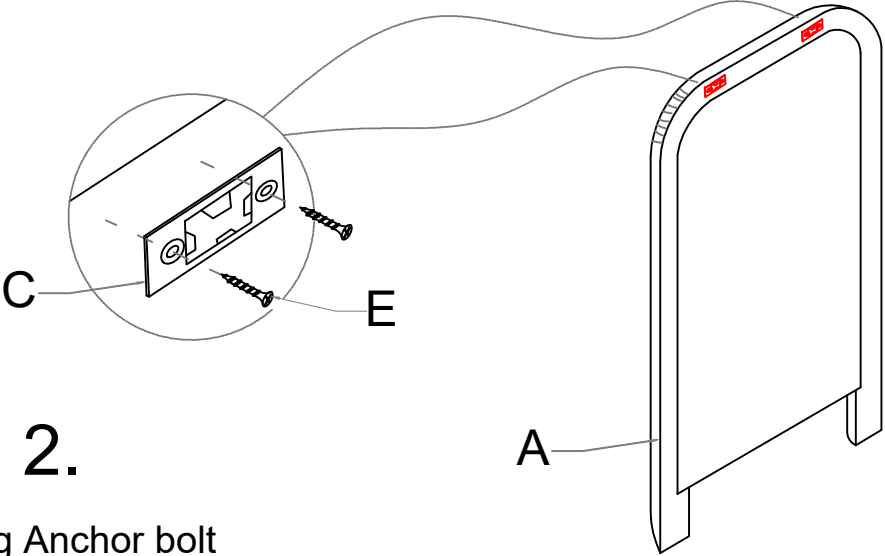

STEP 2.

Assembling Anchor bolt (D) to the wall with Anti Tip Kit 2(C) and SCREWS(F) . Connected Anti Tip Kit 2(C) with Anti Tip Kit 1(B)

