

# ASSEMBLY INSTRUCTION






Description : QUEEN BED

Model : SANTORINI-METALLIC WHITE-QB-HB / FB & SLATS / SR



METALLIC WHITE/MARBLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


## PART LIST :

No.	Description	Diagram	Quantity
A	HEADBOARD		1
B	FOOTBOARD		1
C	SIDE RAIL		2
D	WOODEN SLAT		3
E	WOODEN SUPPORT		3

## HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
F	CB SCREW		M4 x 32mm	6
G	SCREW DRIVER (*)			1

(\*) The manufacturer does not provide item G.

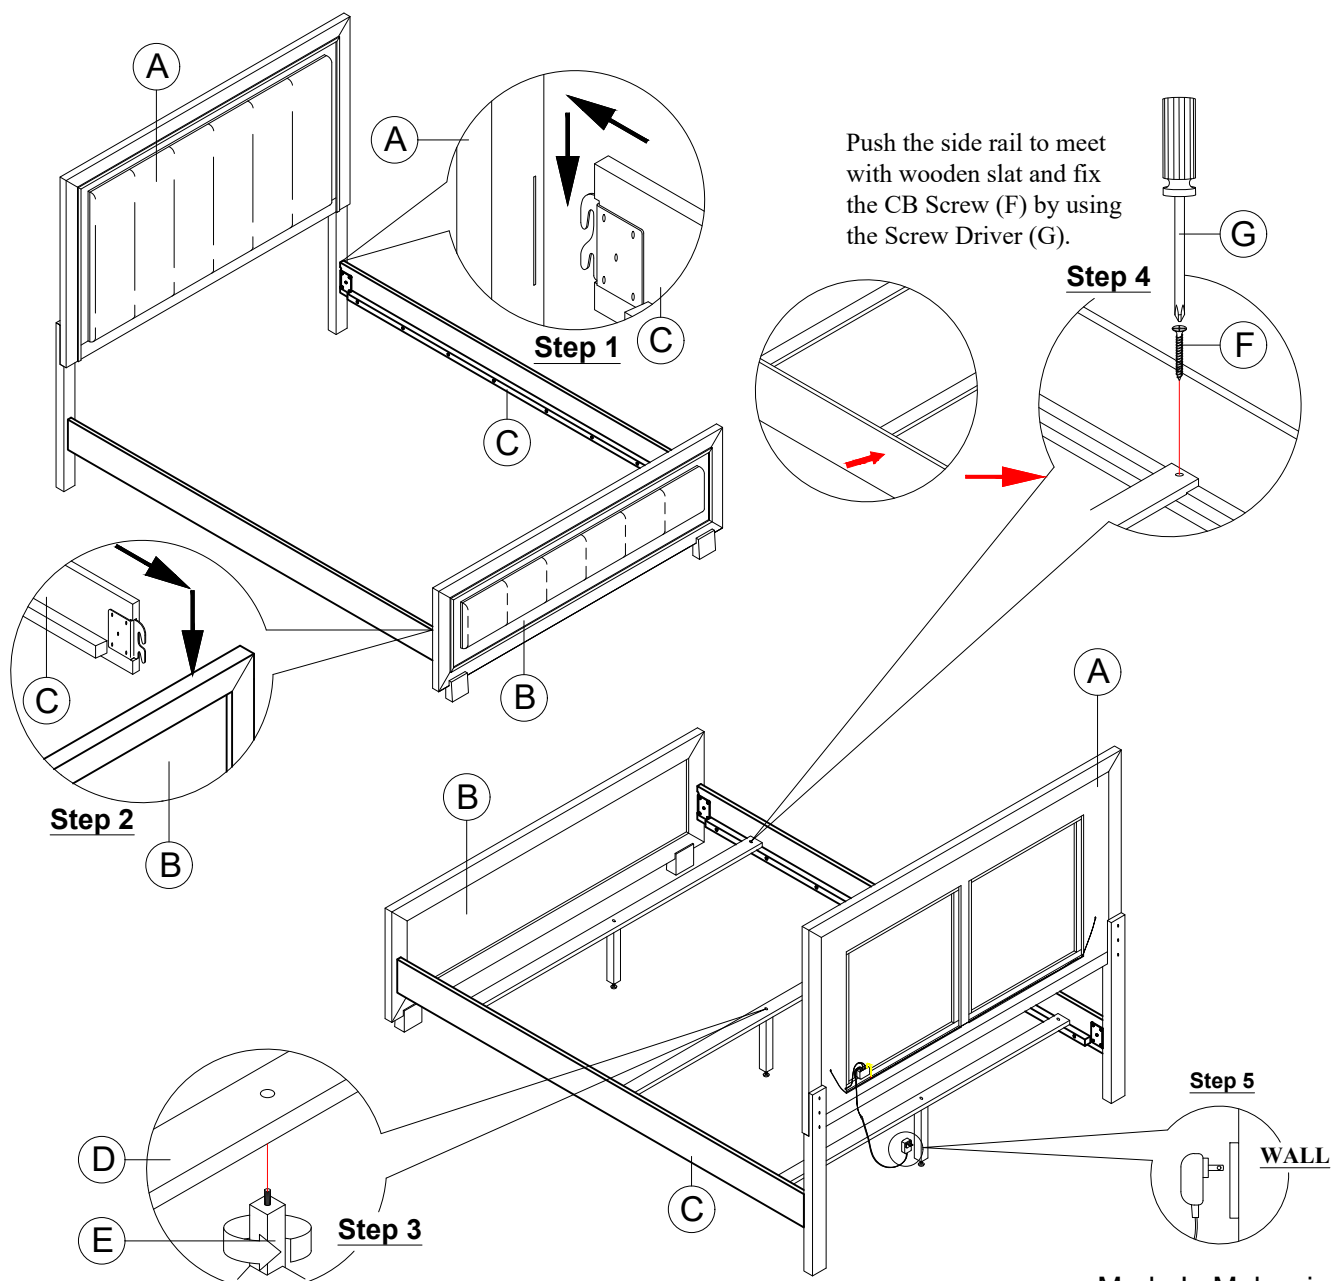

Made In Malaysia


1856WCS GLO QUEEN BED

# ASSEMBLY INSTRUCTION

Model : SANTORINI-METALLIC WHITE-DR & MR

Description : MIRROR & DRESSER  
METALLIC WHITE MARBLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

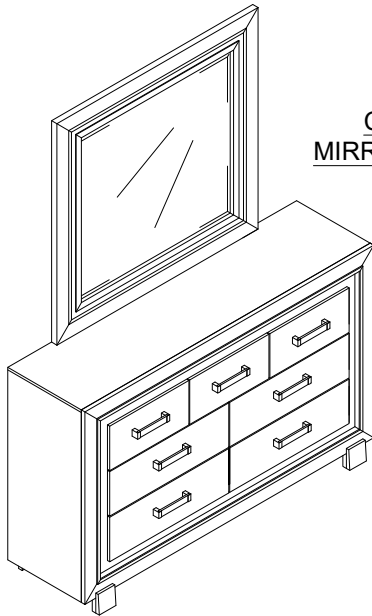

**COMPLETED  
MIRROR & DRESSER  
ASSEMBLY**


## PART LIST :

No.	Description	Diagram	Quantity
A	MIRROR		1
B	DRESSER		1
C	MIRROR SUPPORT		2

## HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
D	CB SCREW		M4 x 32mm	8
E	SCREW DRIVER (*)			1
F	ADAPTOR			1

(\*) The manufacturer does not provide item E.

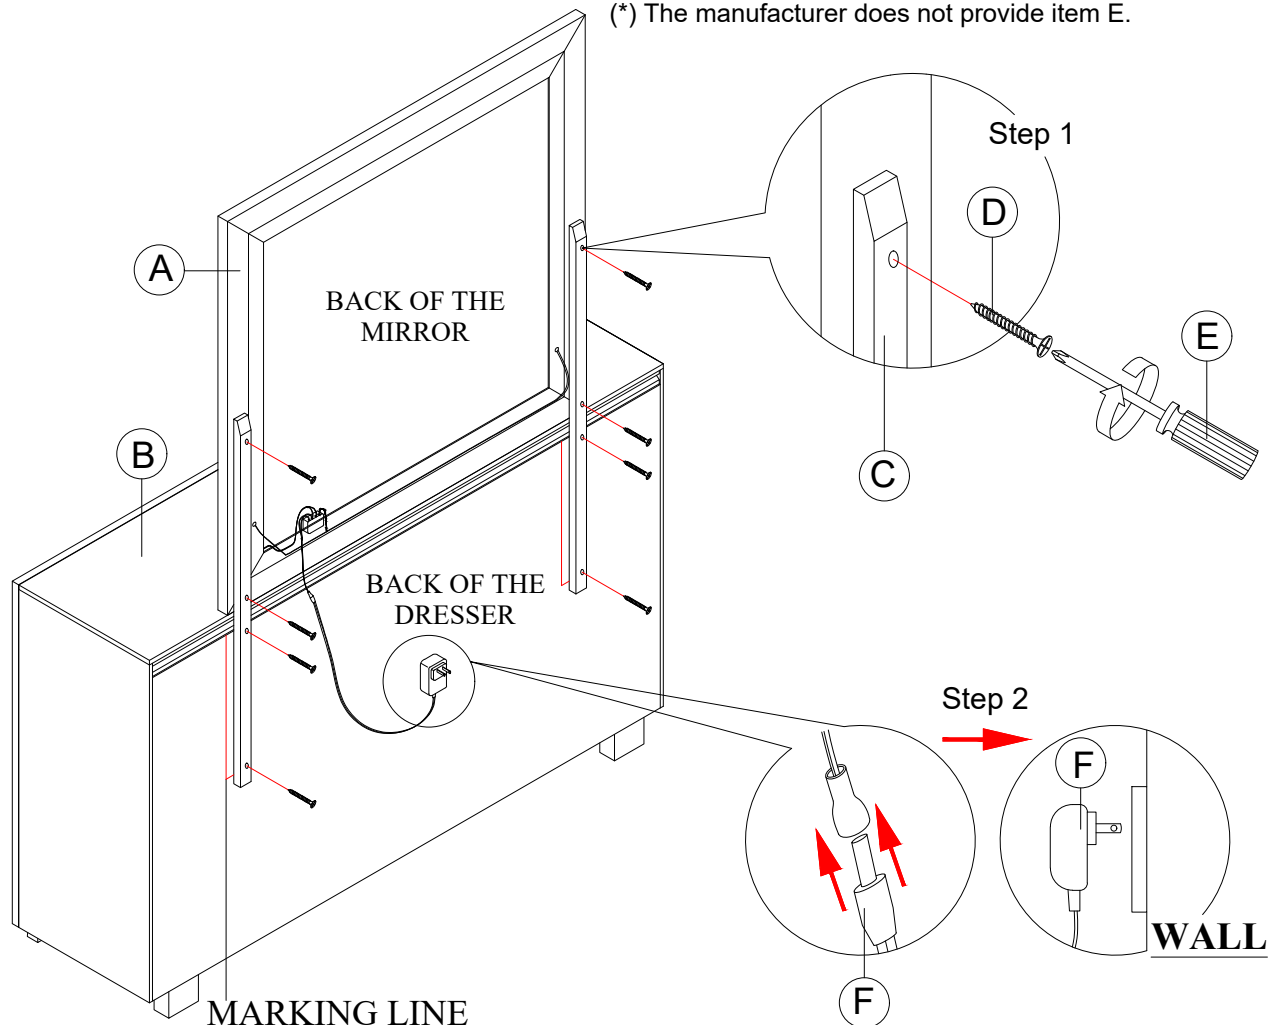

Made In Malaysia

1856WCS GLO MIRROR & DRESSER

# ASSEMBLY INSTRUCTION




Model : SANTORINI - METALLIC WHITE - CH

Description : CHEST





METALLIC WHITE/MARBLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


## PART LIST :

No.	Description	Diagram	Quantity
1	CHEST		1
A	BUN FOOT FRONT		2
B	BUN FOOT BACK		2


## HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
C	JCBC SCREW		M6 x 45mm	8
D	SPRING WASHER		M6 x 13mm	8
E	FLAT WASHER		M6 x 13mm	8
F	ALLEN KEY (LONG)		M4	1


## Step 1

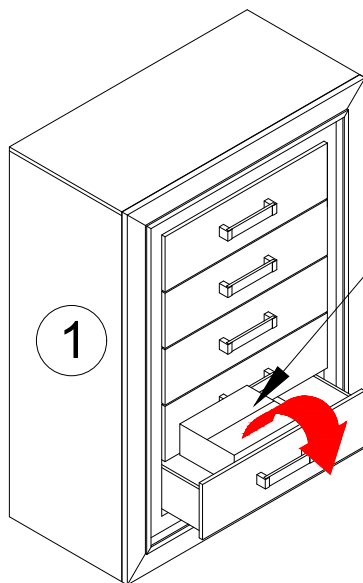


Bun Foot's Box

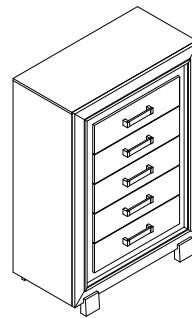


COMPLETED CHEST  
ASSEMBLY

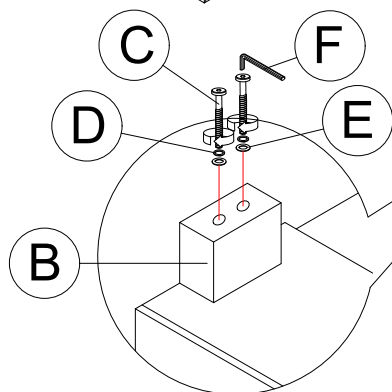

## Step 2.1

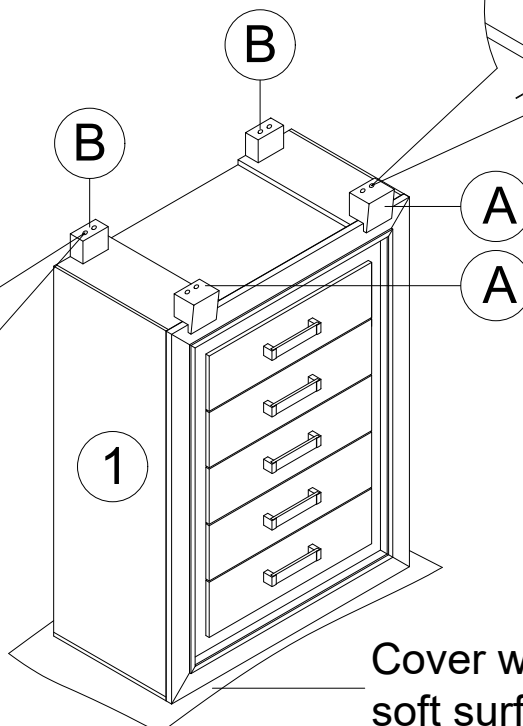

Cover with flat &  
soft surface

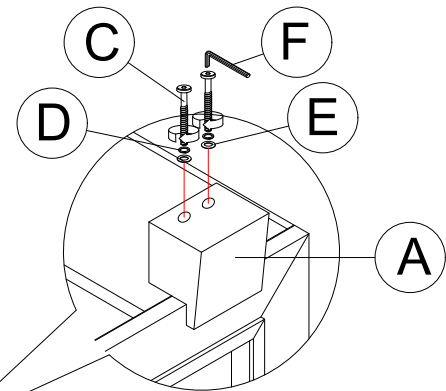

## Step 2

Made In Malaysia

1856WCS GLO CHEST





# ASSEMBLY INSTRUCTION

Model : SANTORINI - METALLIC WHITE - DR







Description : DRESSER  
METALLIC WHITE/MARBLE


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

## PART LIST :

No.	Description	Diagram	Quantity
1	DRESSER		1
A	BUN FOOT FRONT		2
B	BUN FOOT BACK		2
C	CENTER SUPPORT		1


## HARDWARE LIST :

No.	Description	Diagram	Size	Quantity
D	JCBC SCREW		M6 x 45mm	8
E	JCBC SCREW		M6 x 35mm	4
F	SPRING WASHER		M6 x 13mm	12
G	SPRING WASHER		M6 x 13mm	8
H	FLAT WASHER		M6 x 19mm	4
I	ALLEN KEY (LONG)		M4	1

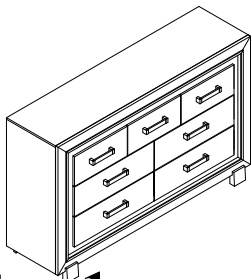


**COMPLETED  
DRESSER  
ASSEMBLY**

**Step 1**

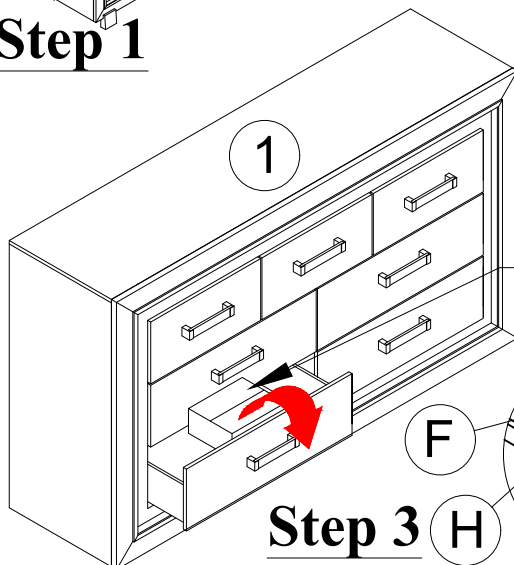


Bun Foot's  
Box &  
Center Support


**Step 3**

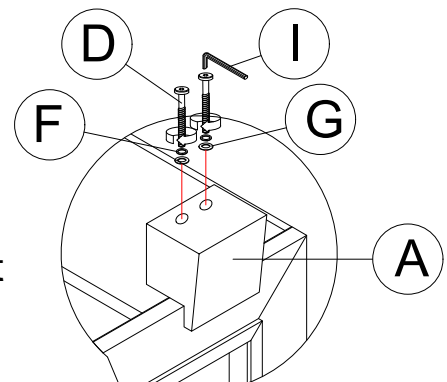

**Step 2**

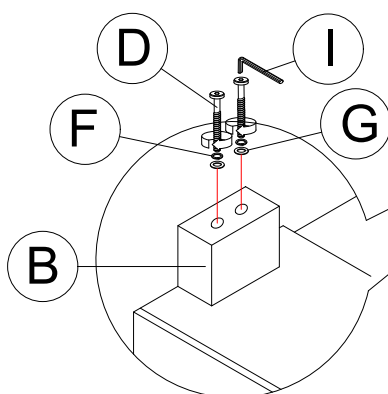

**Step 2.1**

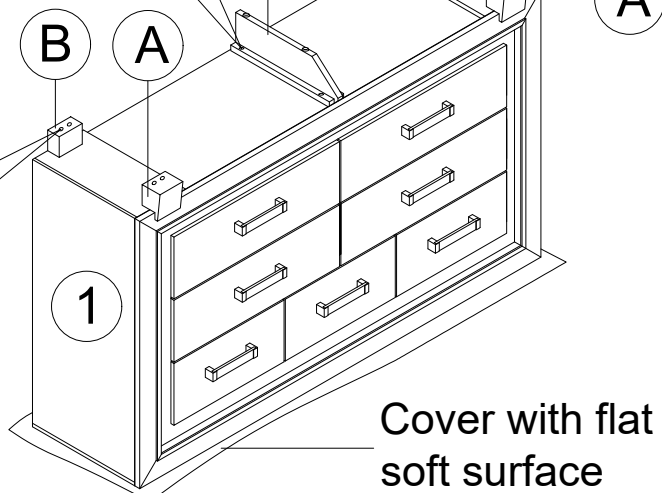

Cover with flat &  
soft surface

Made In Malaysia

1856WCS GLO DRESSER




# ASSEMBLY INSTRUCTION

Model : SANTORINI - METALLIC WHITE - NS





Description : NIGHTSTAND  
METALLIC WHITE/MARBLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


## PART LIST :

No.	Description	Diagram	Quantity
1	NIGHT STAND		1
A	BUN FOOT FRONT		2
B	BUN FOOT BACK		2

## HARDWARE LIST :


No.	Description	Diagram	Size	Quantity
C	JCBC SCREW		M6 x 45mm	8
D	SPRING WASHER		M6 x 13mm	8
E	FLAT WASHER		M6 x 13mm	8
F	ALLEN KEY (LONG)		M4	1

## Step 1

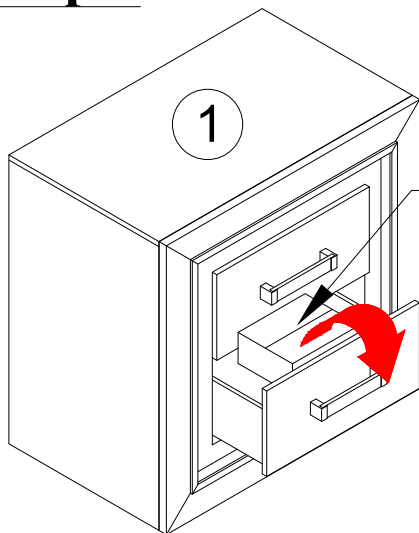


Bun Foot's Box


## COMPLETED CHEST ASSEMBLY

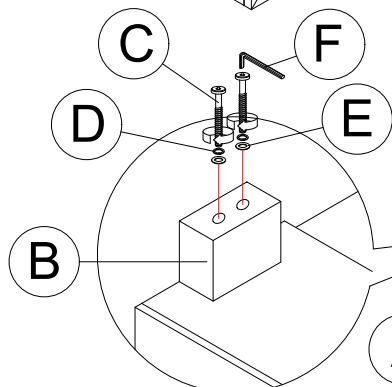

## Step 2.1

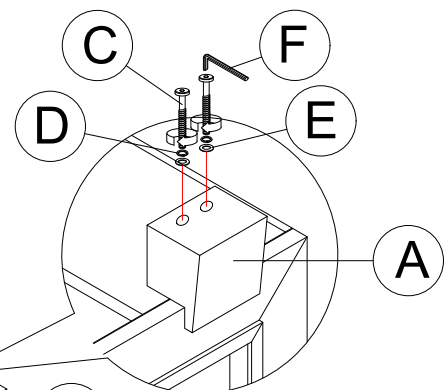

## Step 2

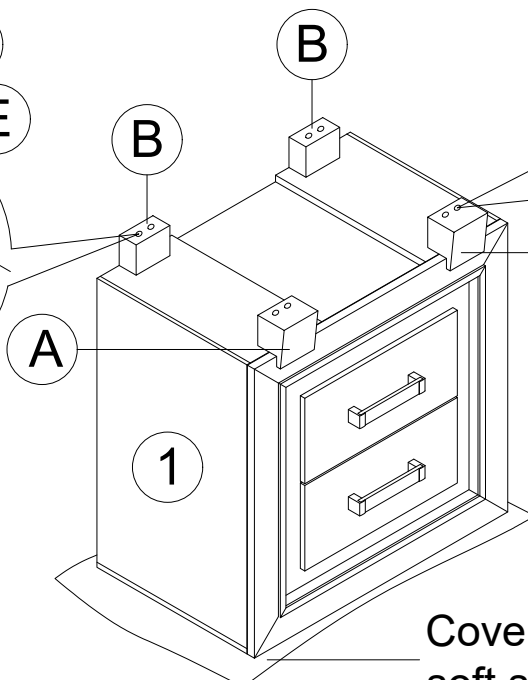

Cover with flat & soft surface

Made In Malaysia

1856WCS GLO NIGHT STAND