


EDGEWOOD BED SET

Date: 07-23-07

Model #1333-460 Full Size Model #1333-500 Queen Size

Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference.

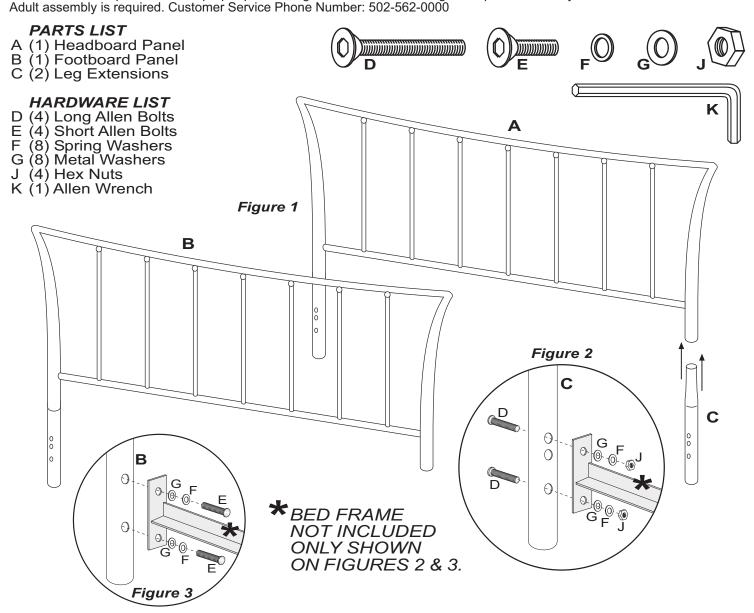

STEP ONE

Insert both Leg Extensions (C) into bottom of Headboard Grill (A), See Figure 1.

STEP TWO

Attach Bed Frame (*Not Included) to each Leg Extension (C) using 2 Long Allen Bolts (D) from the back side, 2 Metal Washers (G), 2 Spring Washers (F) & 2 Hex Nuts (J) per each post & leg extension. See Figure 2. Tighten all bolts only using Allen Wrench (K) provided. Assembly is now complete.

STEP THREE

Attach Bed Frame (*Not Included) to each post on Footboard Grill (B) using 2 Short Allen Bolts (E) from the back side, 2 Spring Washers (F) & 2 Metal Washers (G) per each post, See Figure 2. Tighten all bolts only using Allen Wrench (K) provided. Assembly is now complete.