42” Portsmouth Table

(049 Dining)

(067 Balcony)

(051 Bar)

SEASIDE CASUAL

MADE IN RHODE ISLAND




ASSEMBLY INSTRUCTIONS

1 **PLEASE READ INSTRUCTIONS COMPLETELY BEFORE BEGINNING.** Carefully remove contents from box. Make sure that all parts and hardware are included using the Parts List below.


Tools Required: 4mm Allen Wrench (included); #2 Phillips Head Screwdriver; Rubber Mallet

Table Top Assembly

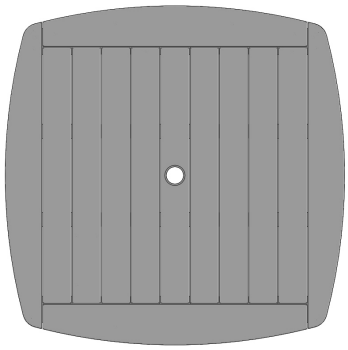

x 1

Leg Assembly

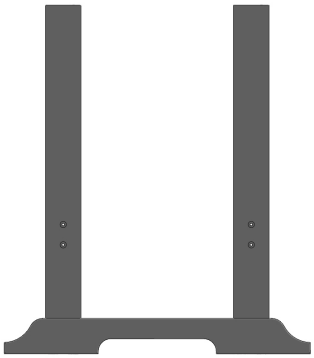

x 2

Aluminum Support Brace



x 2

Short Apron



x 2


Leg Stretcher



Dining and Balcony x 2 | Bar Height x 4

4mm Allen Wrench

Actual Size

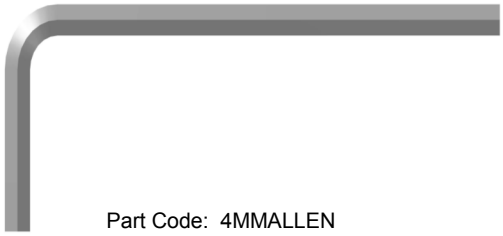

Part Code: 4MMALLEN

x 1


Long Apron



x 2

1-3/4” Phillips Head Screw


Actual Size



Part Code: 316-8X1-3/4PFDS x 8

80mm Hex Lag


Actual Size



Part Code: 316-1/4-10-80HL | Dining and Balcony x 12 | Bar Height x 20

3/4” Phillips Pan Head Screw

Actual Size

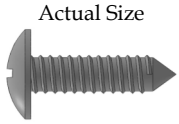

x 20

5/8” Bung




x 16

WARRANTY QUESTIONS OR COMMENTS PLEASE CALL TOLL FREE AT 1-800-809-3114


Seaside Casual Furniture | 11 Industrial Drive Coventry, RI 02816 | 800-809-3114 | sales@seasidecasual.com

2 ATTACH STRETCHERS TO LEG ASSEMBLIES

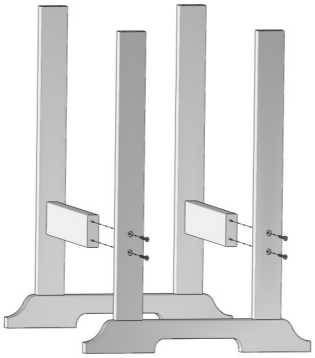


Attach Stretchers to Leg Assemblies using (8) 80mm Hex Lags (16 for Bar Height) as shown. Plug holes with 5/8″ Bungs using Rubber Mallet.

3 ATTACH SHORT APRONS TO ALUMINUM SUPPORT BRACE

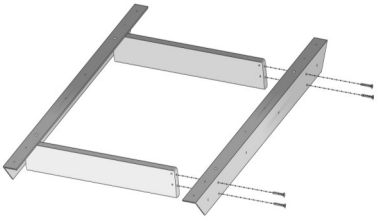


Align predrilled holes in Short Aprons with holes in Aluminum Support Brace as shown. Secure using (8) 1 3/4″ Phillips Head Screws.

4 ATTACH ALUMINUM SUPPORT TO BASE ASSEMBLY

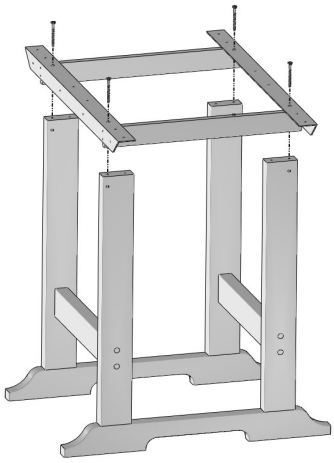


Align large holes in Aluminum Support Braces with Predrilled holes on outside corners of Legs as shown. Secure using (4) 80mm Hex Lags.

5 ATTACH BASE ASSEMBLY TO TABLE TOP ASSEMBLY

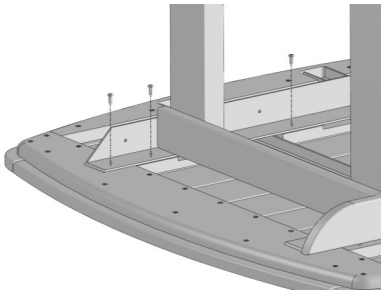

Flip over Base Assembly and align Aluminum with cleats on the Table Top Assembly. Secure using (12) 3/4″ Pan Head Screws.

6 ATTACH LONG APRONS.

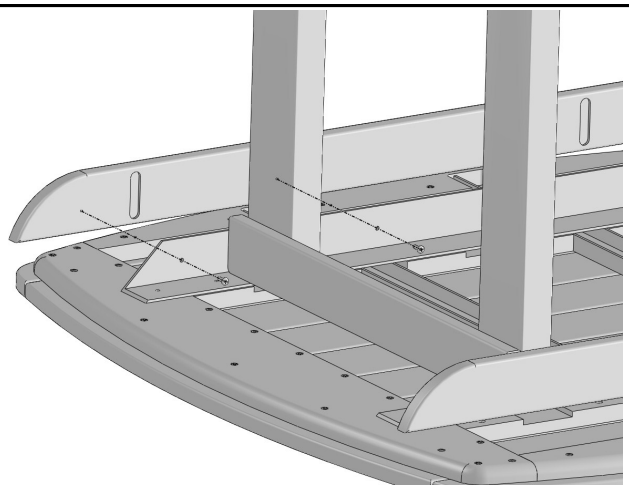

Align Long Aprons with Aluminum Support Brace. Ensure that pockets in Long Apron are aligned with Screws used to attach Short Aprons. Secure using (8) 3/4″ Pan Head Screws thru Aluminum Support Brace.