

# ASSEMBLY INSTRUCTIONS

MODEL : HD1688 - 391 - CHEST


DOC. NO : RD-F05-AT  
REV. NO : A  
REV. DATE : 01.01.2017

## COMPONENT LIST

| NO. | Descriptions                      | Qty. |
|-----|-----------------------------------|------|
| A   | Legs (Packed Underneath)          | 2    |
| B   | Tipping Restraint (At Back Panel) | 1    |

## HARDWARE LIST (Packed inside Legs Carton)

| No. | Description   | Dimension       | Picture                                                                           | Qty. |
|-----|---------------|-----------------|-----------------------------------------------------------------------------------|------|
| 1   | JCBC Bolt     | M6 x 1.0 x 40MM |  | 4    |
| 2   | Spring Washer | M6              |  | 4    |
| 3   | Flat Washer   | M6              |  | 4    |
| 4   | Allen Key     | 4 x 60MM        |  | 1    |

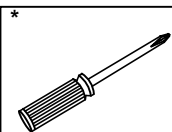

Assembly Tool  
Not Included

### ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2.Please check to see that all hardware and parts are present prior start of assembly.
- 3.Please follow attached instructions in the same sequence as numbered to assure fast and easy assembly.

### Warning!

- 1.Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
- 2.This product is for home use only and not intended for commercial establishments.

