


Assembly Instruction

X-BACK SIDE CHAIR


NO	Parts List		Q'TY
A		Chair Back	1
B		Box Seat	1
C		Cushion	1
D		Front Leg	2

NO	Hardware List		Q'TY
1		8 x 1" Wood Screw	4
2		M6x 50mm JCBC Bolt	4
3		M6x70mm JCBC Bolt	4
4		M6x13mm Lock Washer	8
5		M6.5x16.5mm Flat Washer	8
6		M4 x 2.1/2" Allen Key	1

STEP 1

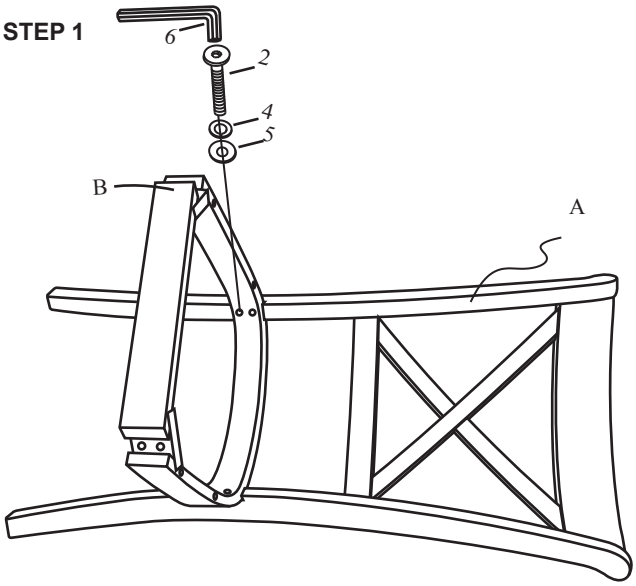

STEP 2

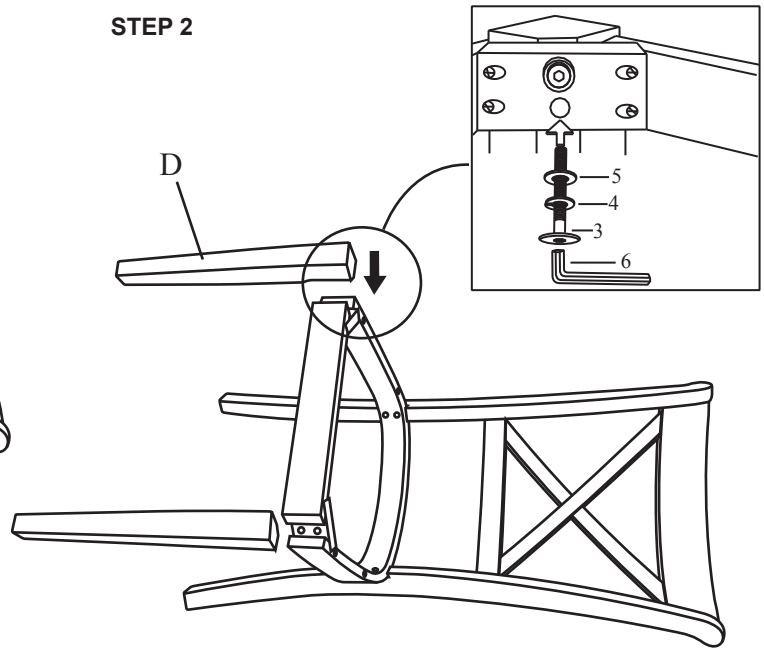

(STEP 3)

