HEPBURN Dining Room Assembly Instructions

Page 1 of 2

Made in Viet Nam

Warning:


- Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.
- To prevent possible scratches and damage, this furniture must be assembled on a soft surface such as a blanket or carpet.

Components and Hardware List Flat Washer Chair Back Seat Frame Front Leg Spring Washer Ø5/16" x 19*2mm Ø5/16" 10 pcs. 10 pcs. 1 pc. 2 pcs Allen Head Bolt Allen Head Bolt Allen Head Bolt Allen Key 5mm Ø5/16"-18 x 3-1/4" Ø5/16"-18 x 2-1/2" Ø5/16"-18 x 2"

2 pcs.

(H)

4 pcs.

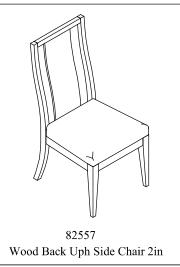


STEP 1:

(G)

4 pcs.

(F)

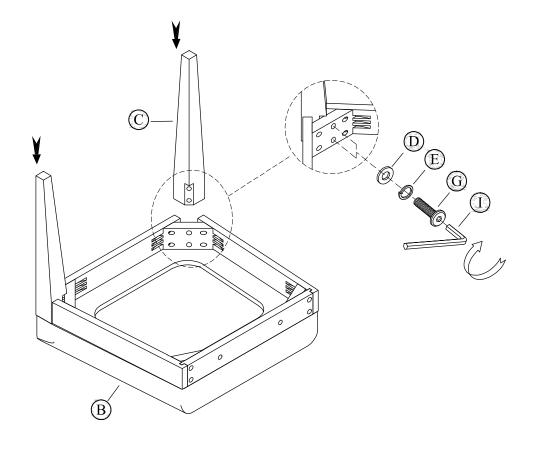

1 pc.

Riverside


email: <u>info@riverside-furniture.com</u>

HEPBURN Dining Room Assembly Instructions


Made in Viet Nam

82557 Wood Back Uph Side Chair 2in

STEP 2:

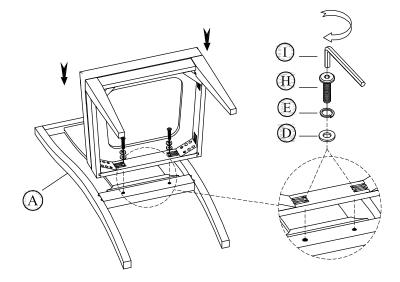

STEP 3:

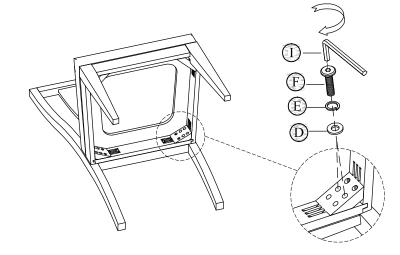

Complete

