























Examine all packaging material for small parts that may have come loose during shipment. Periodic checks are recommended to insure that all components are in proper position, tight and free from damage. Keep this assembly instruction for future reference. Adult assembly is required. The product of Hillsdale Furniture, LLC is designed for residential use only. Customer Service Phone Number: 502-562-0000

HDFBP

CODE	QTY	HARDWARE
1	8	M8 x 20mm Bolts 
2	8	M6 x 25mm Bolts 
3	24	M6 x 35mm Bolts 
4	6	M6 x 50mm Bolts 
5	2	M6 x 110mm Bolts 
6	2	Wood Dowels 
7	30	M6 x 13mm Spring Washers 
8	30	M6 x 19mm Flat Washers 
9	8	M4 x 32mm Screws 
10	1	M5 x 65mm Allen Wrench 
11	1	M4 x 100mm Allen Wrench 


CODE	QTY	COMPONENTS	CODE	QTY	COMPONENTS
A	1	Headboard 	B	2	Headboard Legs 
C	1	Footboard 	D	2	Footboard Legs 
E	2	Left Side Rails 	F	2	Right Side Rails 
G	4	Side Rail Cleats 	H	2	Side Rail Support Legs 
I	4	Slats 	J	8	Support Legs with Adjustable Feet 

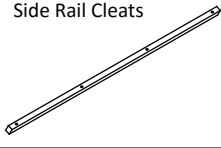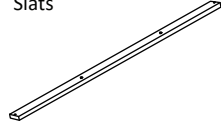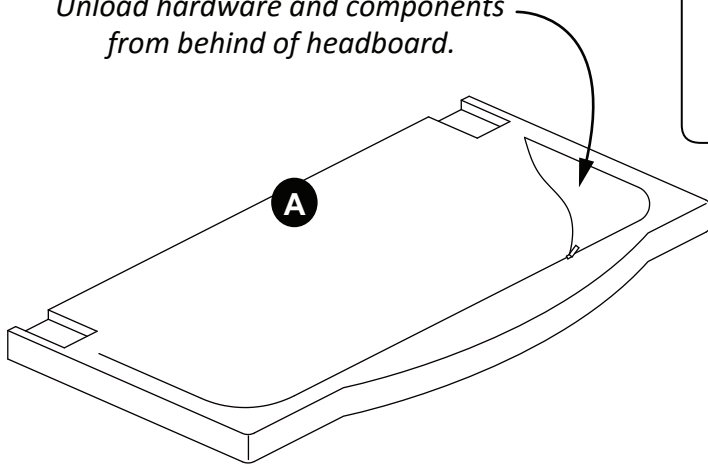
Unload hardware and components from behind of headboard.



## STEP 1 - Figure 1

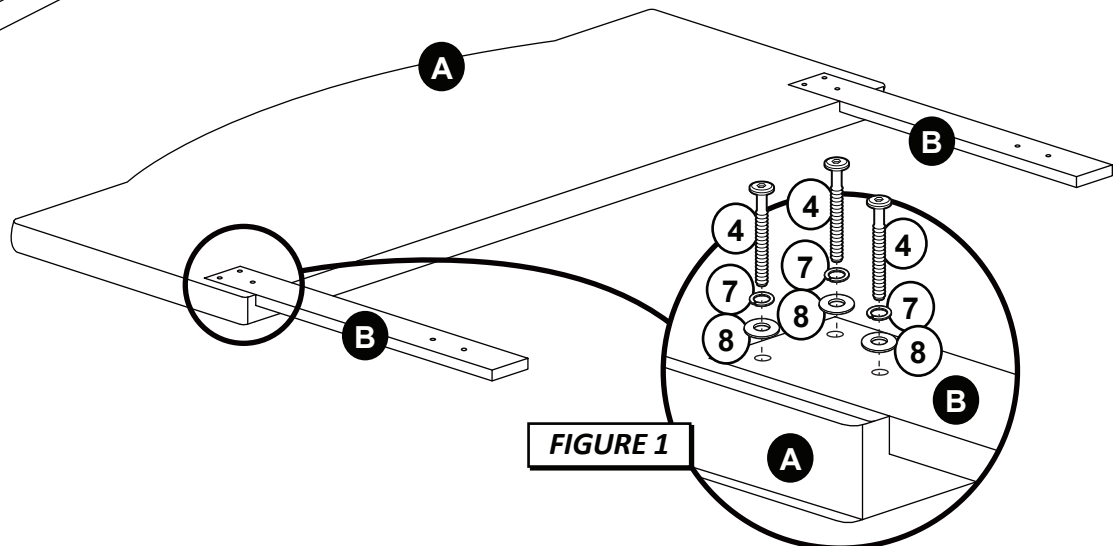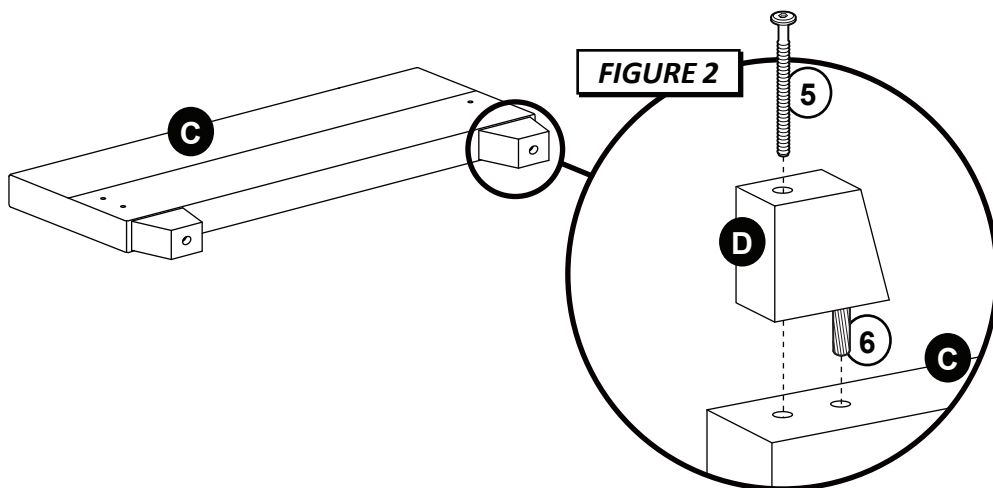Begin assembly by attaching each Headboard Leg (B) to Headboard (A) using 3 Allen Bolts (4), 3 Spring Washers (7) and 3 Flat Washers (8) per leg. Tighten bolts with Allen Wrench (11) provided.





## STEP 2 - Figure 2

Insert 1 wood dowel(6) to each Footboard leg (D) and attach to the Footboard(C) using 1 Allen Bolt(5) per leg. Tighten bolts with Allen Wrench (11) provided.

## STEP 3 - Figure 3

Attach each Side Rail Cleat (G) to Left and Right Side Rails (E & F) using 4 Allen Bolts (3), 4 Spring Washers (7) and 4 Flat Washers (8) per cleat. Tighten bolts with Allen Wrench (11) provided.

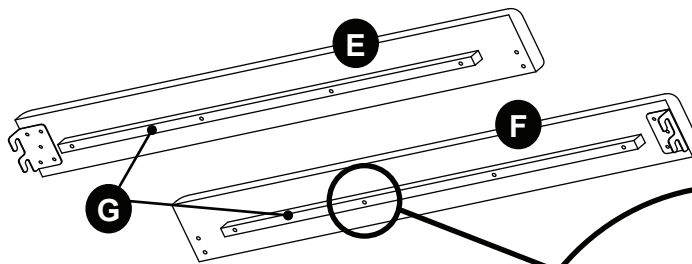


FIGURE 3

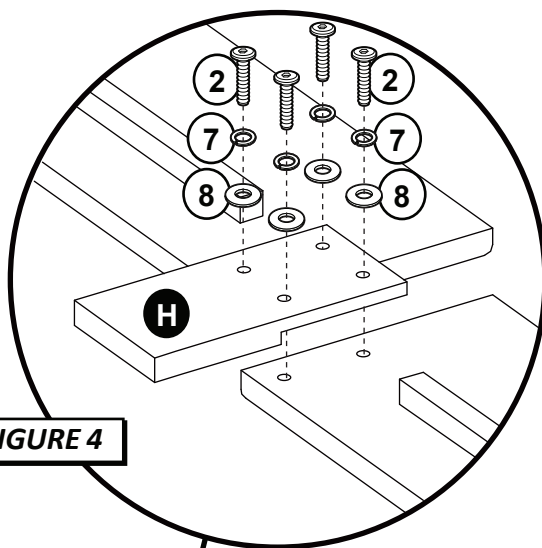


FIGURE 4

## STEP 4 - Figure 4

Attach Right Side Rails (E & F) to each other by lining up the holes with those of the Side Rail Support Legs (H). Secure each one with 4 Allen Bolts (2), 4 Spring Washers (7) and 4 Flat Washers (8). Tighten bolts with Allen Wrench (11) provided.

