



AL54031/WCA-17063

ASSEMBLY INSTRUCTION


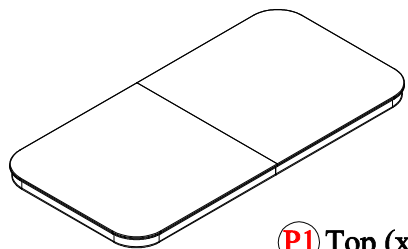


P1 Top (x1)


- 1** Steel allen bolt, lock, flat washer (x12)

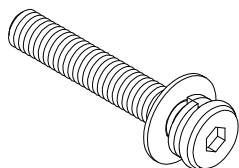


- 2** Steel allen wrench (x1)

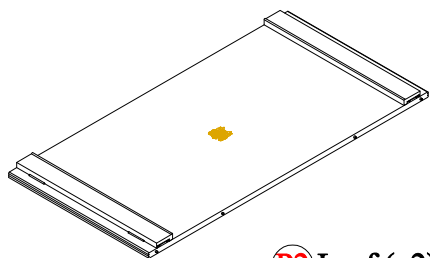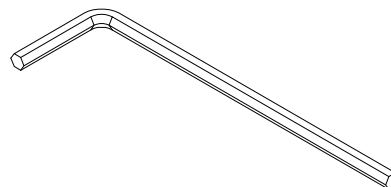


P2 Leaf (x2)

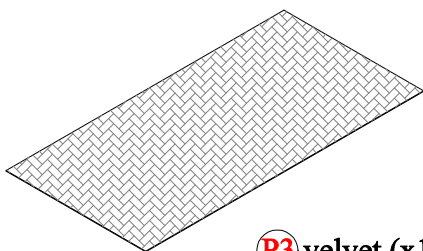

P3 velvet (x1)

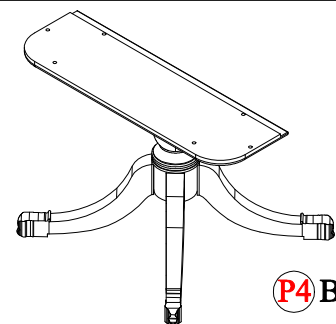


P4 Base (x2)

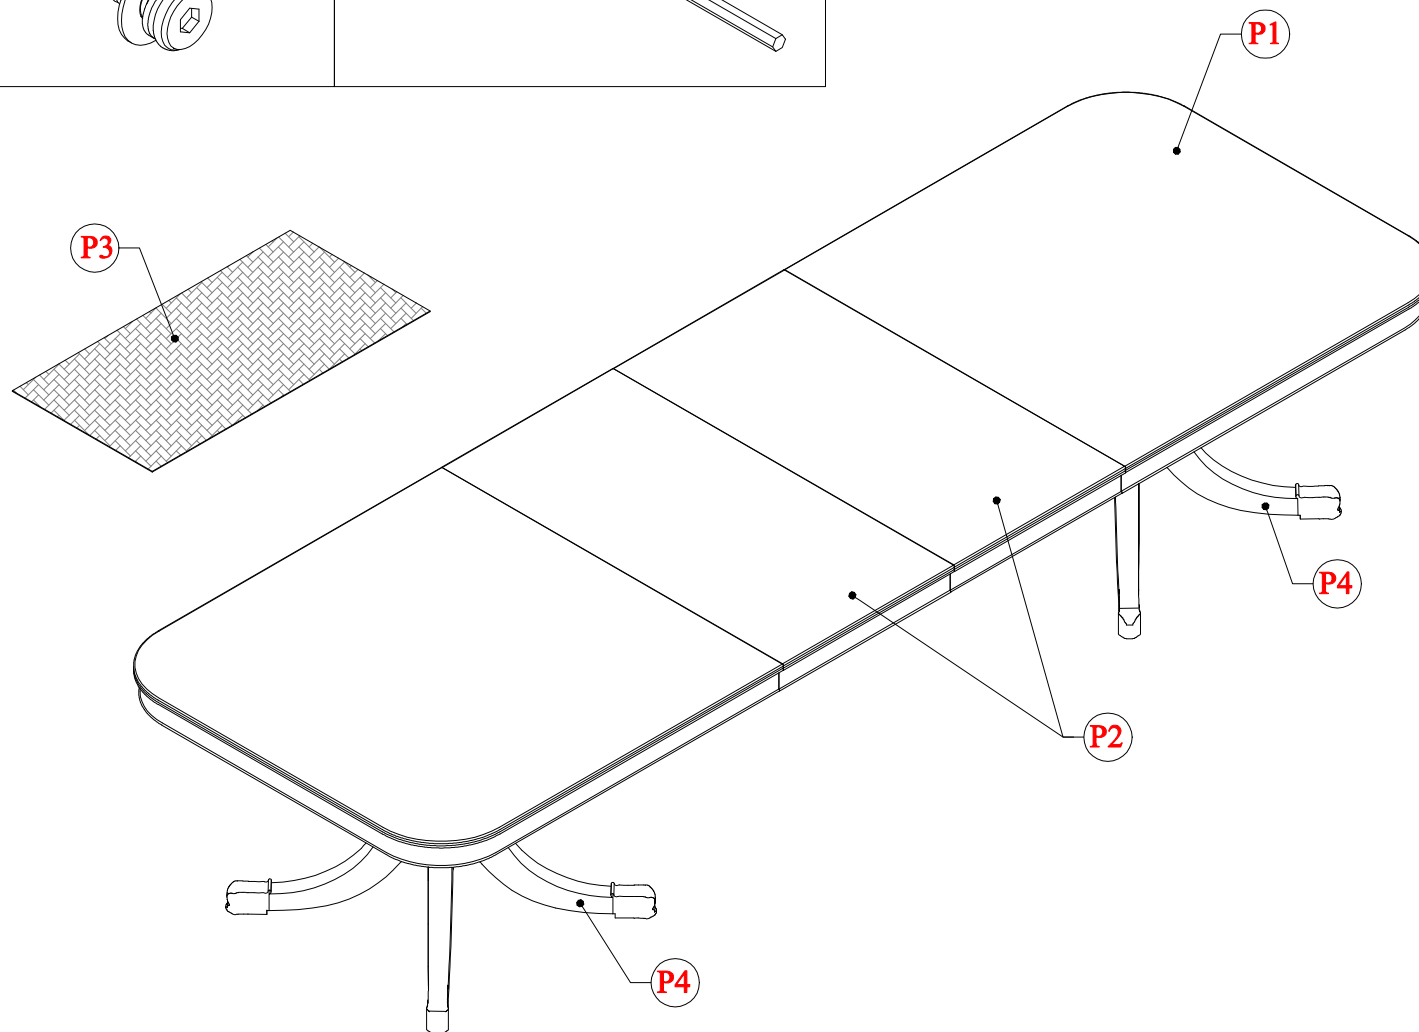


AL54031/WCA-17063

ASSEMBLY INSTRUCTION

Step 1

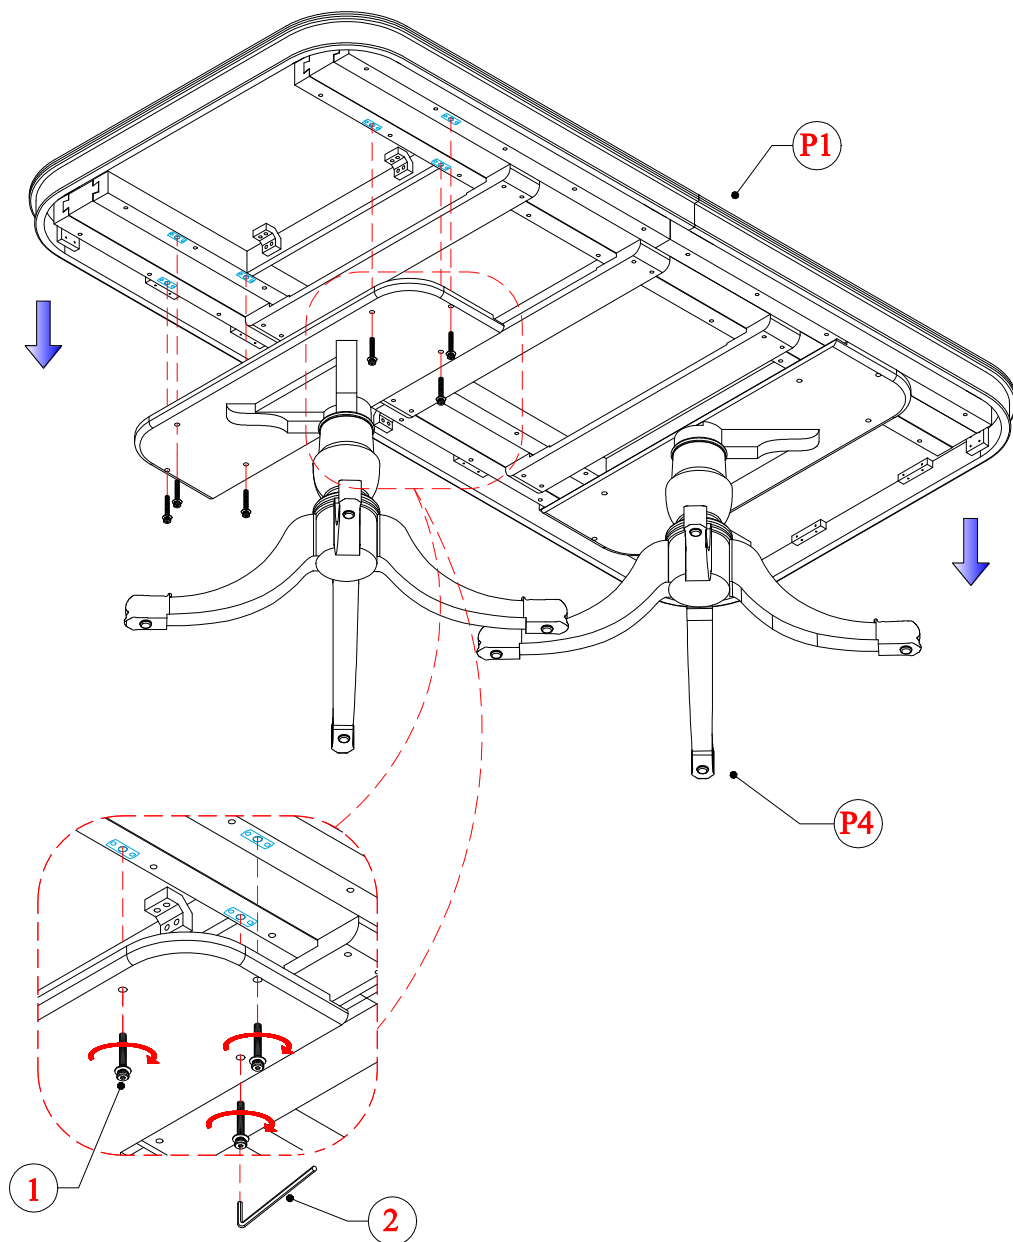


Step 2

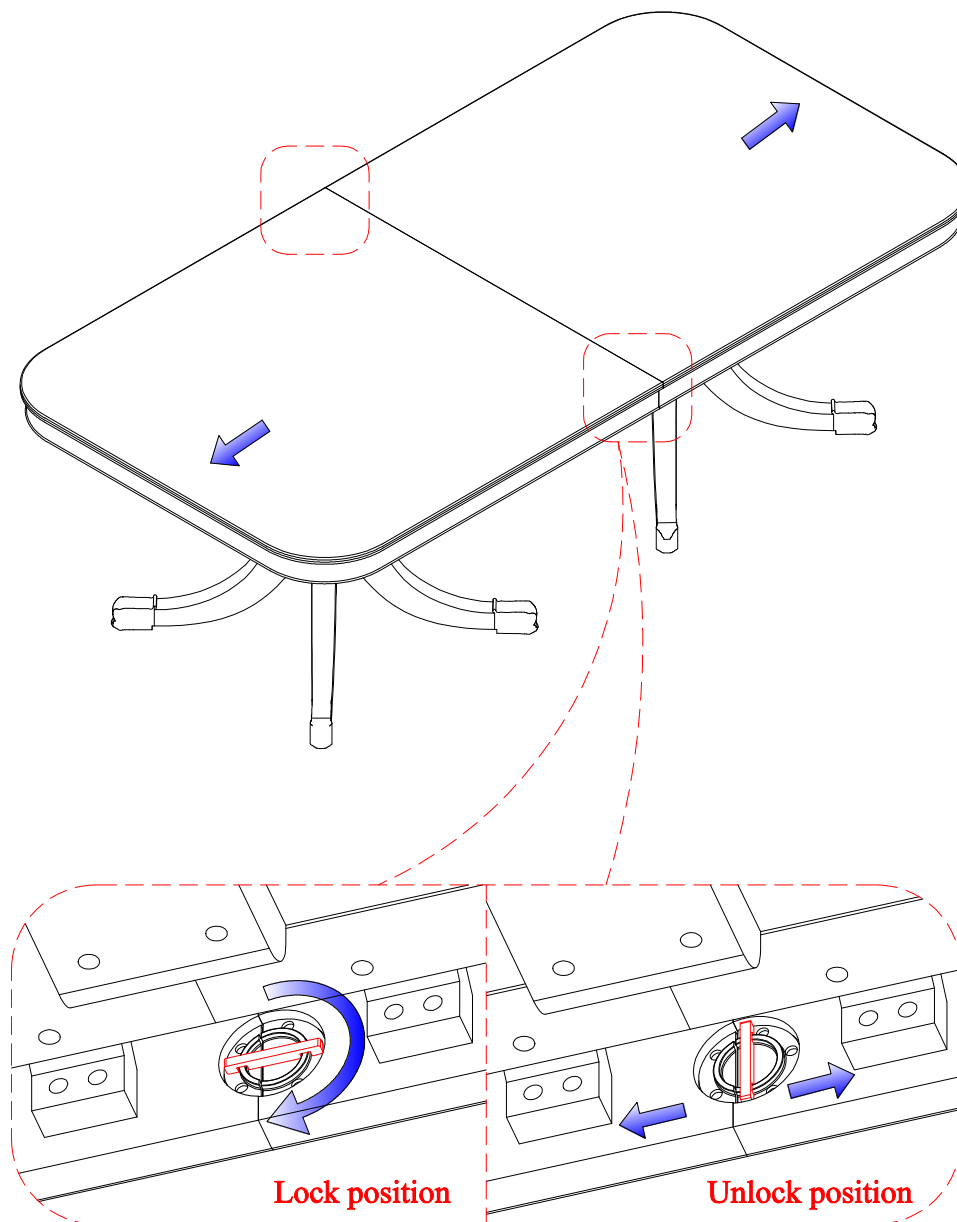


AL54031/WCA-17063

ASSEMBLY INSTRUCTION

Step 3

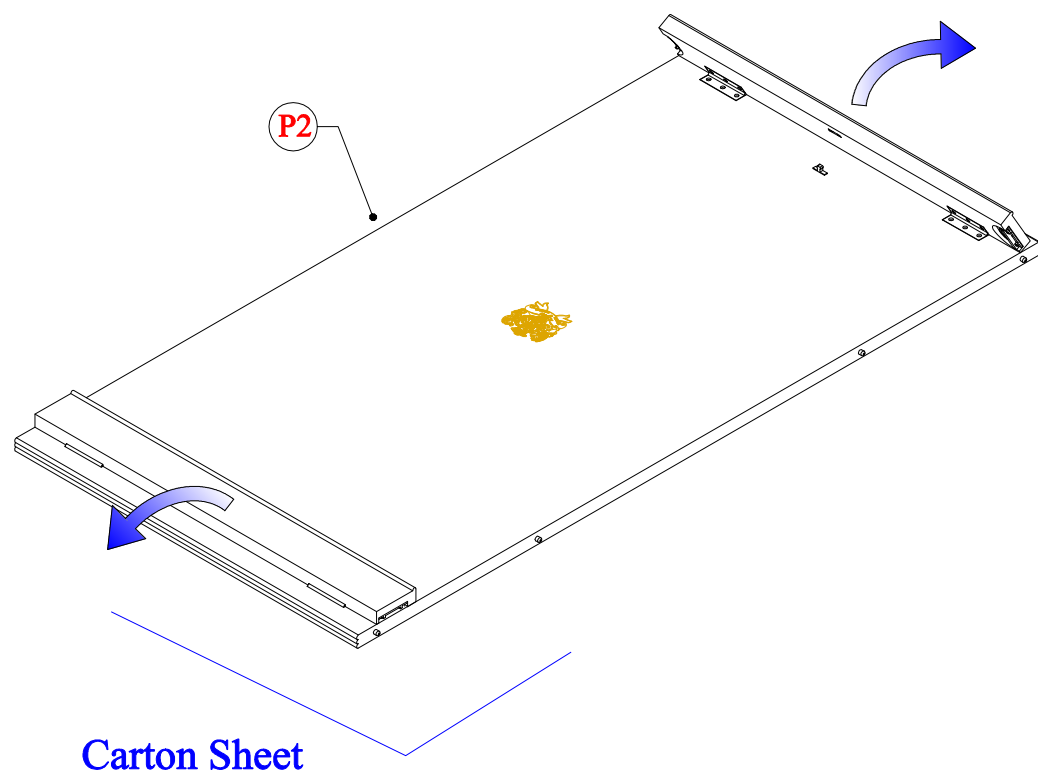


Step 4

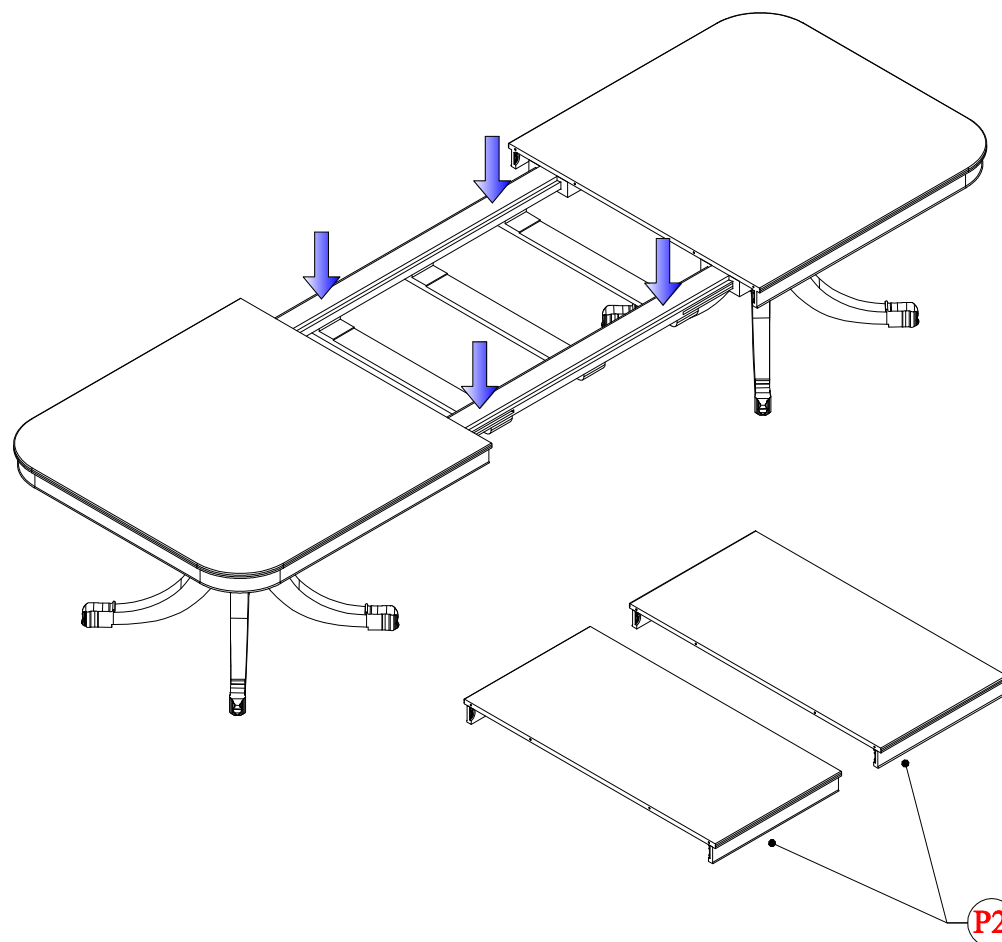


AL54031/WCA-17063

ASSEMBLY INSTRUCTION

Step 5


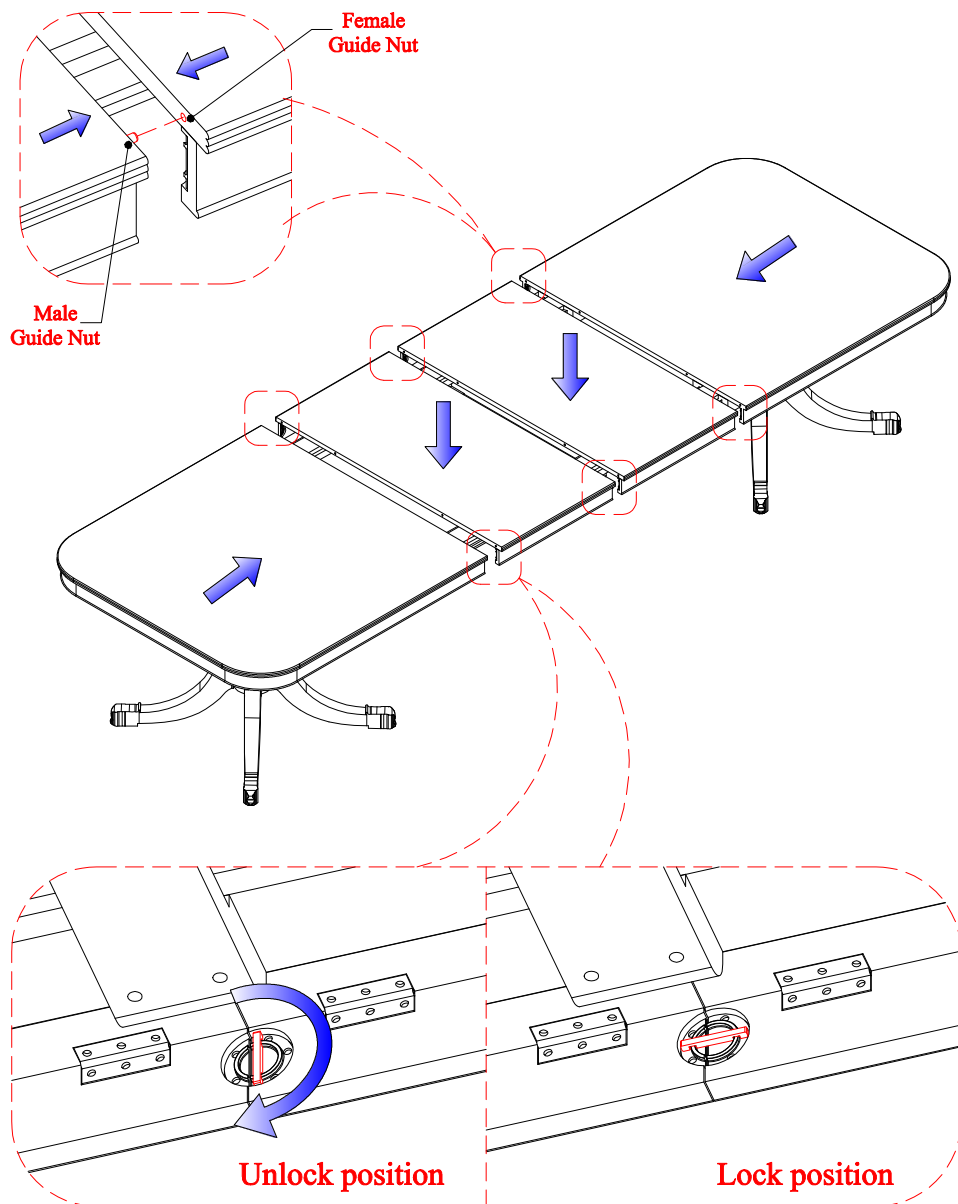


Step 6

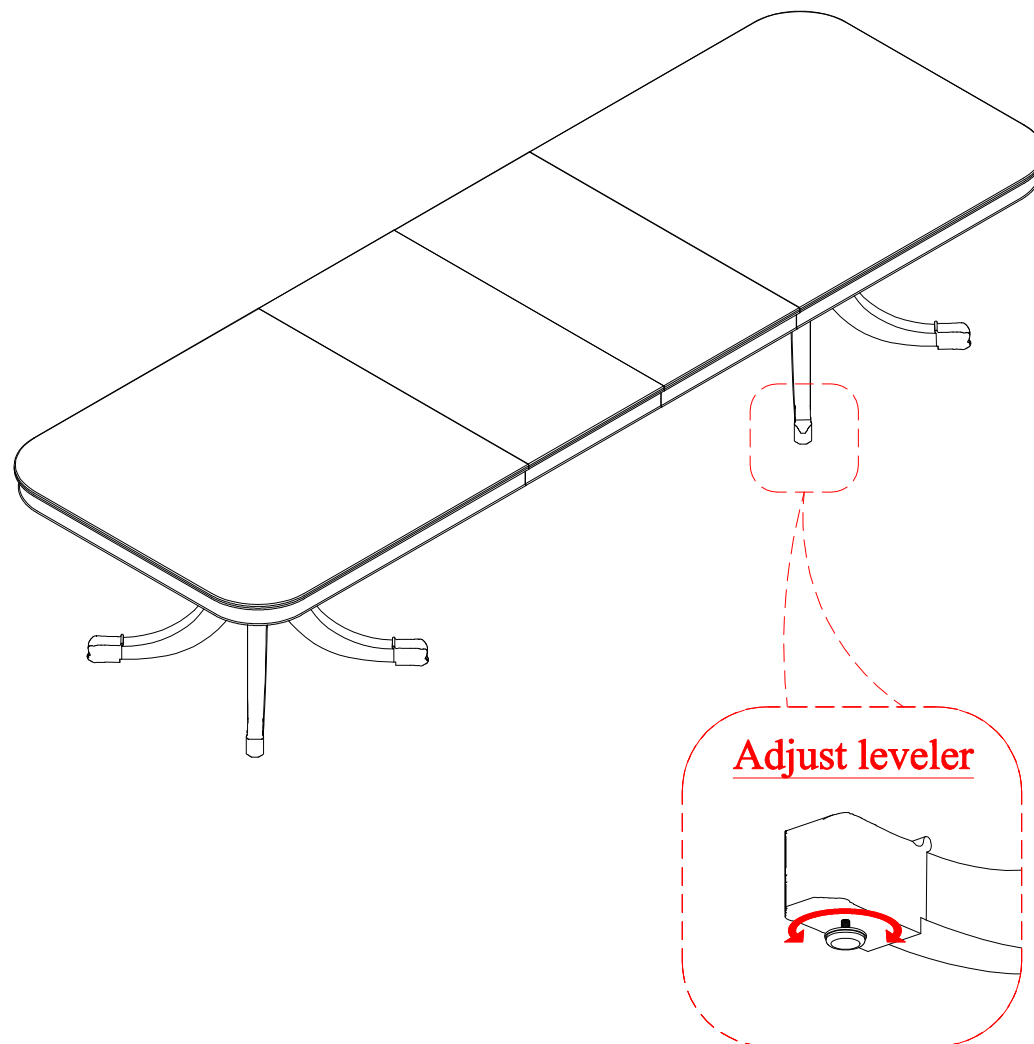


AL54031/WCA-17063 ASSEMBLY INSTRUCTION

Step 7

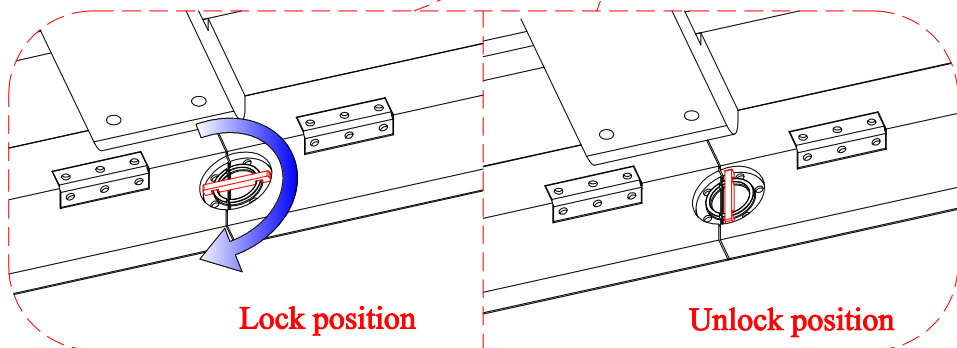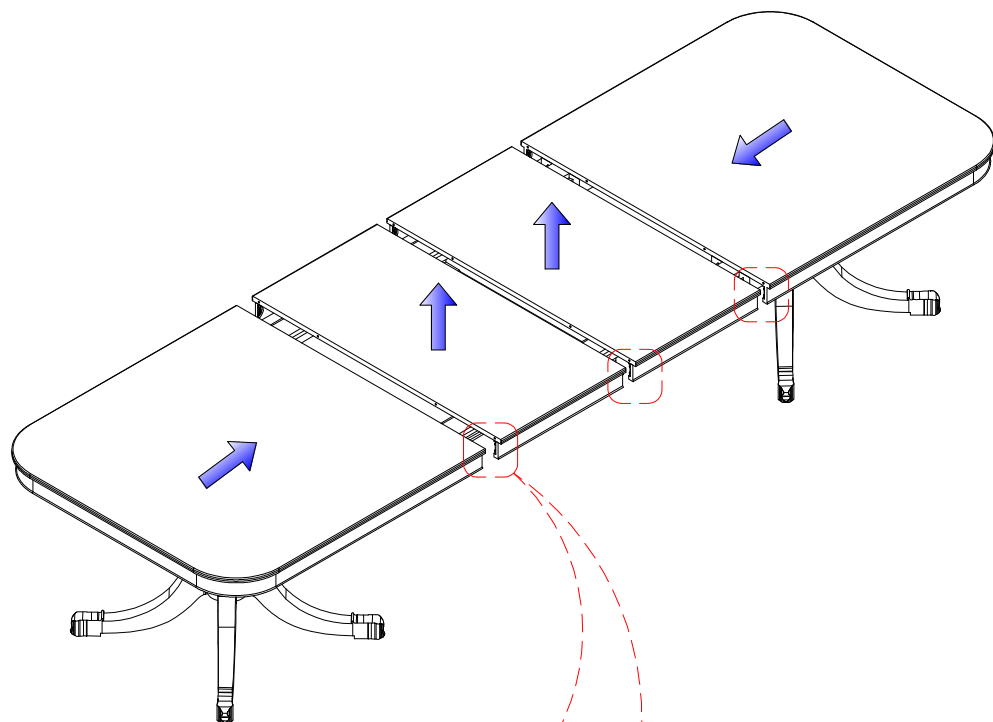

Step 8


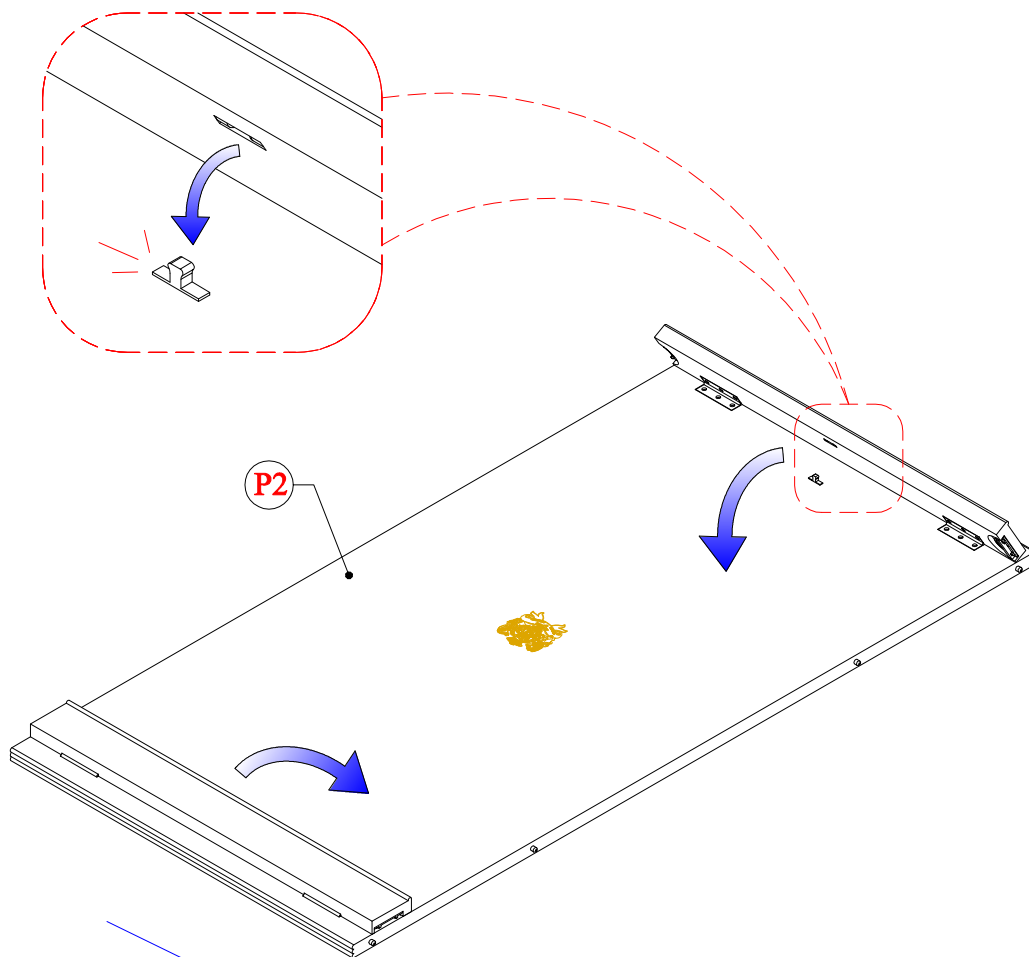


Carton Sheet

AL54031/WCA-17063

ASSEMBLY INSTRUCTION

Step 9

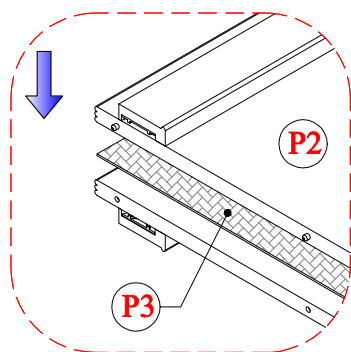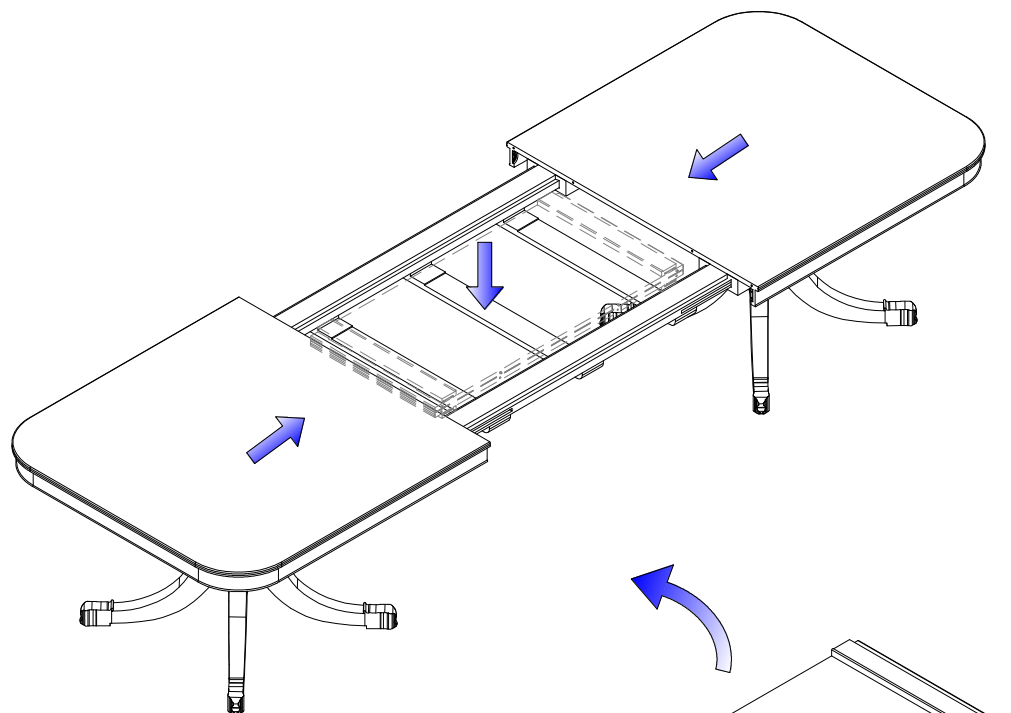

NOTE: Always put the velvet between 2 leaf to avoid scratch.

Step 10

