

CLA-419-407 A STAR IS BORN

CARACOLE CLASSIC

ASSEMBLY INSTRUCTIONS


PLEASE UNPACK ALL PARTS AND CHECK QUANTITY AGAINST PARTS LIST BEFORE DISCARDING PACKING CARTON!

Assembling Steps:

Step 1: Unpack the carton and put the metal frame upright on a flat floor.

Step 2: Put the clear plastic bumpers on the top frame.

Step 3: Put the glass top onto the metal top frame.

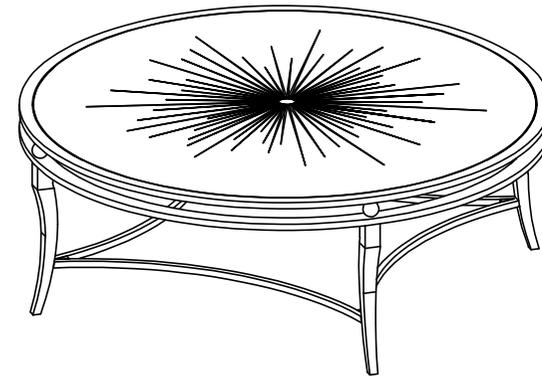

*** NOTE KEEP THIS SHEET ***

In the unlikely event that you would need a replacement part for your furniture, please contact your local authorized Schnadig International dealer. If you need replacement hardware quickly, it could be purchased from your local hardware store.

CLA-419-407				
A STAR IS BORN				
Part List				
Hardware List		Part Number	QTY	
1		Glass Top	CLA-419-407-029	1
2		Adjustable Floor Glide	CLA-419-407-075	4

RTA Hardware			
Hardware List			QTY
A		Clear Bumper	6

