


Hardware and Parts packed with the Headboard


Headboard Panel

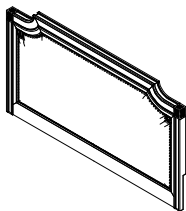

(H-A)

1 pc.


Headboard Post



(H-B)

One Left &
One Right


Headboard Stretcher

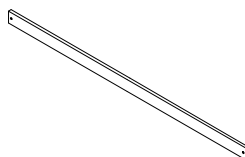

(H-C)

1 pc.

Ø5/16"-18 x 1-1/2"
Allen Head Bolt



(H-D)

8 pcs.

Ø5/16" x Ø14mm
Spring Washer



(H-E)

8 pcs.

Ø5/16" x Ø18mm
Flat Washer



(H-F)


8 pcs.

Ø4mm
Allen Wrench




(H-G)

1 pc.

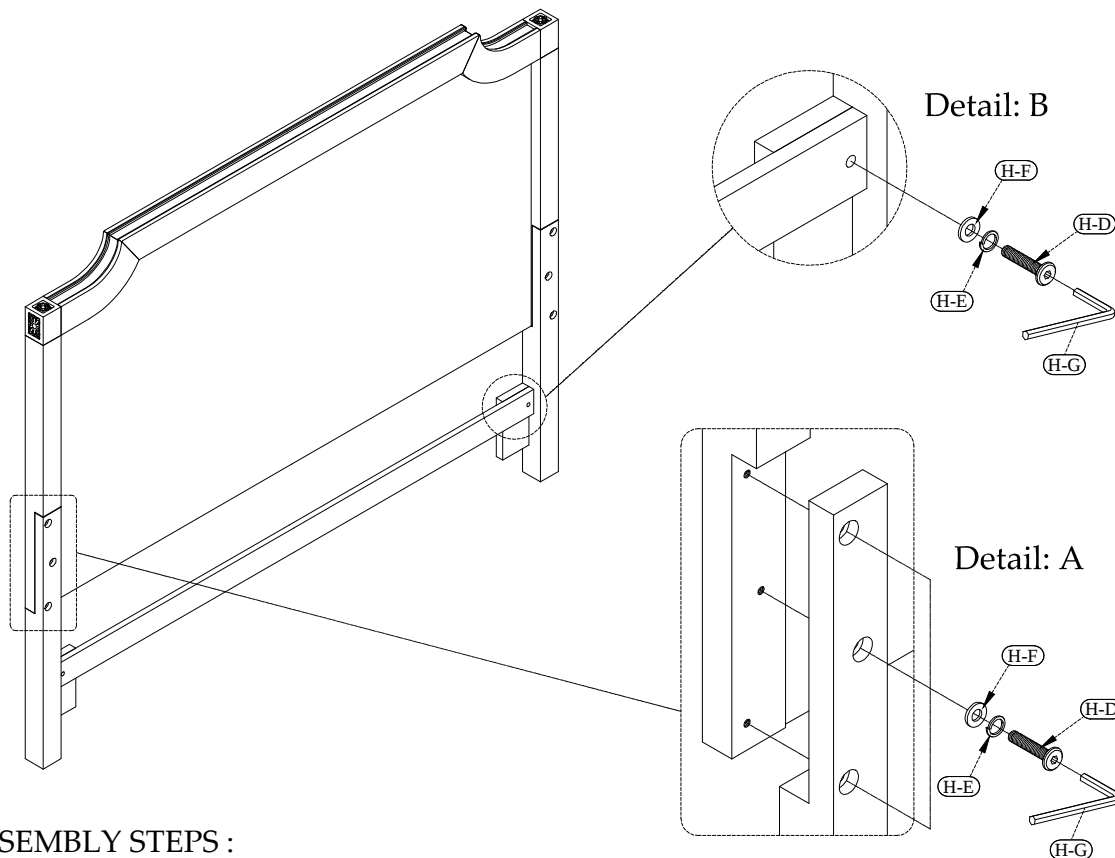

ASSEMBLY STEPS :

1. Place the Headboard Panel (H-A) face down on a clean and soft surface.
2. Attach the Left and Right Headboard Posts (H-B) to the back of the Headboard Panel, using the Flat Washers (H-F), Spring Washers (H-E) and the Ø5/16" x 1-1/2" Bolts (H-D). Do not fully tighten until after next step. (see Detail A).
3. Attach the Headboard Stretcher (H-C) to the Headboard Posts using the same Washers and the Ø5/16" x 1-1/2" Bolts (H-D).
4. Tighten all Bolts using the Allen Wrench (H-G). (see Detail A & B).
5. Gently lean the back of the assembled Headboard against the wall where the Bed will be located in the room.

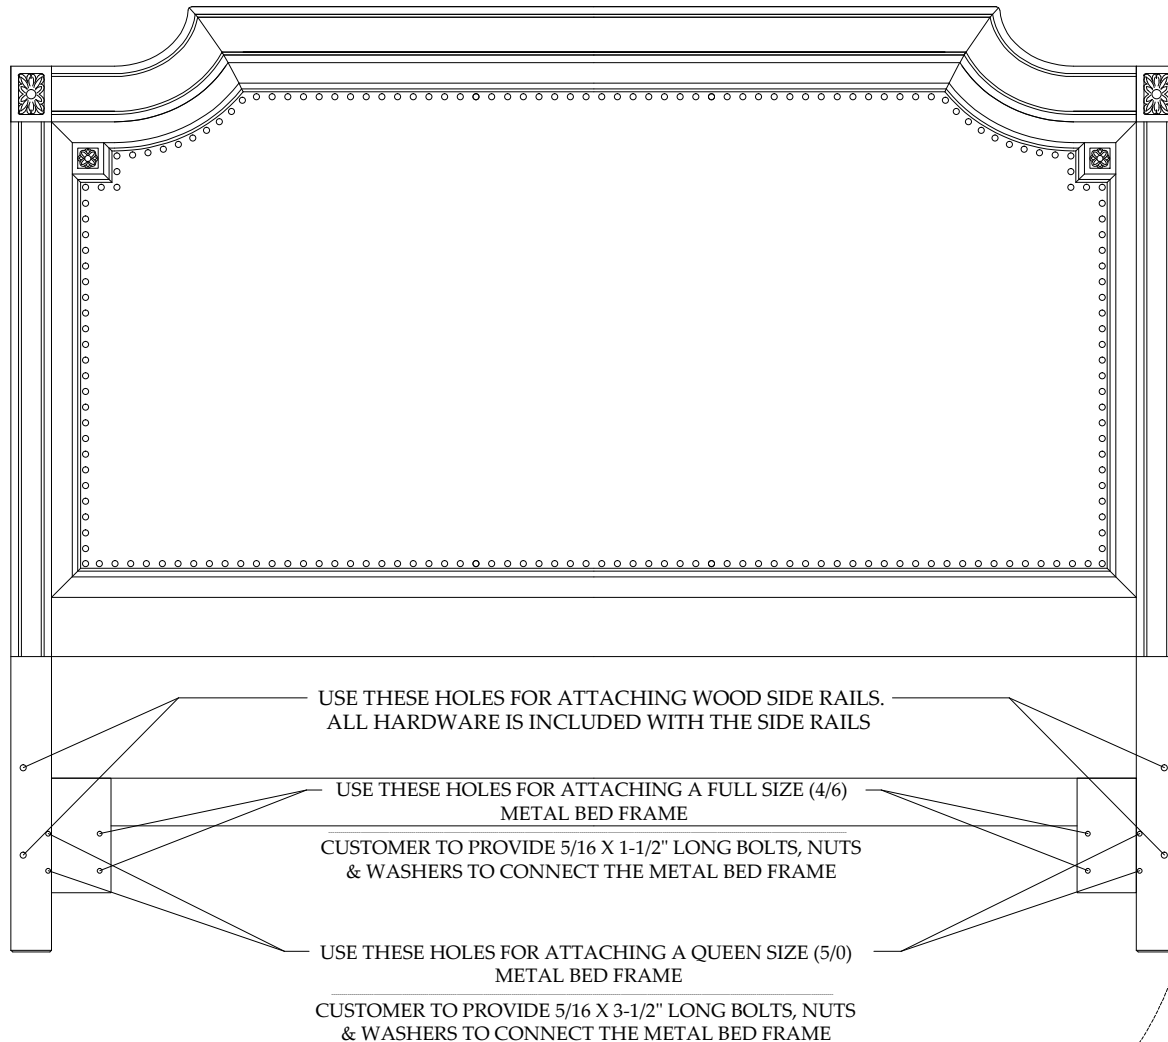

6/0 6/6 King Standard Bed
 10280 -- 6/0-6/6 Carved Headboard
 10281 -- 6/0-6/6 Carved Footboard w/Slats
 10276 -- 5/0-6/6 Carved Bed Rails
 OR
 10286 -- 6/0 Carved Bed Rails

*The Headboard may be used alone with an
 Eastern King or California King Size
 Metal Bed Frame*

