


ASSEMBLY INSTRUCTION

Model : D2279DT


Description : DINING TABLE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


Step 1:

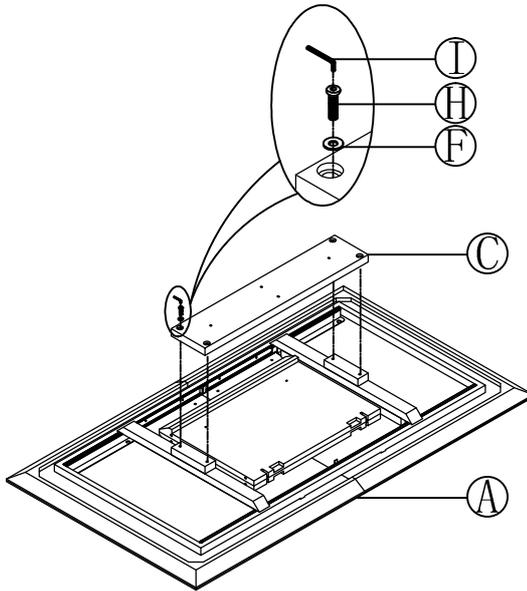

Step 2:

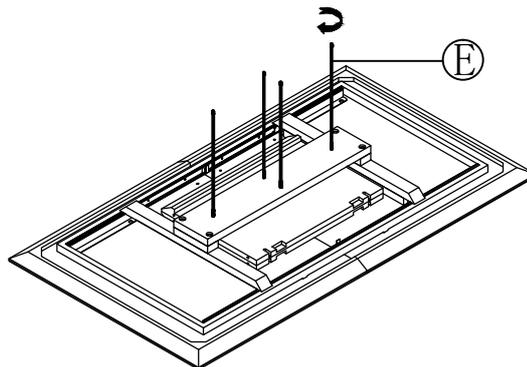

Step 3:

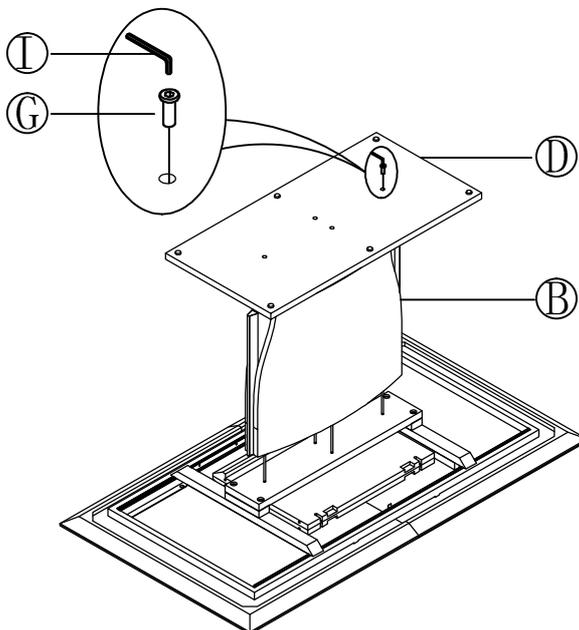


PART LIST :

| No. | Description | Diagram | Quantity |
|-----|-------------|---------|----------|
| A | table top | | 1 |
| B | Column | | 1 |
| C | wood plate | | 1 |
| D | table base | | 1 |






HARDWARE LIST :

| No. | Description | Diagram | Size | Quantity |
|-----|-------------|---------|------------|----------|
| E | Stud | | M8 x 615mm | 4 |
| F | Flat washer | | Ø20 x10mm | 4 |
| G | nut | | M8 x 25mm | 4 |
| H | Bolt | | M8 x 35mm | 4 |
| I | Allen key | | M5 | 1 |

Finished

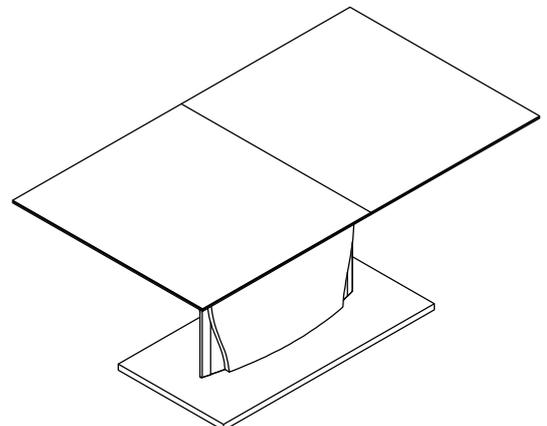

Made In China

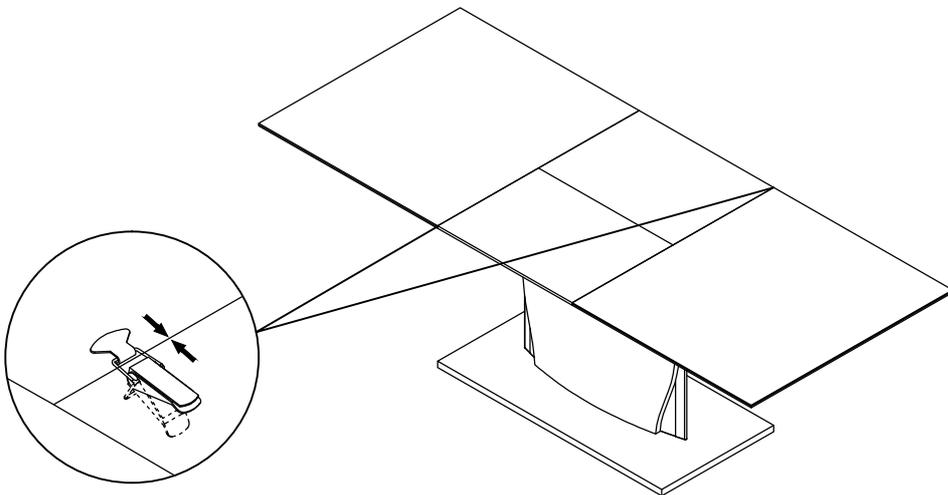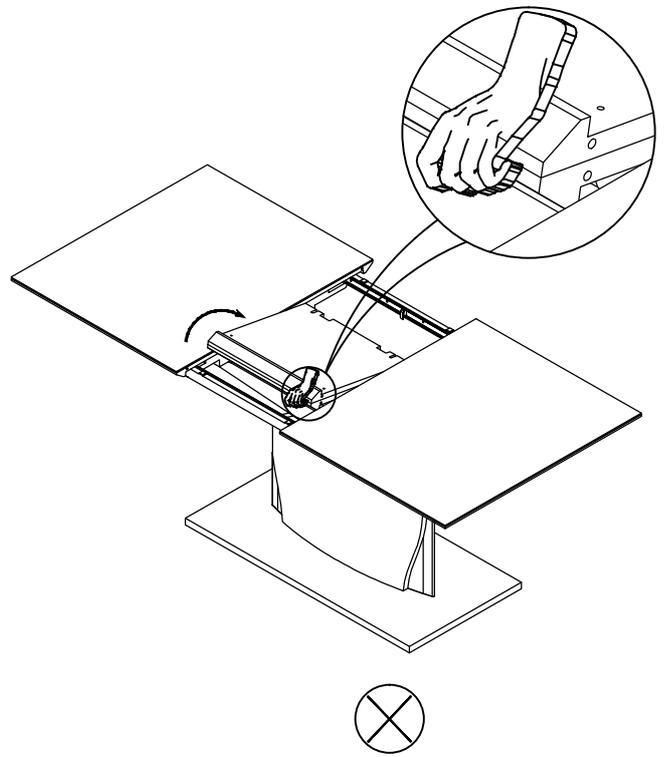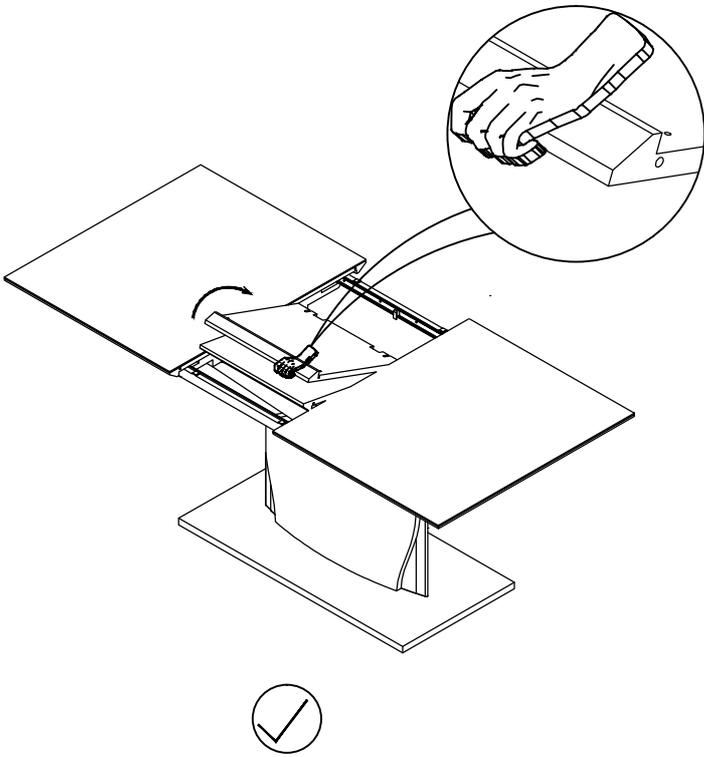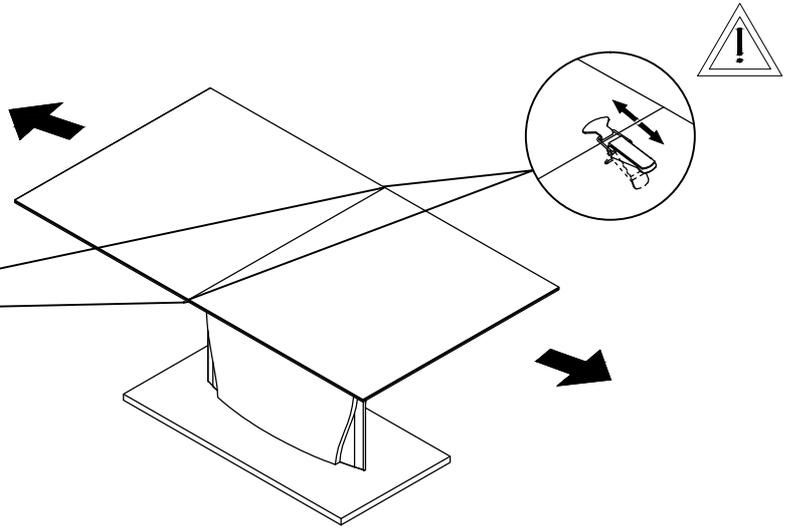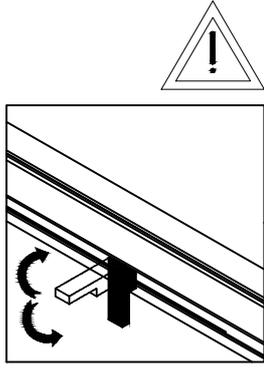


ASSEMBLY INSTRUCTION

Model : D9002DC

Description : Dining chair

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

Step 1:

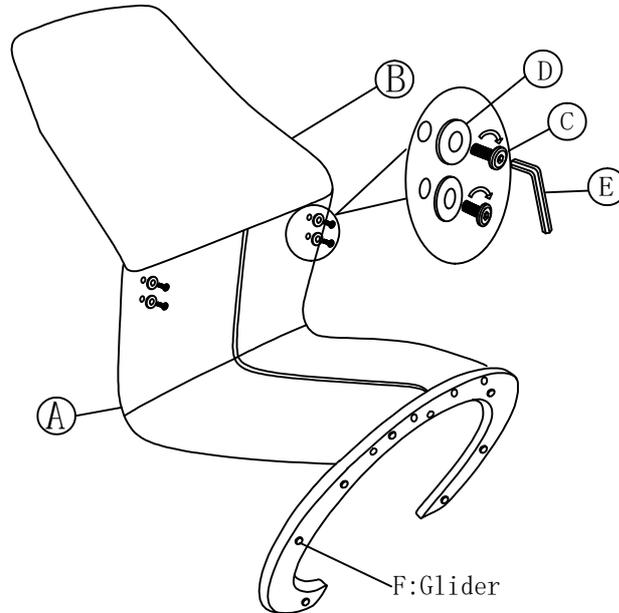

PART LIST :

| No. | Description | Diagram | Quantity |
|-----|-----------------------|---------|----------|
| A | The cushion and frame | | 1 |
| B | Back of a chair | | 1 |


HARDWARE LIST :

| No. | Description | Diagram | Size | Quantity |
|-----|-------------|---------|------------|----------|
| C | Bolt | | M6 x 12mm | 4 |
| D | Flat washer | | Ø16 x Ø6mm | 4 |
| E | Allen key | | M4 | 1 |


PREFIX HARDWARE:

| | | | | |
|---|--------|--|--|---|
| F | Glider | | | 8 |
|---|--------|--|--|---|


Step 2:

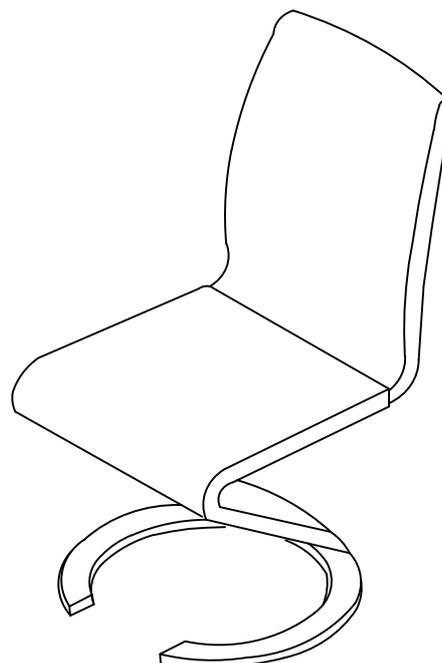

Poor Assembly Picture:

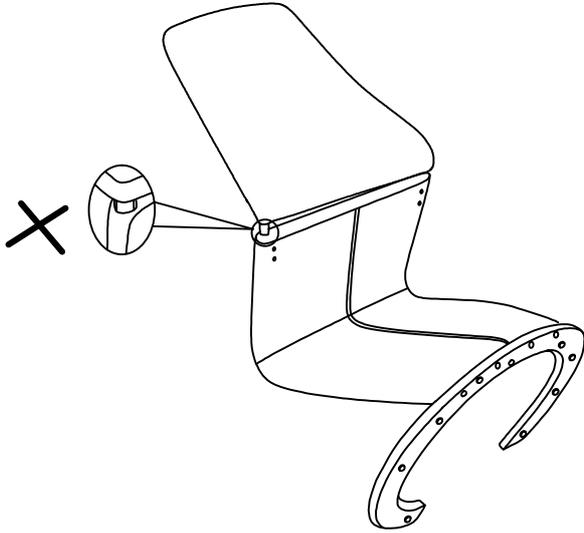

Step 2-a: Place the backrest (B) into the holes on the seat (A). Push down to make sure the screw holes on the backrest (B) are aligned with the screw holes on the seat (A). Screw in all necessary hardware as shown only halfway, do not completely tighten.

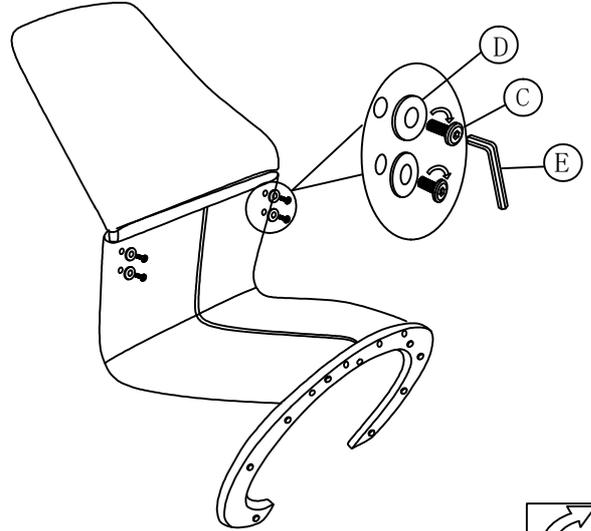

Step 2-b: Press the backrest (B) down so that the backrest is completely flush with the seat (A). Then proceed to completely lock all the screws. (Do not completely tighten the screws if the backrest (B) and seat (A) are not completely flush with each other)

Finished:

