

# ASSEMBLY INSTRUCTIONS

MODEL : 0060C  
DRESSER & MIRROR

(Box 1)  
BOX OF MIRROR

No	ITEM	Qty
A	MIRROR	1 pc



(Box 2)  
BOX OF DRESSER

No	ITEM	Qty
B	DRESSER	1 pc
C	MIRROR SUPPORT	2 pcs


(Box 2)  
HARDWARE LIST

No	ITEM	Qty
1	CSK SCREW M4 x 32MM	10 pcs


**STEP 1 :** Cut off the raffia string from the back of Dresser ( B ) and turn the Mirror Support ( C ) upward at the back of dresser ( B ),

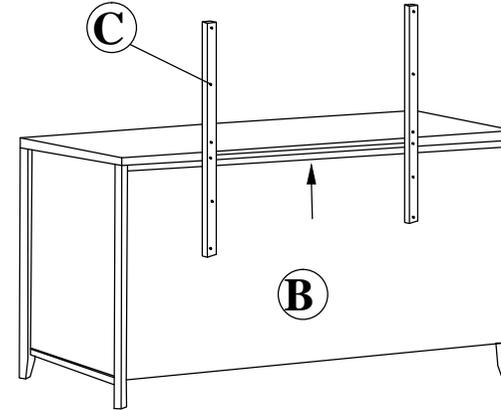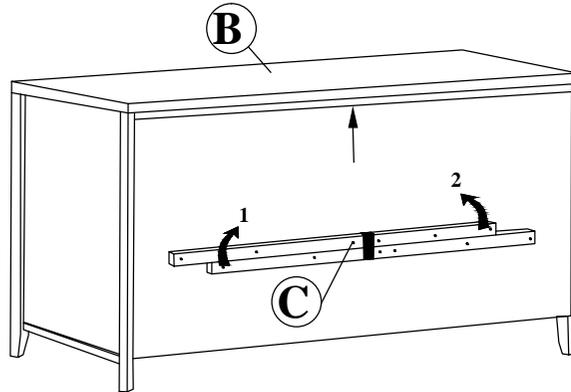

**STEP 2 :** Place the Mirror ( A ) on the top of Dresser ( B ) as shown. And tighten with CSK Screw ( 1 )

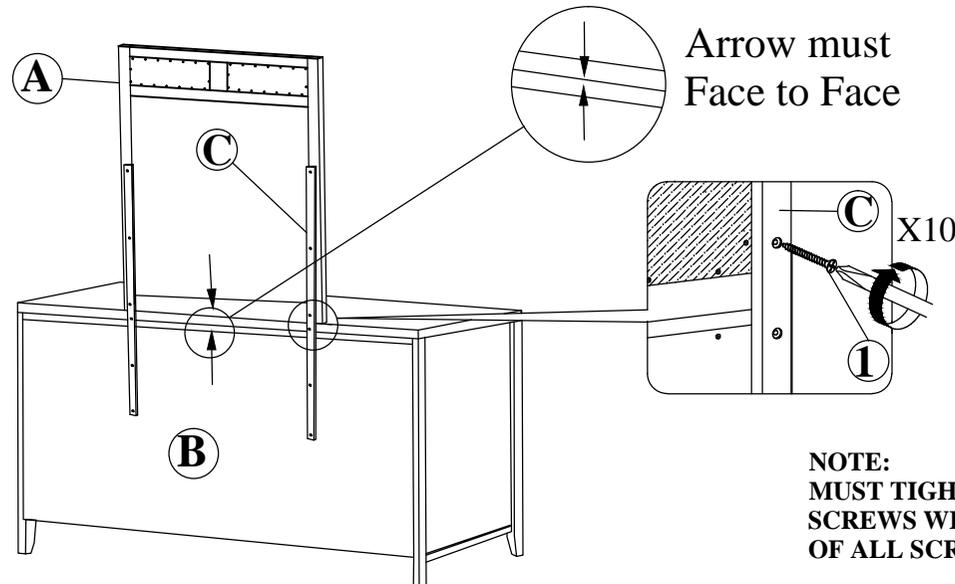

**ASSEMBLY COMPLETE!!**

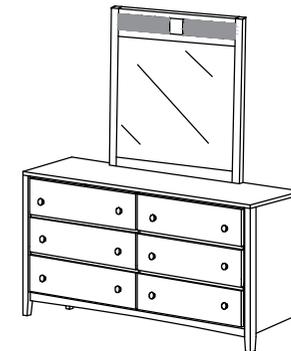

**NOTE:**  
MUST TIGHTEN SCREWS PERIODICALLY WITH USE  
SCREWS WILL BECOME LOOSE, CHECK TIGHTNESS  
OF ALL SCREW EVERY 6-8 WEEKS.

NOTE : MUST TIGHTEN SCREWS PERIODICALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

# ASSEMBLY INSTRUCTIONS

MODEL : 0060C QUEEN / FULL BED (3 + 3)

**(Box 1)**

BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard 	1 pc
B	Footboard 	1 pc
C	Headboard Leg (L/R) Nail Leg 	2 pcs
D	Bed Slat 	3 pcs
E	Bed Slat Support 	3 pcs

**(Box 2)**

BOX OF SIDE RAIL


No	ITEM	Qty
F	Side Rail 	2 pcs

**(Box 1)**


HARDWARE LIST

No	ITEM	Qty
1	Csk M4 x 32mm 	6 pcs
2	JCBC M6 x 35mm 	6 pcs
3	ALLEN KEY m4x65mm Blk 	1 pc
4	Flat Washer 1/4"ID x 13mmOD Blk 	6 pcs
5	SPRING WASHER M6 x 1/4 	6 pcs


**STEP 1 :** Attach Head Board Leg ( C ) to Head Board ( A ) as shown using JCBC BOLT ( 2 )with Spring Washer ( 5 ), Flat washer ( 4 ) and securing with ALLEN KEY ( 3 ).

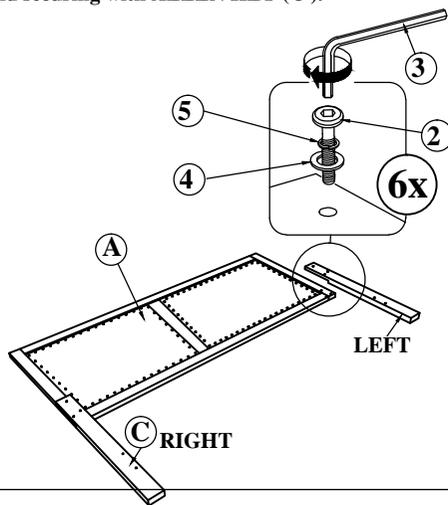

**STEP 2 :** Hook SIDE RAIL ( F ) TO HEAD BOARD ( A ) closely and push down to fit. repeat step 2 with other end of rail to hook onto FOOTBOARD ( B ).

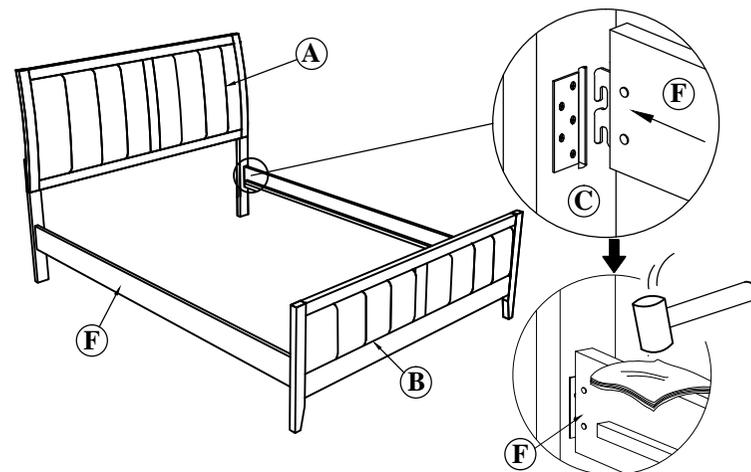

**STEP 3 :** Fix the Bed Slats Support ( E ) to Bed Slats ( D ) as Shown and fix the Bed Slats to Side Rail ( F ) by using CSK Screw ( 1 ). Loosen or Tighten the Adjuster as necessary to level the bed. Bed assembly should be done in final location to ensure stability.

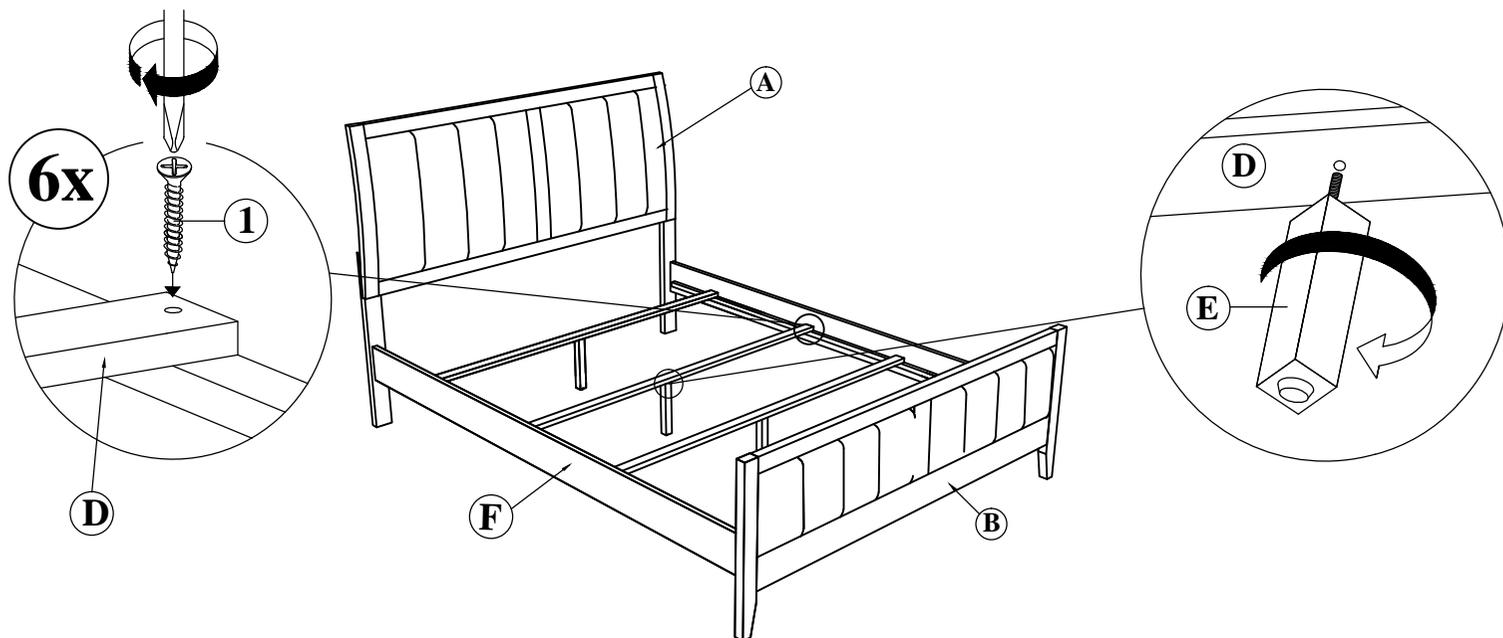


NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


# ASSEMBLY INSTRUCTIONS

**MODEL : 0295A  
CHEST**

**(BOX 1)  
BOX OF CHEST**

NO	ITEM	QTY
A	CHEST 	1 pc
B	BUN FOOT 	4 pcs

**STEP 1 :** Pull the drawer and take out the Bunfoot carton ( B ). Attach the Bunfoot ( B ) at the bottom Chest ( A ) used JCBC ( 1 ) with Spring Washer ( 2 ) Flat Washer ( 3 ) and tighten with Allen Wrench ( 4 ).

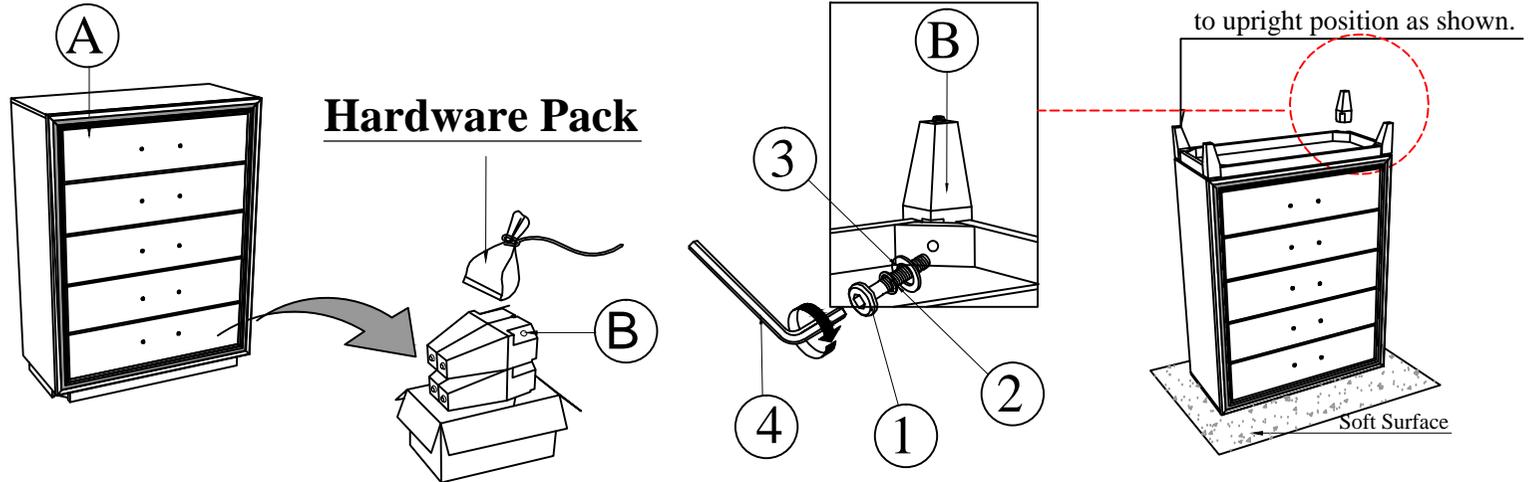

**STEP 2 :**


**(BOX 1)  
HARDWARE LIST**

NO	ITEM	QTY
1	JCBC M6 x 50mm 	4 pcs
2	Spring Washer 1/4" Rbw 	4 pcs
3	Flat Washer 1/4" ID x 19mm OD Bk 	4 pcs
4	ALLEN KEY m4x65mm Bk 	1 pc




**COMPLETED ASSEMBLY**

**Step 2.1**

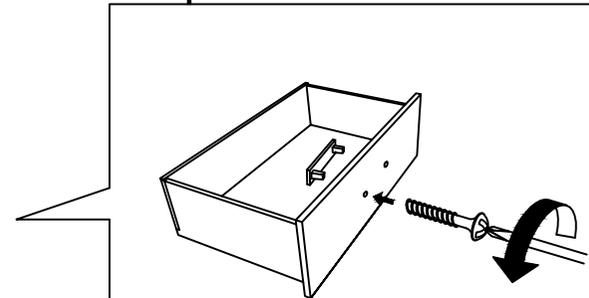

**Step 2.2**

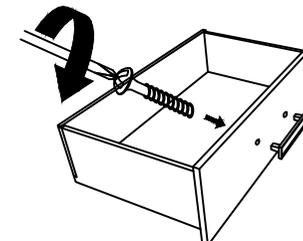

**NOTE :** MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.

# ASSEMBLY INSTRUCTIONS

**MODEL : 0295A  
DRESSER**


**STEP 1 :** Pull the drawer and take out the Bunfoot carton ( B ). Attach the Bunfoot ( B ) at the bottom Night Stand ( A ) used JCBC ( 1 ) with Spring Washer ( 2 ) Flat Washer ( 3 ) and tighten with Allen Wrench ( 4 ).

**(BOX 1)  
BOX OF DRESSER**


NO	ITEM	QTY
A	DRESSER	1 pc
B	BUN FOOT	4 pcs
C	BOTTOM SUPPORT LEG	1 pc

## Hardware Pack

### Remove Center Leg

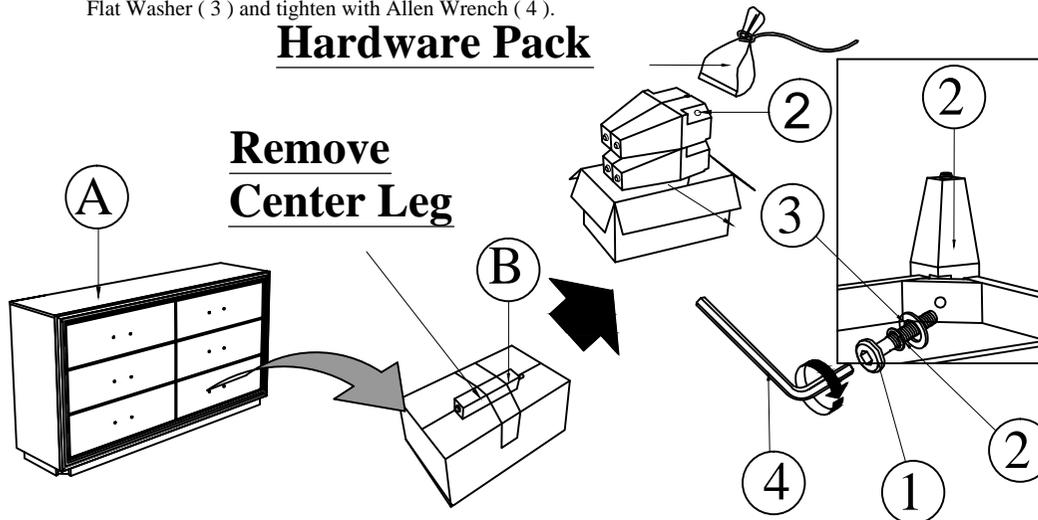


Leveler Adjuster Remark : Turn the Dresser to upright position as shown.

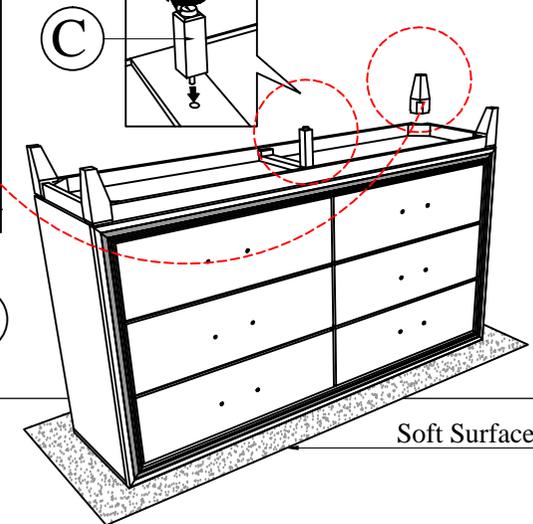

**STEP 2 :**


**(BOX 1)  
HARDWARE LIST**

NO	ITEM	QTY
1	JCBC M6 x 50mm	4 pcs
2	Spring Washer 1/4" Rbw	4 pcs
3	Flat Washer 1/4"ID x 19mmOD Bk	4 pcs
4	ALLEN KEY m4x65mm Bk	1 pc

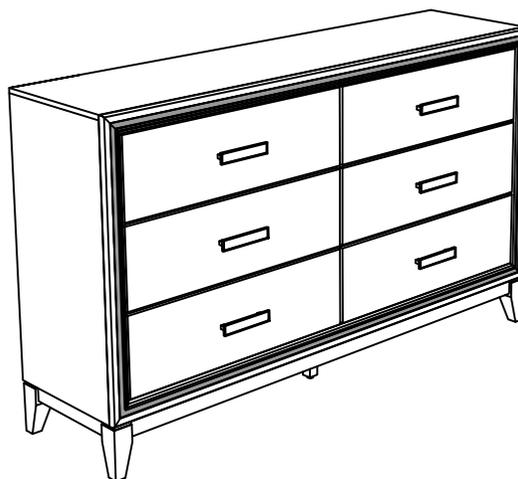


**COMPLETED ASSEMBLY**

**Step 2.1**

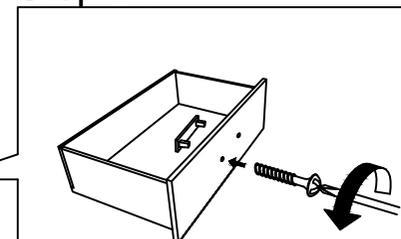

**Step 2.2**

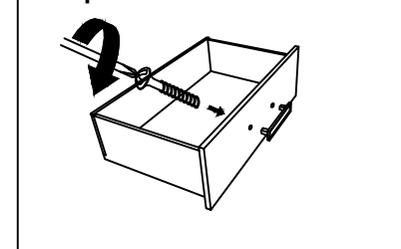

**NOTE :** MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


# ASSEMBLY INSTRUCTIONS




**MODEL : 0295A  
NIGHT STAND**

**STEP 1 :** Pull the drawer and take out the Bunfoot carton ( B ). Attach the Bunfoot ( B ) at the bottom Night Stand ( A ) used JCBC ( 1 ) with Spring Washer ( 2 ) Flat Washer ( 3 ) and tighten with Allen Wrench ( 4 ).

Remark : Turn the Night Stand to upright position as shown.


**(BOX 1)  
BOX OF NIGHT STAND**

NO	ITEM	QTY
	NIGHT STAND	
A		1 pc
	BUN FOOT	
B		4 pcs

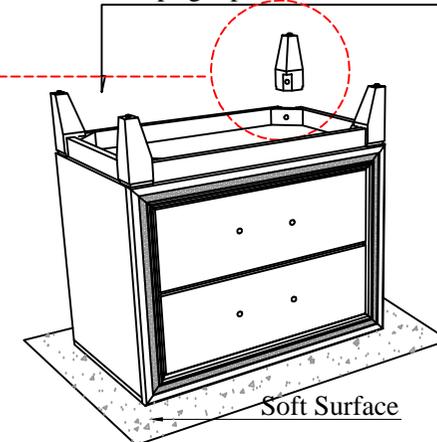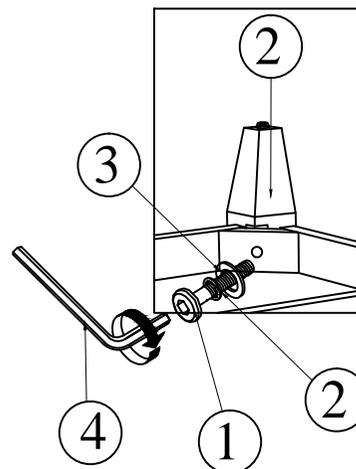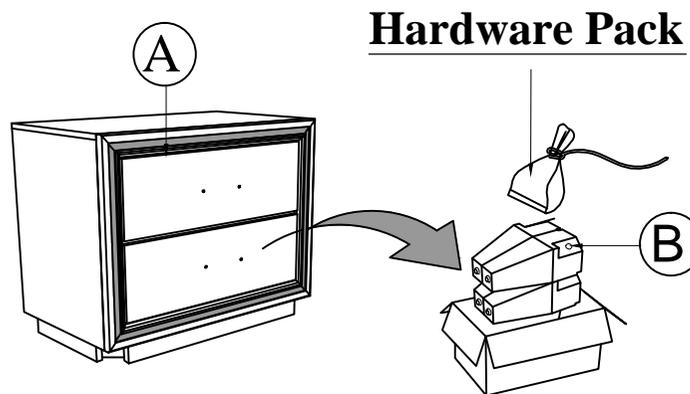


**STEP 2 :**

**Step 2.1**

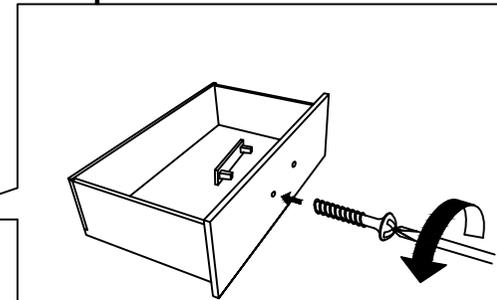


**Step 2.2**

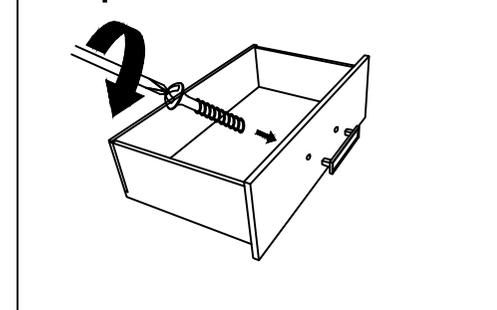

**(BOX 1)  
HARDWARE LIST**

NO	ITEM	QTY
1	JCBC M6 x 50mm 	4 pcs
2	Spring Washer 1/4" Rbw 	4 pcs
3	Flat Washer 1/4" ID x 19mm OD Bk 	4 pcs
4	ALLEN KEY m4x65mm Bk 	1 pc

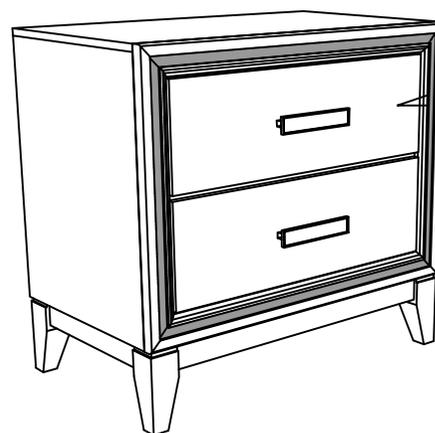

**COMPLETED ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.