


POLY ADIRONDACK GLIDER

EASY ASSEMBLY INSTRUCTIONS

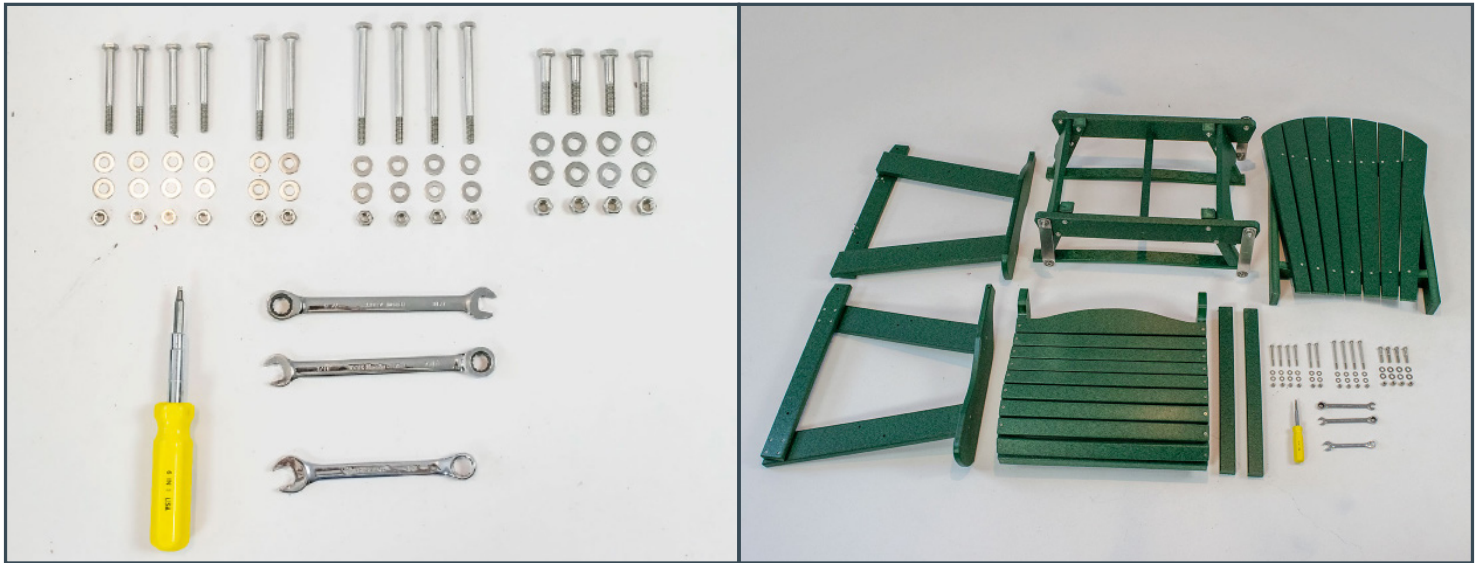

Step 1 (Attach arms to seat)



Set the seat on its side then set the arms on the side of the side ensuring the bolt holes align. Insert a short bolt into the washer, top hole of the front arm brace and seat. Slide on another washer and tighten nut onto bolt. Using another of the same bolt, repeat this process for the lower hole.

For both holes on the back arm brace, insert a long bolt into the washer and set in the holes of the back brace and seat. You may use a hammer to pound the bolts down until flush.

(Repeat this process for the opposite side)

GLIDER CONT.

Step 2 (Attach back to chair)



Align the holes midway up the back with the holes on the back of the arms. For both sides, insert a medium bolt into the washer, arms and back then slide on another washer to each and tighten nuts onto the bolts.

Align the holes on the bottom of the back with the holes that set the bolts in during step 1. You may use a hammer to pound the bolts all the way through then for each bolt, slide on another washer and tighten nut onto bolts.

Step 3 Tighten all bolts in the chair

Step 4 (Attach chair to base)



*The front hangers on the base are 1" shorter than the back
With the front facing forward, slide the base under the chair.

Insert one of the short thicker bolts into the washer and front of chair. Lift the side of the chair and push the bolt through the front hanger. Slide on another washer and tighten nut onto bolt.
(Repeat this process for the back hanger.)

Repeat the hanger bolting process for the opposite side then tighten all bolts.

GLIDER CONT.

Step 5 (Attach gliding braces)



Horizontally align the front sliding brace with the screws in the bottom arm brace. Ensure the sliding brace is flush with the bottom arm brace and drive screws in.

(Repeat this process for the opposite side)

Vertically align the back gliding brace with the screws in the bottom arm brace and drive screws in. Ensure the sliding brace is flush with the bottom arm brace and drive screws in.

(Repeat this process for the opposite side)



Step 6 ENJOY!

Customer Service: Call 1-866-872-3437. Ask for Darren.