

UTTERMOST


ASSEMBLY INSTRUCTIONS

STYLE# 29642-1

Careful unpack all lamp parts from the carton.

1. Position the round plate on the top of the Shade through the Socket. Thread the Metal Sleeve onto the socket. Then use Plastic Wrench to lock the Socket Collar to secure the Shade. Hand tighten until snug.

2. Install correct Bulbs referring to fixture marking and /or labels for maximum wattage. (Not Included)

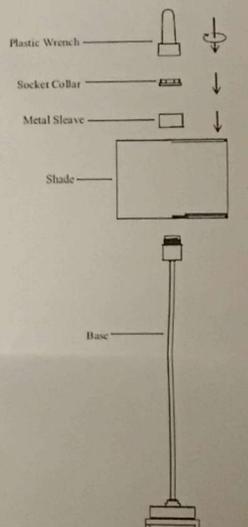

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151
www.uttermost.com