




ITEM NO: I201-412 Queen Estate Panel HB
 I201-402 Queen Rails
 I201-403 Queen Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

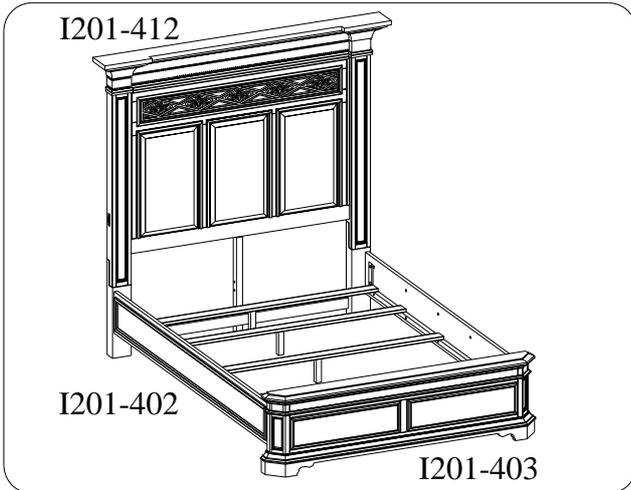

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I201-412			
No.	Description	Sketch	Quantity
A	Bolt Ø1/4"*2"		8 PCS
B	Bolt Ø1/4"*1-3/8"		8 PCS
C	Lock Washer Ø1/4"		16 PCS
D	Flat Washer Ø1/4" *3/4"		16 PCS
E	Allen Wrench 4mm		1 PC

HARDWARE LIST: I201-402			
No.	Description	Sketch	Quantity
F	Hanger Bolt Ø5/16"*3-1/2"		8 PCS
G	Flat washer 5/16 x 9/16"		8 PCS
H	Lock Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 12mm		1 PC
K	Wood Screw M4*1-1/2"		8 PCS
L	Allen Wrench 4mm		1 PC

COMPONENTS LIST: I201-412			
No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I201-402			
No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS

COMPONENTS LIST: I201-403			
No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support leg(for center rail)		4 PCS



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I201-412 Queen Estate Panel HB
 I201-402 Queen Rails
 I201-403 Queen Low Profile FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 8 bolts(A), lock washers(C) and flat washers(D).

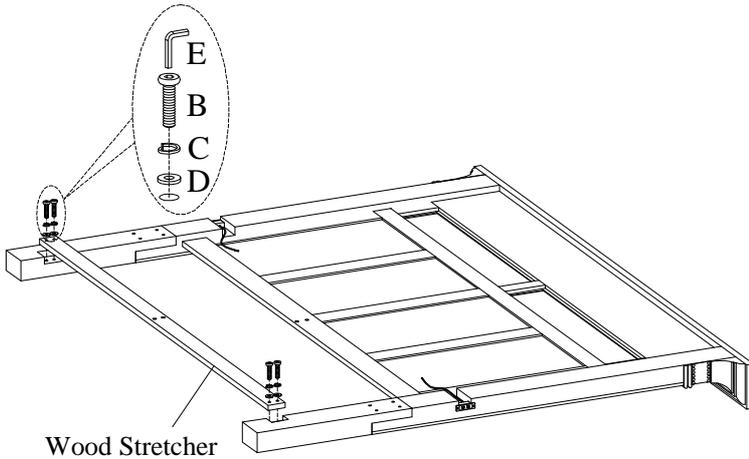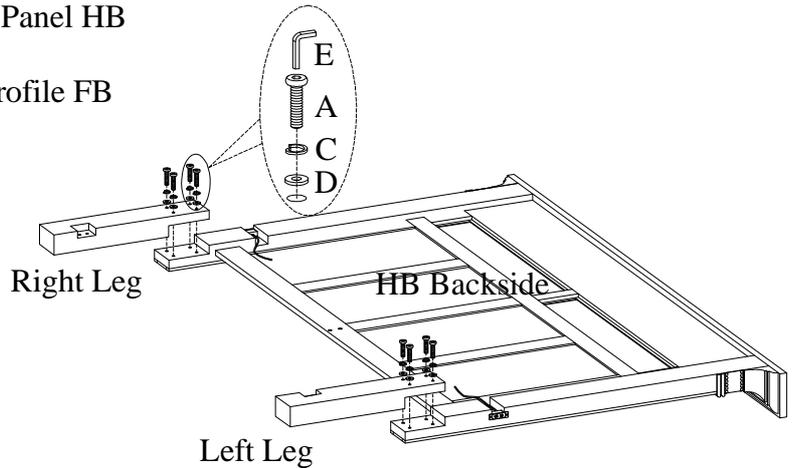


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(C) and flat washers(D).

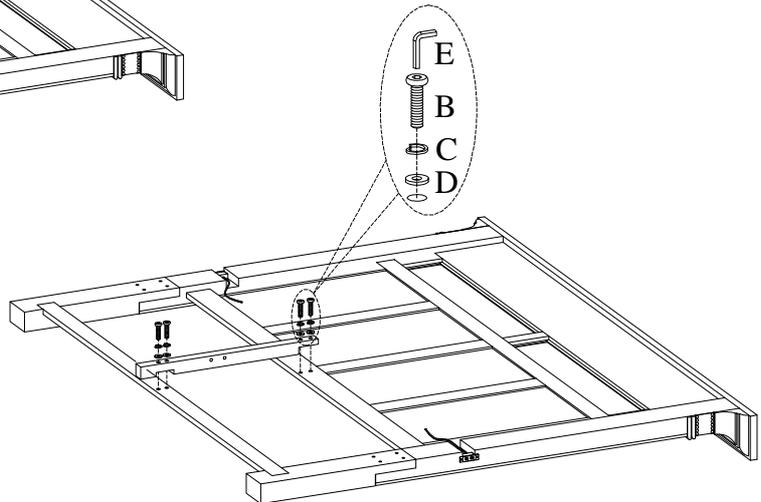

STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(B), lock washers(C) and flat washers(D).


STEP 4: The rails ship with the slat bearers assembled in UPPER position for a storage set up and must be moved to LOWER position for the non-storage set up. Move the slat bearers down to the LOWER position. Remove the bolts(10 pcs) and wood screws(10 pcs) from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position with bolts, lock washers, flat washers and wood screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

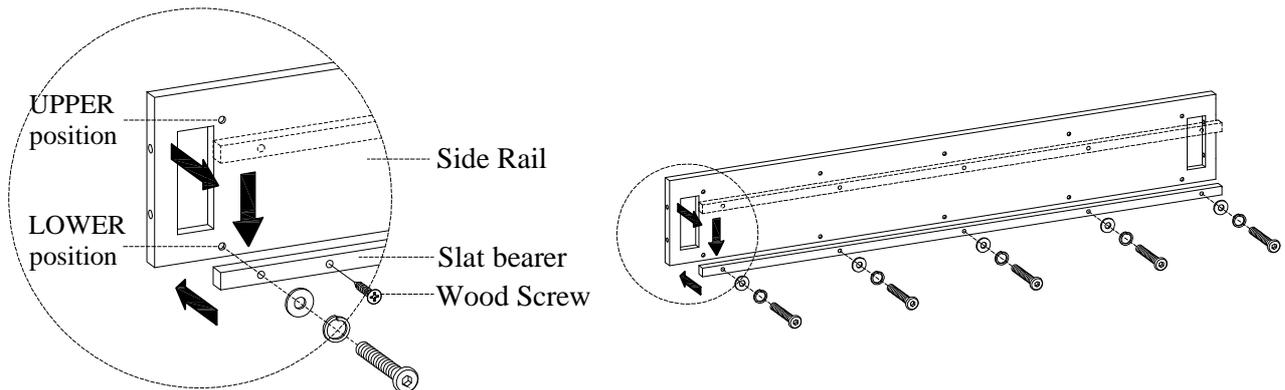




ITEM NO: I201-412 Queen Estate Panel HB
 I201-402 Queen Rails
 I201-403 Queen Low Profile FB


STEP 5: Screw the bolts(F) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washer(G), lock washers(H) and nuts (I). Then use a hex wrench(J) to tighten all the nuts.

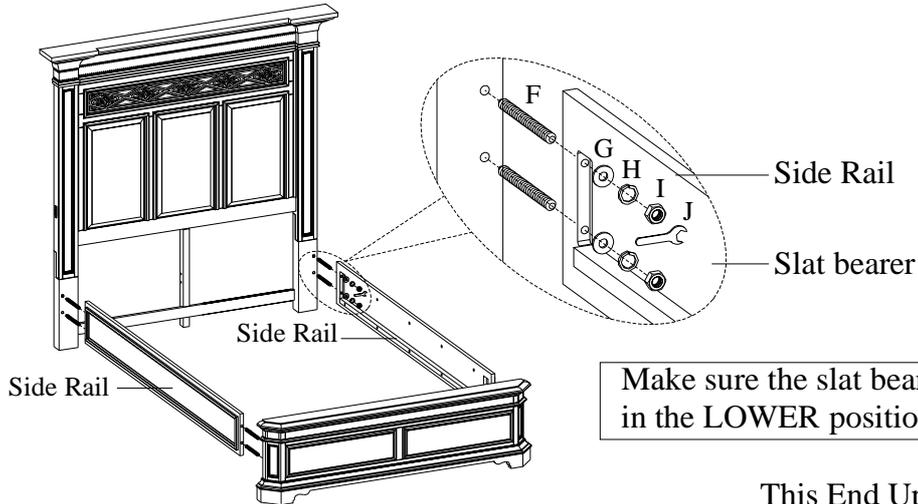

This End Up

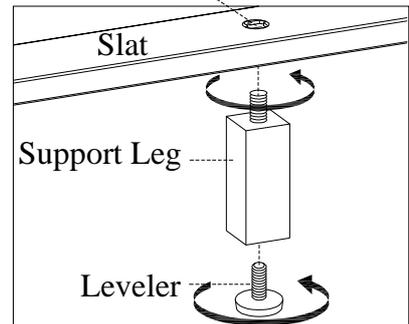


STEP 6: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

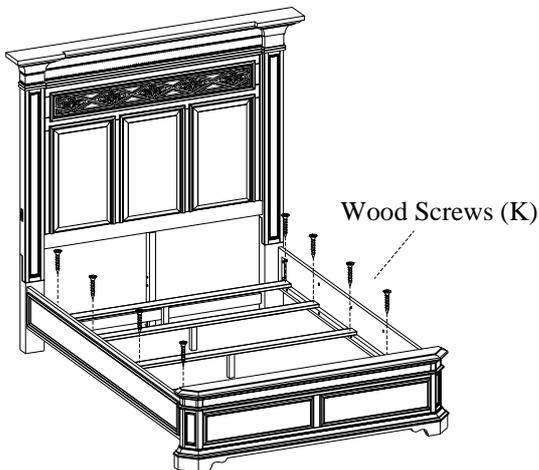

STEP 7: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (K).

I201-412

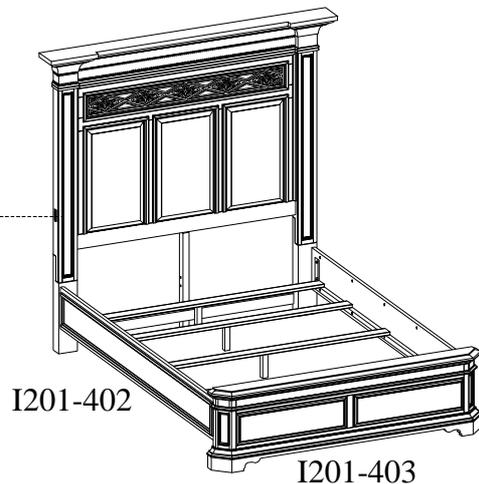

FUNCTIONALITY INSTRUCTION

1 Powered USB Port for Charging on both sides




ITEM NO: I201-412 Queen Estate Panel HB
 I201-402 Queen Rails
 I201-403D Queen Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

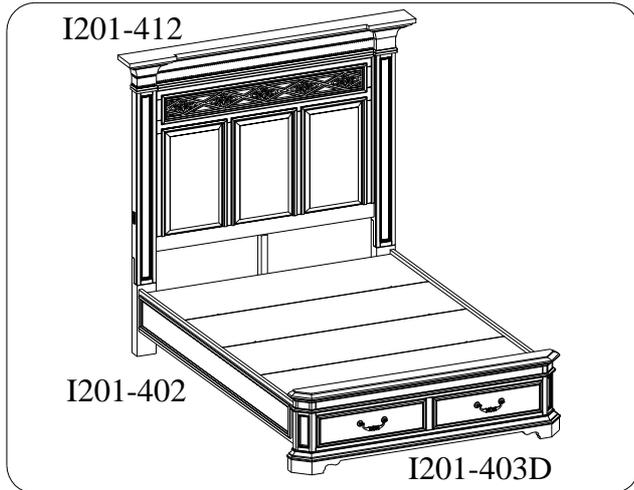

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER

HARDWARE LIST: I201-412

No.	Description	Sketch	Quantity
A	Bolt Ø1/4"*2"		8 PCS
B	Bolt Ø1/4"*1-3/8"		8 PCS
C	Lock Washer Ø1/4"		16 PCS
D	Flat Washer Ø1/4" *3/4"		16 PCS
E	Allen Wrench 4mm		1 PC

HARDWARE LIST: I201-402

No.	Description	Sketch	Quantity
F	Hanger Bolt Ø5/16"*3-1/2"		8 PCS
G	Flat washer 5/16 x 9/16"		8 PCS
H	Lock Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 12mm		1 PC
K	Wood Screw M4*1-1/2"		8 PCS
L	Allen Wrench 4mm		1 PC

HARDWARE LIST: I201-403D

No.	Description	Sketch	Quantity
M	Bolt Ø1/4"*1-3/8"		8 PCS
N	Lock Washer Ø1/4"		8 PCS
O	Flat Washer Ø1/4" *3/4"		8 PCS
P	Allen Wrench 4mm		1 PC
Q	Wood Screw M4*1"		8 PCS

COMPONENTS LIST: I201-412

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I201-402

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		4 PCS

COMPONENTS LIST: I201-403D

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for center rail)		2 PCS
3	Support leg (for pedestal)		3 PCS
4	Decking		4 PCS
5	Center rail		1 PC



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I201-412 Queen Estate Panel HB
 I201-402 Queen Rails
 I201-403D Queen Storage FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 8 bolts(A), lock washers(C) and flat washers(D).

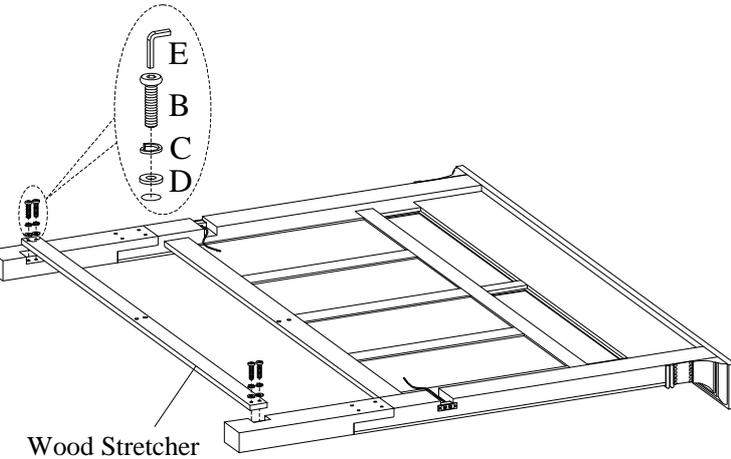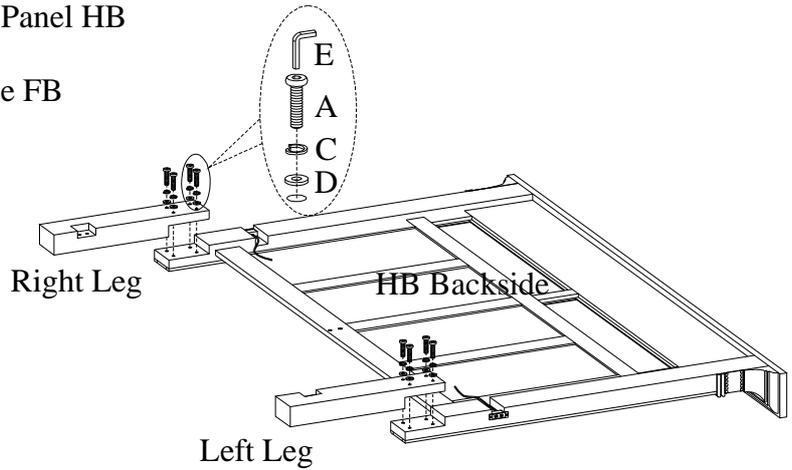


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(C) and flat washers(D).

STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(B), lock washers(C) and flat washers(D).

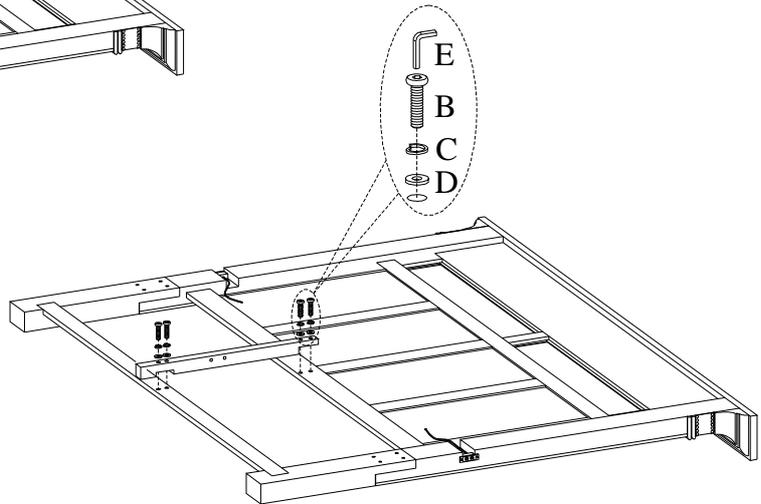


STEP 4: Put footboard upside down on a padded, clean surface. Attach support legs (for pedestal) to footboard. Turn footboard right side up.

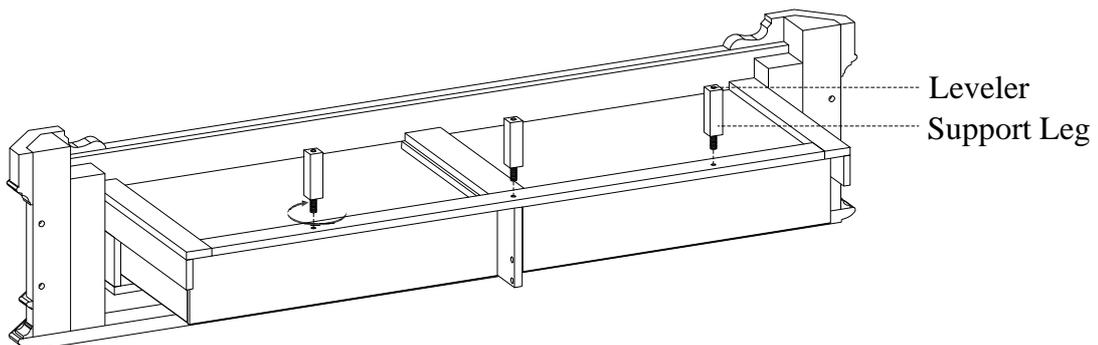




ITEM NO: I201-412 Queen Estate Panel HB
 I201-402 Queen Rails
 I201-403D Queen Storage FB


STEP 5: Screw the bolts(F) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washer(G), lock washers(H) and nuts (I). Then use a hex wrench(J) to tighten all the nuts.

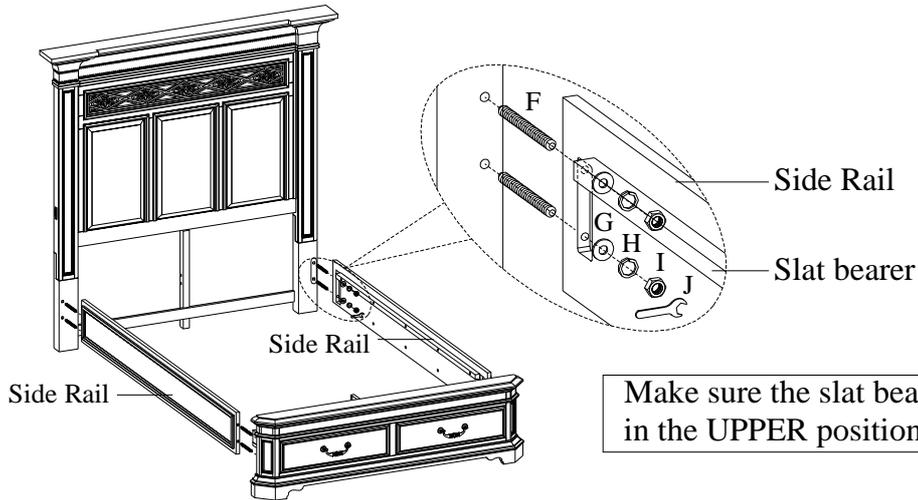

STEP 6: Attach center rail to the footboard and center support leg of headboard using 4 bolts(M), lock washers(N) and flat washers(O).

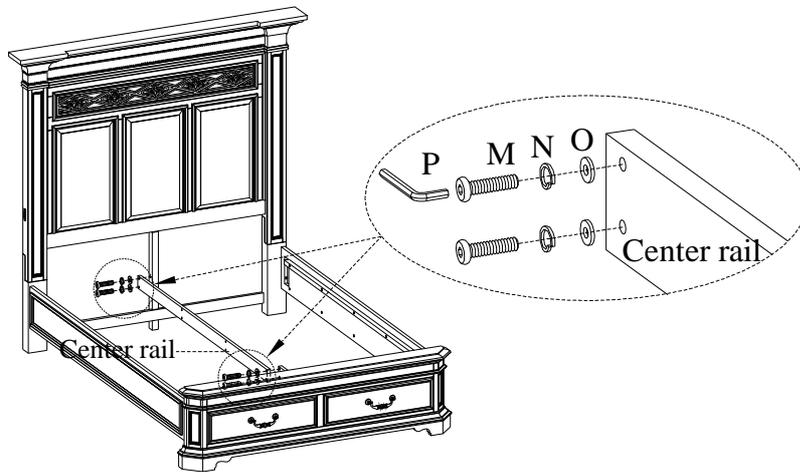


STEP 7: Attach 2 support legs (for center rail) to the center rail using 4 bolts(M), lock washers(N) and flat washers(O). Use the Allen Wrench (P) to tighten all of the bolts.

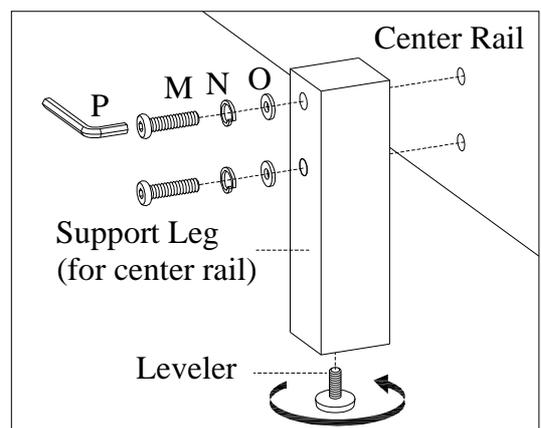




ITEM NO: I201-412 Queen Estate Panel HB
 I201-402 Queen Rails
 I201-403D Queen Storage FB


STEP 8: Arrange slats on the slat bearers and then lay decking on top of the slats. Make sure the slats are positioned along the seams of the decking as shown in the detail in STEP 9 under the pre-drilled hole. Remove the decking and attach slats to the slat bearers with wood screws (K).

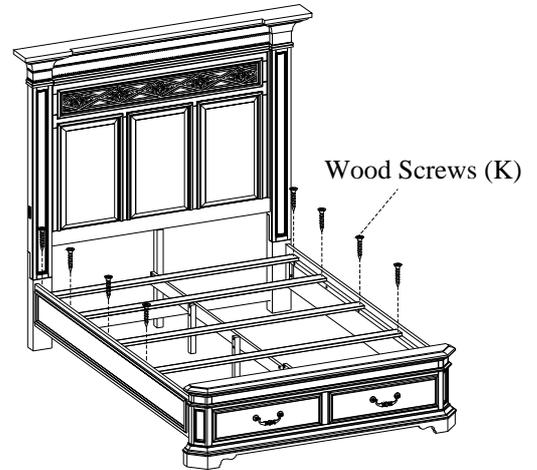

STEP 9: Put the decking over the slats, secure decking to the slats with wood screws (Q) through the pre-drilled holes in the decking as shown below.

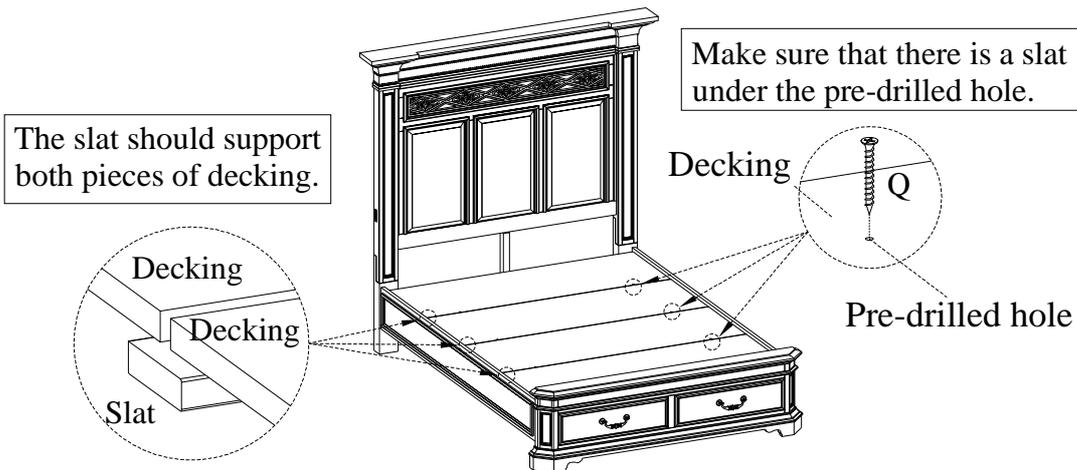

FUNCTIONALITY INSTRUCTION

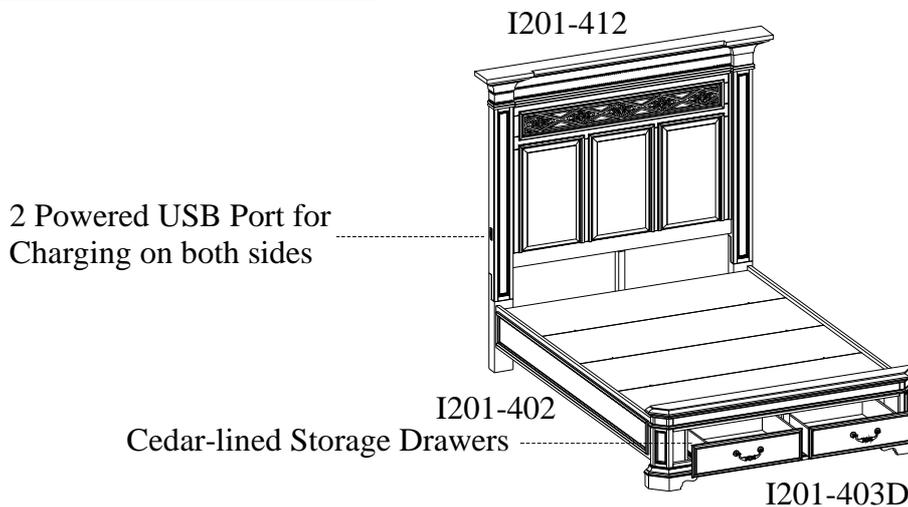




- ITEM NO: I201-415 King Estate Panel HB
 I201-406 King Rails
 I201-410 Cal King Rails
 I201-407 King Low Profile FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

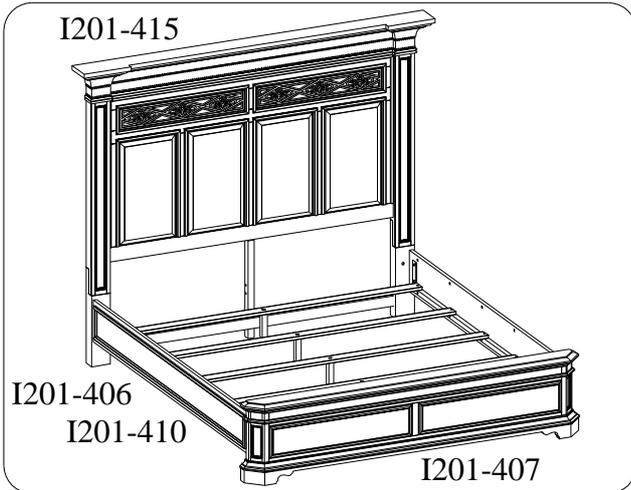

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)
PHILLIPS SCREWDRIVER
UTILITY KNIFE (FOR CAL KING)

HARDWARE LIST: I201-415

No.	Description	Sketch	Quantity
A	Bolt Ø1/4"*2"		8 PCS
B	Bolt Ø1/4"*1-3/8"		8 PCS
C	Lock Washer Ø1/4"		16 PCS
D	Flat Washer Ø1/4" *3/4"		16 PCS
E	Allen Wrench 4mm		1 PC

HARDWARE LIST: I201-406/410

No.	Description	Sketch	Quantity
F	Hanger Bolt Ø5/16"*3-1/2"		8 PCS
G	Flat washer 5/16 x 9/16"		8 PCS
H	Lock Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 12mm		1 PC
K	Wood Screw M4*1-1/2"		10 PCS
L	Allen Wrench 4mm		1 PC
M	Poly Cap (only for 410)		8 PCS

COMPONENTS LIST: I201-415

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I201-406

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS

COMPONENTS LIST: I201-410

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I201-407

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support leg(for center rail)		5 PCS



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I201-415 King Estate Panel HB
 I201-406 King Rails
 I201-410 Cal King Rails
 I201-407 King Low Profile FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 8 bolts(A), lock washers(C) and flat washers(D).

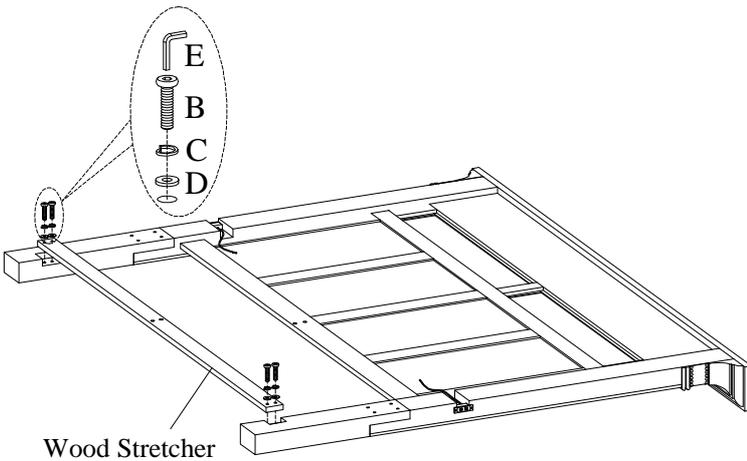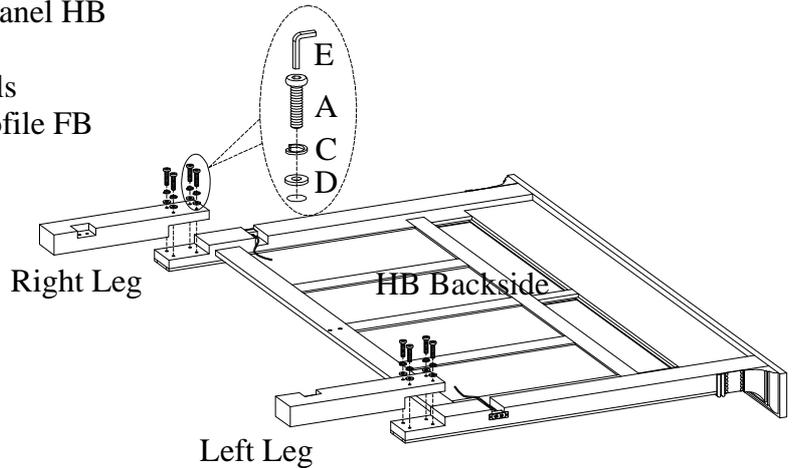


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(C) and flat washers(D).

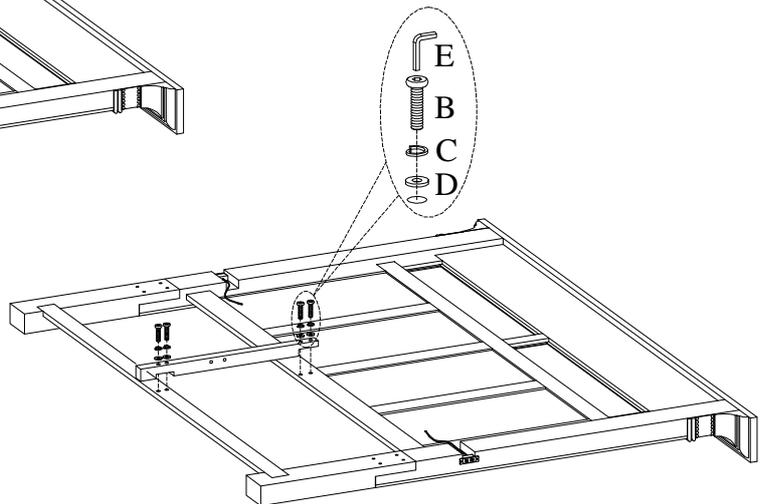

STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(B), lock washers(C) and flat washers(D).


STEP 4: The rails ship with the slat bearers assembled in UPPER position for a storage set up and must be moved to LOWER position for the non-storage set up. Move the slat bearers down to the LOWER position. Remove the bolts(10 pcs) and wood screws(10 pcs) from the slat bearers and side rails as shown below. Then re-attach the slat bearers to the side rails in desired position with bolts, lock washers, flat washers and wood screws. **Caution: Do not over tighten bolts as this may loosen the threaded inserts in the side rails.**

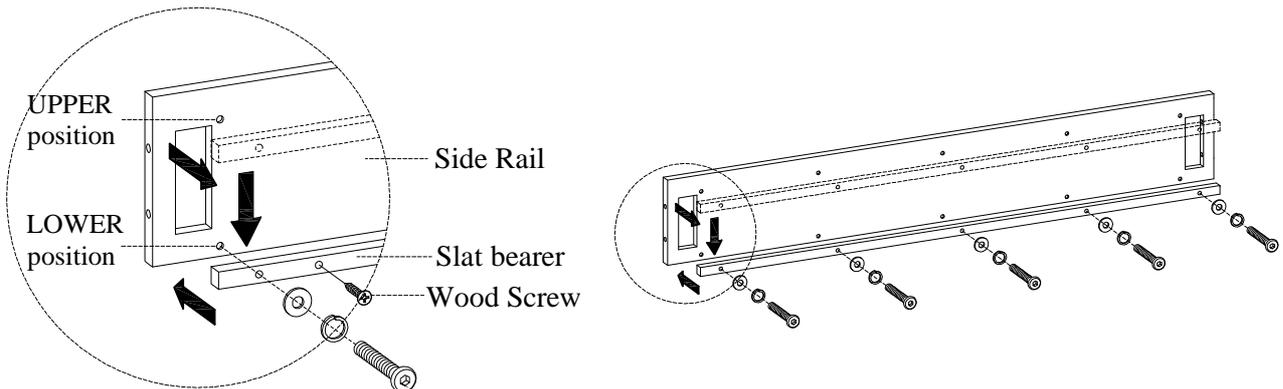




- ITEM NO: I201-415 King Estate Panel HB
 I201-406 King Rails
 I201-410 Cal King Rails
 I201-407 King Low Profile FB


STEP 5: Screw the bolts(F) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washer(G), lock washers(H) and nuts (I). Then use a hex wrench(J) to tighten all the nuts.

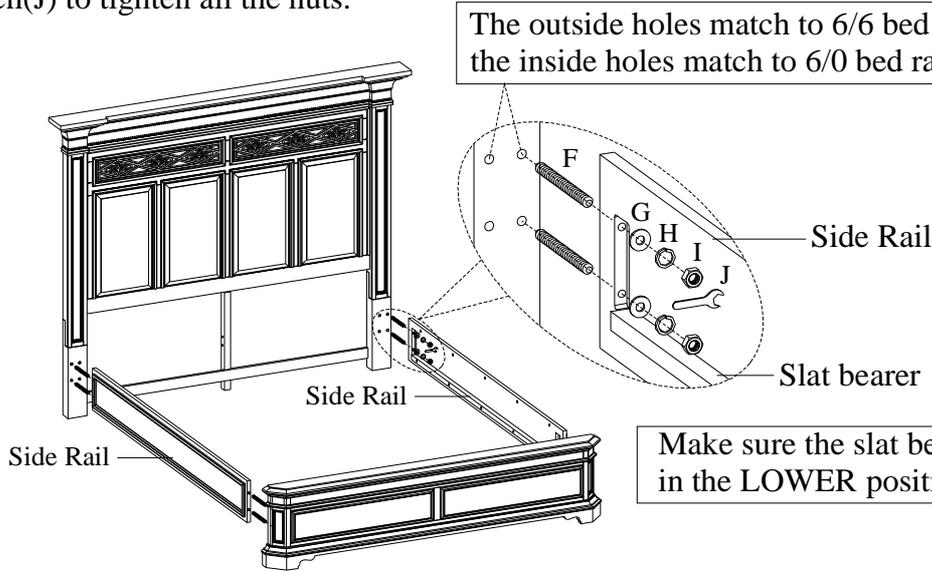

STEP 6: Attach the support legs with leveler to the slats. Adjust the levelers on bottom of support legs when necessary.

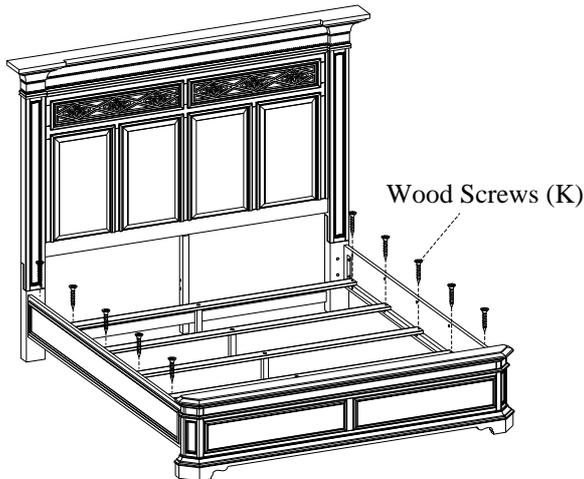


This End Up

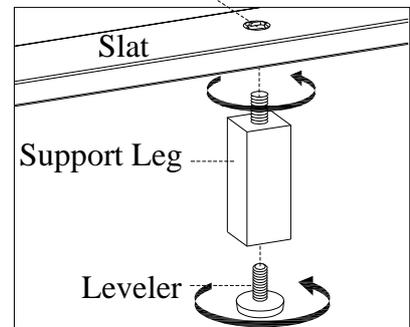

STEP 7: Arrange the slats on the slat bearers equally and attach to the slat bearers with wood screws (K).

STEP 8: For Cal King bed, insert poly caps into the holes on headboard and footboard. For regular King bed, skip this step.

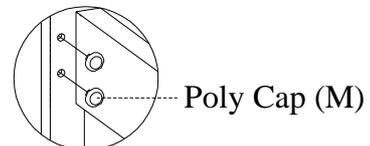




- ITEM NO: I201-415 King Estate Panel HB
- I201-406 King Rails
- I201-410 Cal King Rails
- I201-407 King Low Profile FB

FUNCTIONALITY INSTRUCTION


I201-415

2 Powered USB Port for Charging on both sides

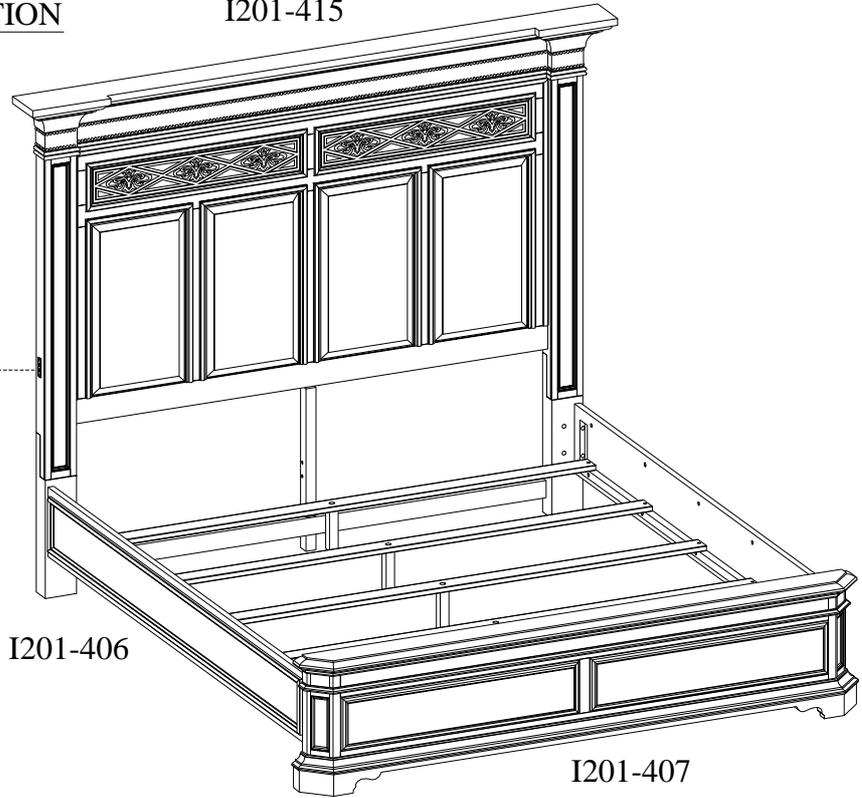

I201-415

2 Powered USB Port for Charging on both sides

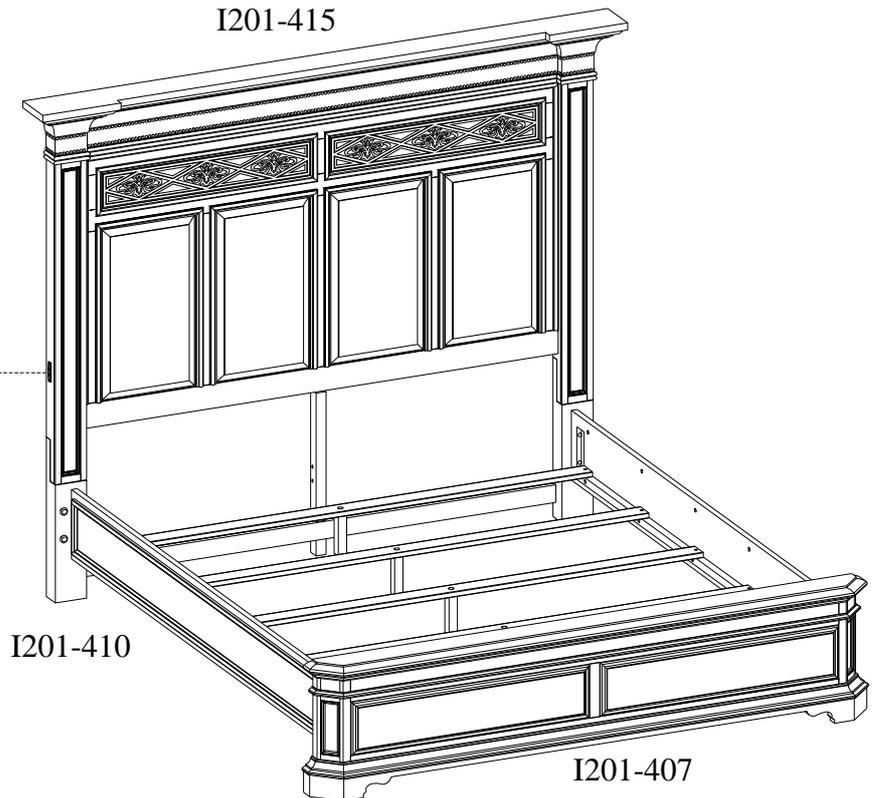




ITEM NO: I201-415 King Estate Panel HB
 I201-406 King Rails
 I201-410 Cal King Rails
 I201-407D King Storage FB

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may come loose inside the carton during shipment.



UNIT SHOULD BE INSTALLED BY 2 OR MORE PERSONS.

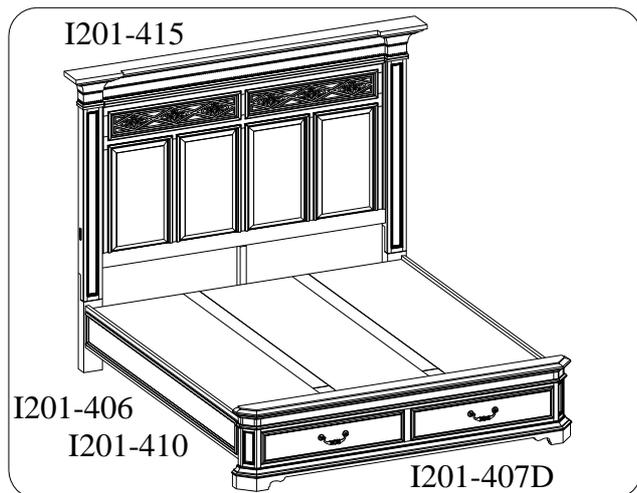

All Beds need to be set up in the exact final location so that after full assembly it will not need to be moved. Moving the bed will cause the support legs to move out of perpendicular (90 degree), weaken the support system, and may allow the bed to collapse.

TOOLS REQUIRED (NOT PROVIDED)

PHILLIPS SCREWDRIVER

UTILITY KNIFE (FOR CAL KING)

HARDWARE LIST: I201-415

No.	Description	Sketch	Quantity
A	Bolt Ø1/4"*2"		8 PCS
B	Bolt Ø1/4"*1-3/8"		8 PCS
C	Lock Washer Ø1/4"		16 PCS
D	Flat Washer Ø1/4" *3/4"		16 PCS
E	Allen Wrench 4mm		1 PC

HARDWARE LIST: I201-406/410

No.	Description	Sketch	Quantity
F	Hanger Bolt Ø5/16"*3-1/2"		8 PCS
G	Flat washer 5/16 x 9/16"		8 PCS
H	Lock Washer Ø5/16"		8 PCS
I	Hex Nut Ø5/16"		8 PCS
J	Hex Wrench 12mm		1 PC
K	Wood Screw M4*1-1/2"		10 PCS
L	Allen Wrench 4mm		1 PC
M	Poly Cap (only for 410)		8 PCS

HARDWARE LIST: I201-407D

No.	Description	Sketch	Quantity
N	Bolt Ø1/4"*1-3/8"		8 PCS
O	Lock Washer Ø1/4"		8 PCS
P	Flat Washer Ø1/4" *3/4"		8 PCS
Q	Allen Wrench 4mm		1 PC
R	Wood Screw M4*1"		5 PCS

COMPONENTS LIST: I201-415

No.	Description	Sketch	Quantity
1	Headboard		1 PC
2	Left Leg		1 PC
3	Right Leg		1 PC
4	Wood Stretcher		1 PC
5	Center Support Leg		1 PC

COMPONENTS LIST: I201-406

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS

COMPONENTS LIST: I201-410

No.	Description	Sketch	Quantity
1	Bed rails		2 PCS
2	Slats		5 PCS
3	Center rail (Long)		1 PC

COMPONENTS LIST: I201-407D

No.	Description	Sketch	Quantity
1	Footboard		1 PC
2	Support Leg (for center rail)		2 PCS
3	Support leg (for pedestal)		3 PCS
4	Decking		3 PCS
5	Center rail (Short)		1 PC
6	Filler		2 PCS



BEFORE USING THIS PRODUCT PLEASE READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. Save these instructions for future reference.

FOR INDOOR USE ONLY




ITEM NO: I201-415 King Estate Panel HB
 I201-406 King Rails
 I201-410 Cal King Rails
 I201-407D King Storage FB

STEP 1: Put the headboard face down on a soft surface. Attach the left leg and right leg to headboard by using 8 bolts(A), lock washers(C) and flat washers(D).

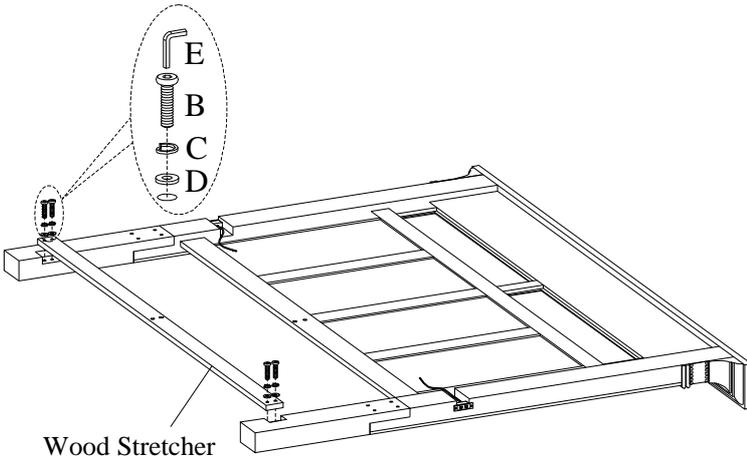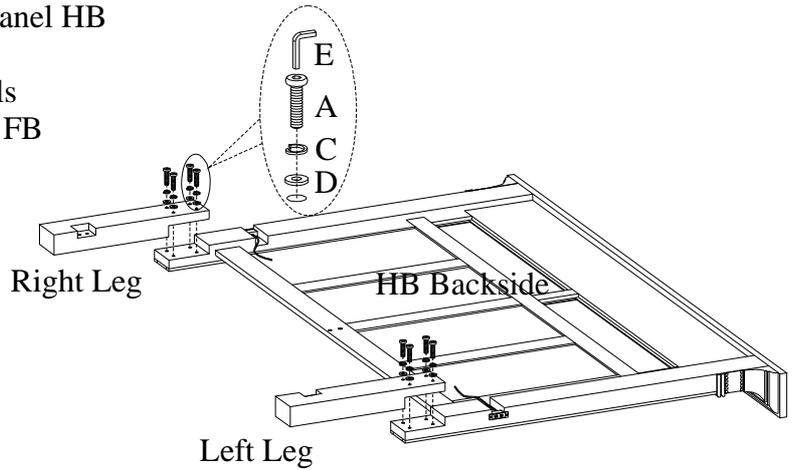


STEP 2: Attach the wood stretcher to the legs by using 4 bolts(B), lock washers(C) and flat washers(D).

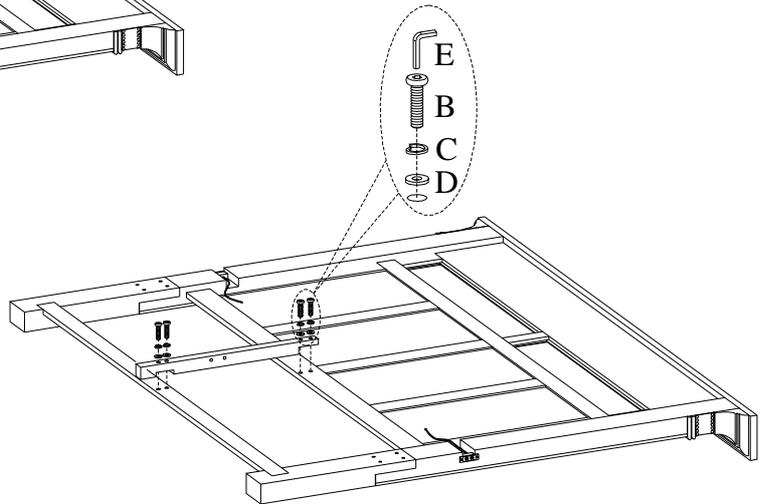

STEP 3: Attach the center support leg to headboard and wood stretcher by using 4 bolts(B), lock washers(C) and flat washers(D).


STEP 4: Put footboard upside down on a padded, clean surface. Attach support legs (for pedestal) to footboard. Turn footboard right side up.

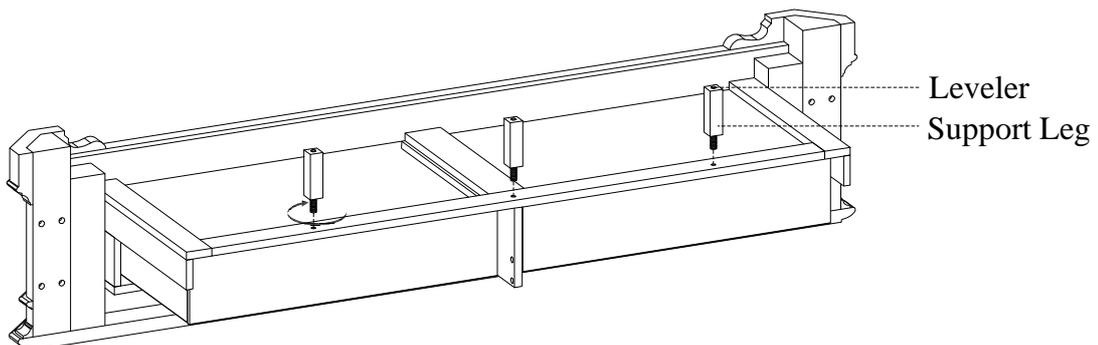




- ITEM NO: I201-415 King Estate Panel HB
 I201-406 King Rails
 I201-410 Cal King Rails
 I201-407D King Storage FB


STEP 5: Screw the bolts(F) into HB & FB. Align the bolts with the holes in the end of side rails and attach the side rails to HB & FB using flat washer(G), lock washers(H) and nuts (I). Then use a hex wrench(J) to tighten all the nuts.

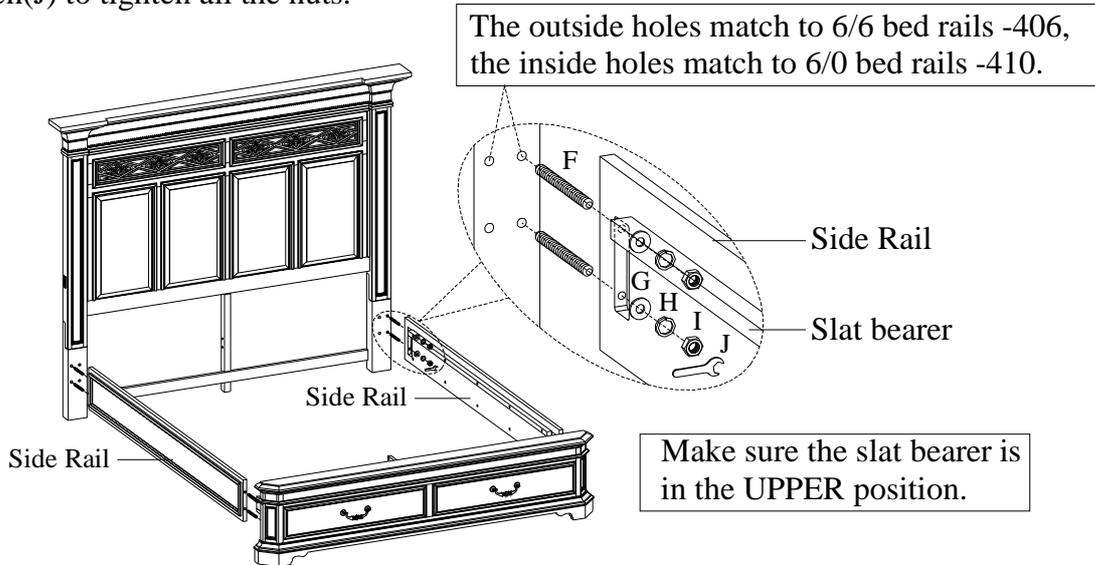

STEP 6: Attach center rail to the footboard and center support leg of headboard using 4 bolts(N), lock washers(O) and flat washers(P).

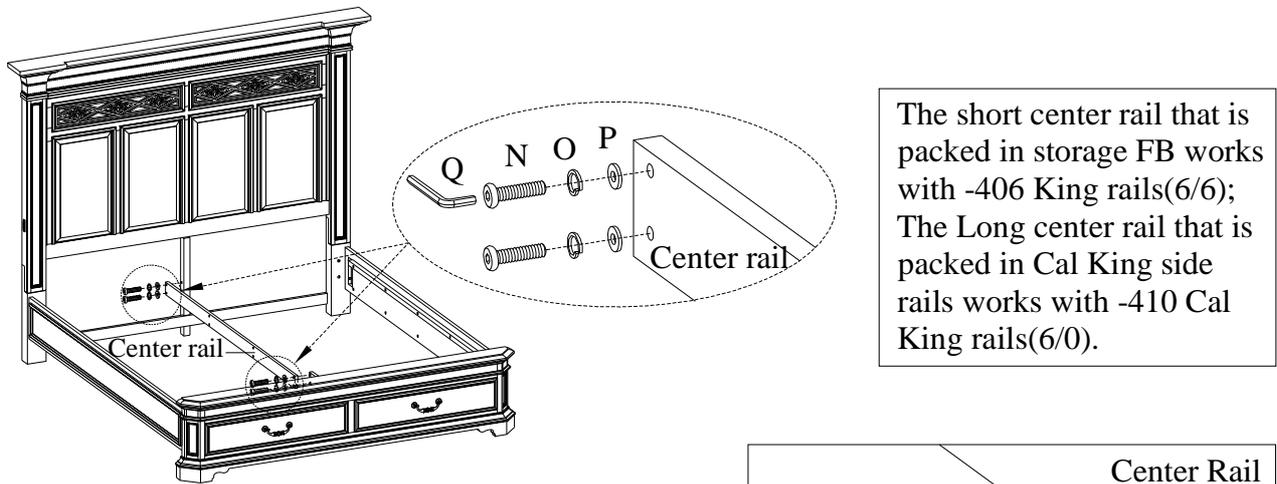


STEP 7: Attach 2 support legs (for center rail) to the center rail using 4 bolts(N), lock washers(O) and flat washers(P). Use the Allen Wrench (Q) to tighten all of the bolts.

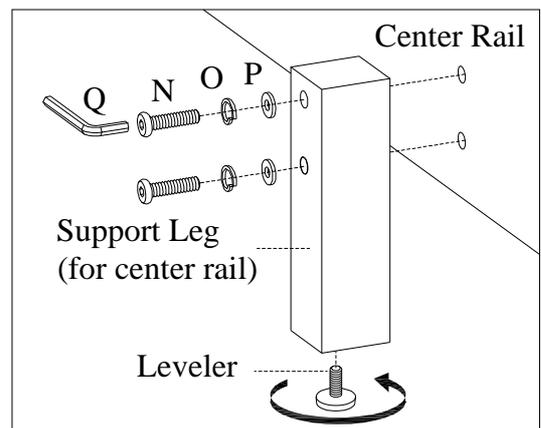




- ITEM NO: I201-415 King Estate Panel HB
 I201-406 King Rails
 I201-410 Cal King Rails
 I201-407D King Storage FB


STEP 8: Arrange slats on the slat bearers and then lay the decking on top of the slats. Make sure the top and bottom slats are situated underneath the pre-drilled holes as shown below in STEP 10. Remove the decking and attach slats to the slat bearers with wood screws (K).

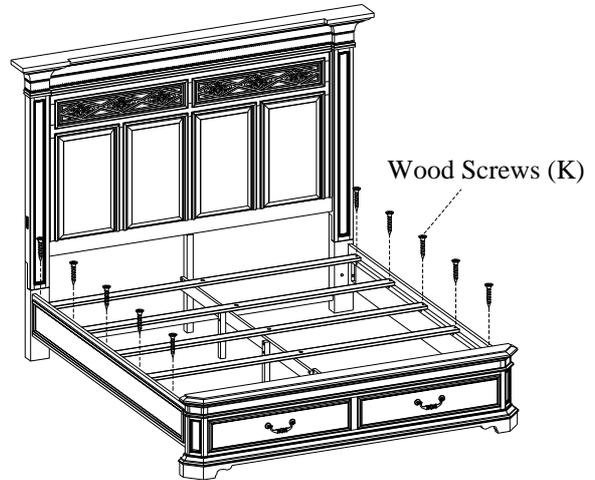


STEP 9: For the Cal King bed, both filler boards are notched. Using a utility knife only cut off the small piece at the notch on one of the filler boards. This cut off filler board will be placed at the foot of the bed going from left to right as shown on the right side below in STEP 10. For the standard King bed, skip this step and arrange the decking boards as shown on the left side below.

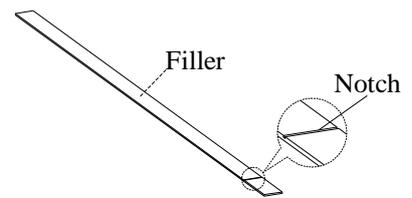

STEP 10: Put the decking over the slats, secure decking to the slats with wood screws (R) through the pre-drilled holes in the decking as shown below.

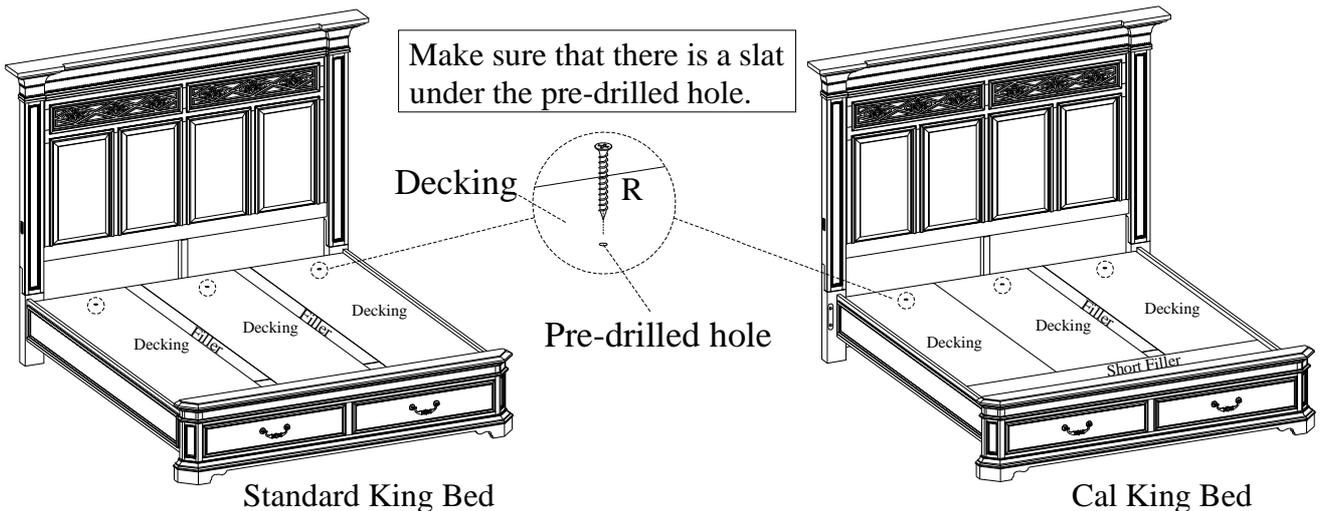

STEP 11: For Cal King bed, insert poly caps into the holes on headboard and footboard. For regular King bed, skip this step.

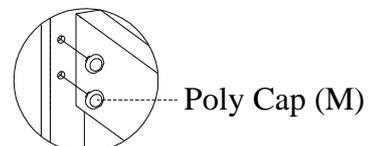




- ITEM NO: I201-415 King Estate Panel HB
 I201-406 King Rails
 I201-410 Cal King Rails
 I201-407D King Storage FB

FUNCTIONALITY INSTRUCTION

I201-415

2 Powered USB Port for Charging on both sides

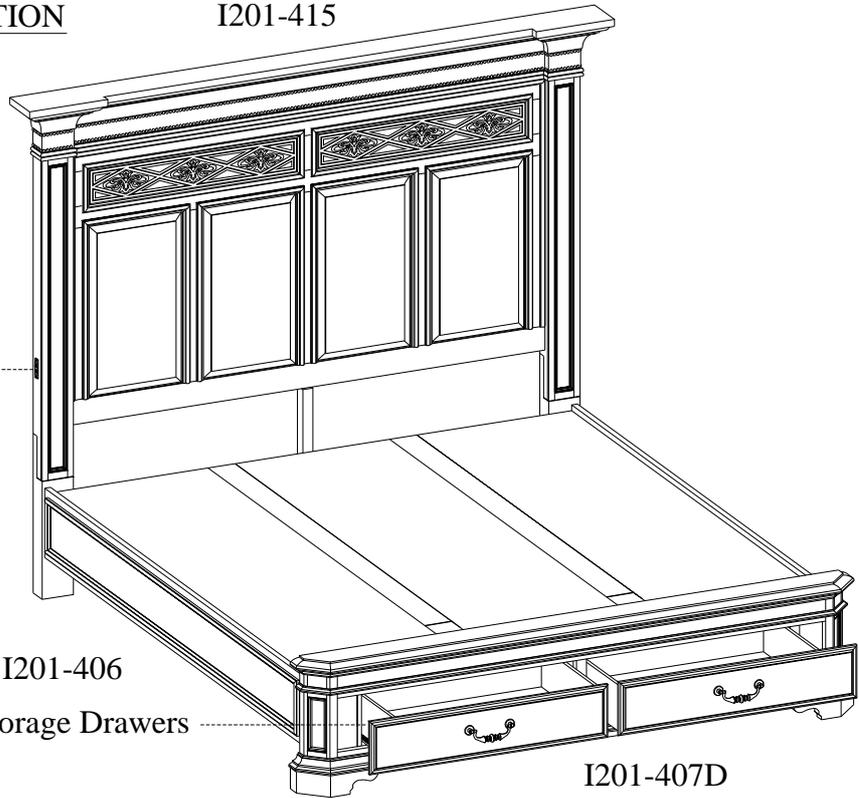

I201-415

2 Powered USB Port for Charging on both sides

