


ASSEMBLY INSTRUCTION

Model : SANTO-BROWN-KB-HB/SR/FB/POSTS

Description : King Bed

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

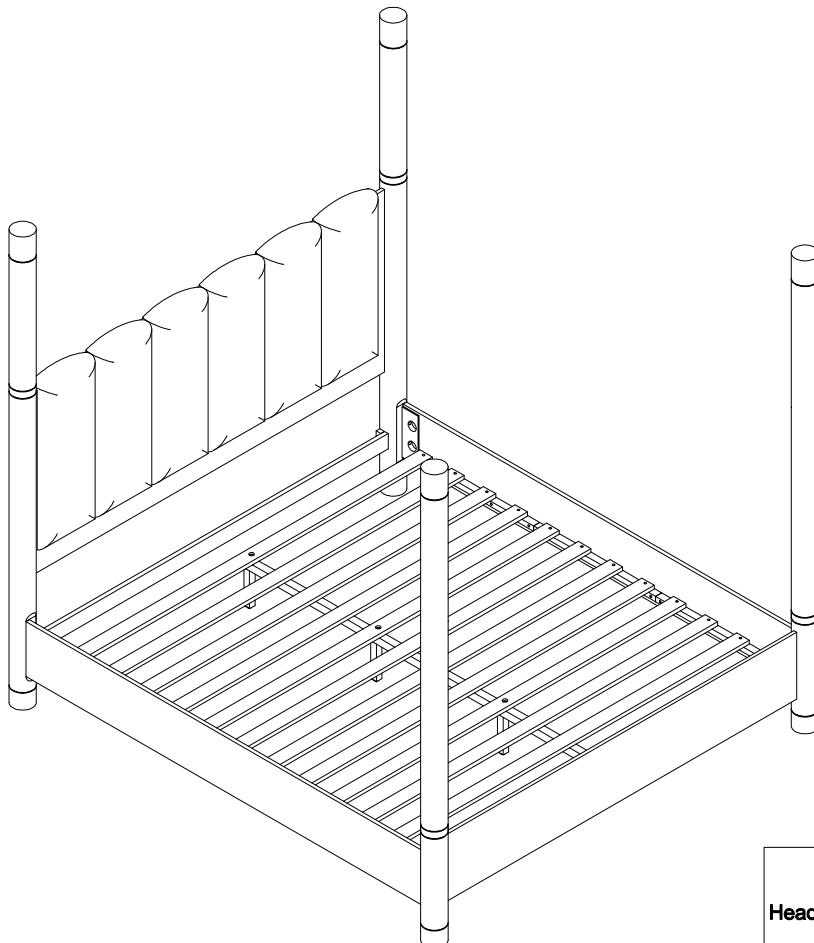

PART LIST:

No.	Description	Diagram	Quantity
A	Headboard Panel		1
B	Cross Bar		1
C	Footboard Panel		1
D	Slats		13
E	Siderail		2
F	Center Support		1
G	Support Leg		4
H	Top HB Leg		2
I	Bottom HB Leg (L/R)		2
J	Top FB Leg		2
K	Bottom FB Leg (L/R)		2

HARDWARE LIST:

No.	Description	Diagram	Size	Quantity
Headboard	M Bolt		Ø5/16"x45mm	8
	N Allen Key		M4	1
Footboard	L Bolt		Ø1/4"x32mm	4
	M Bolt		Ø5/16"x45mm	4
	O Screw		Ø4x30mm	26
Siderails	P Threaded rods		Ø5/16"x90mm	8
	Q Half moon nut		Ø5/16"	8
	R Hex Nut		Ø5/16"	8
	S Wrench		12mm	1


ASSEMBLY INSTRUCTION

Model : SANTO-BROWN-KB-HB/SR/FB/POSTS

Description : King Bed


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 1:

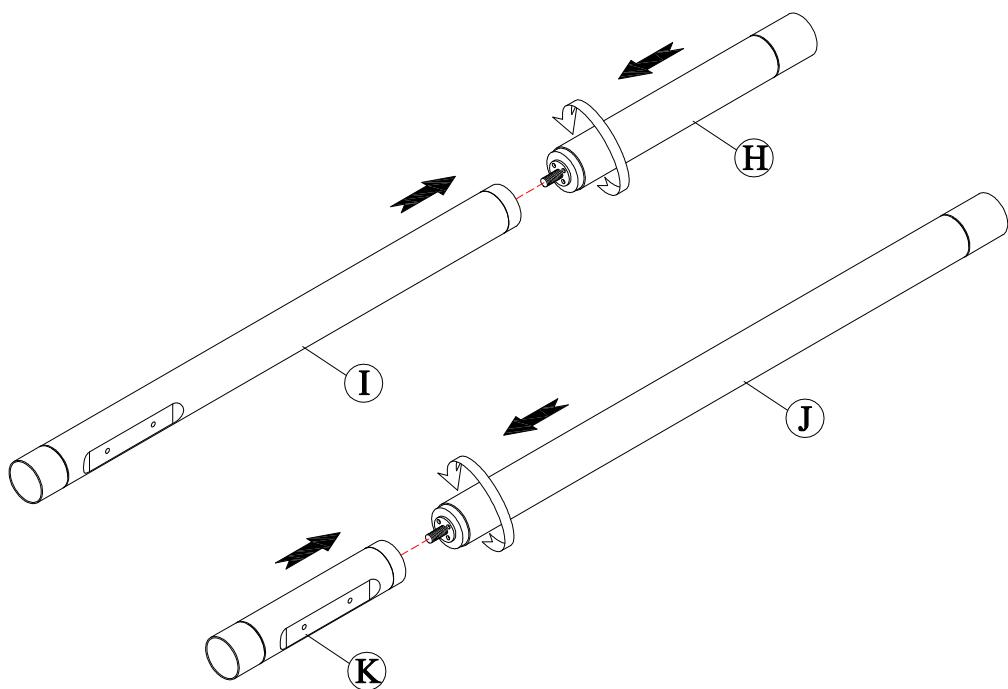

Attach the parts of the Headboard Leg (H,I) and Footboard Leg (J,K) by turning as clockwise direction.

Step 2:

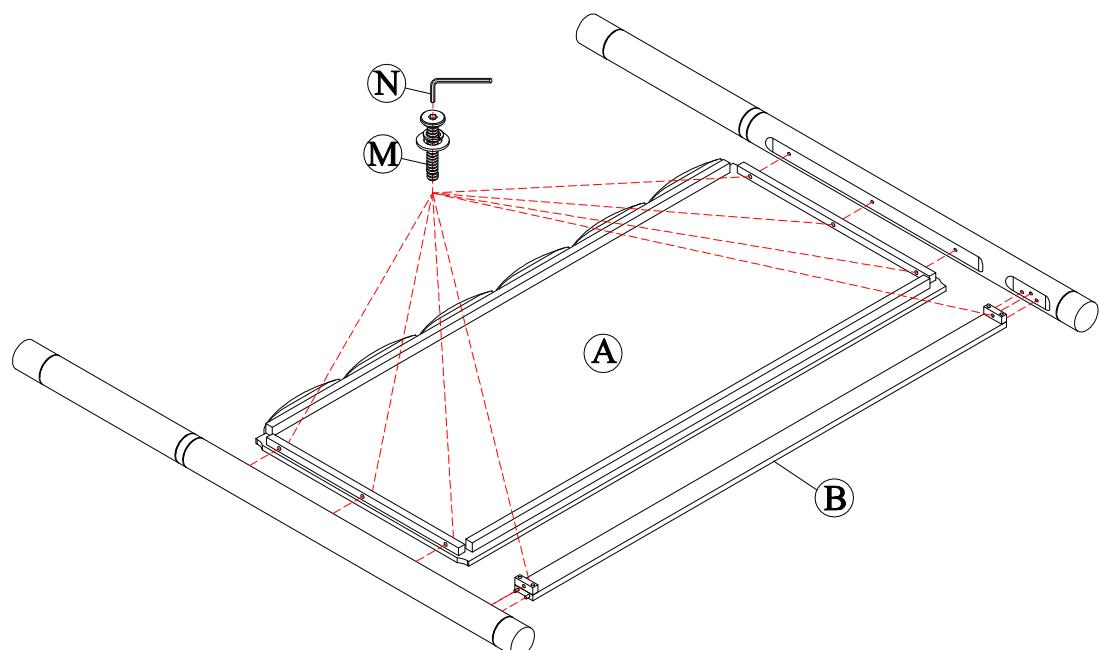

Attach Headboard Leg (L&R) to Headboard (A) and Cross Bar (B) by using Bolt (M) and tighten with Allen Key (N).


ASSEMBLY INSTRUCTION

Model : SANTO-BROWN-KB-HB/SR/FB/POSTS

Description : King Bed


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 3:

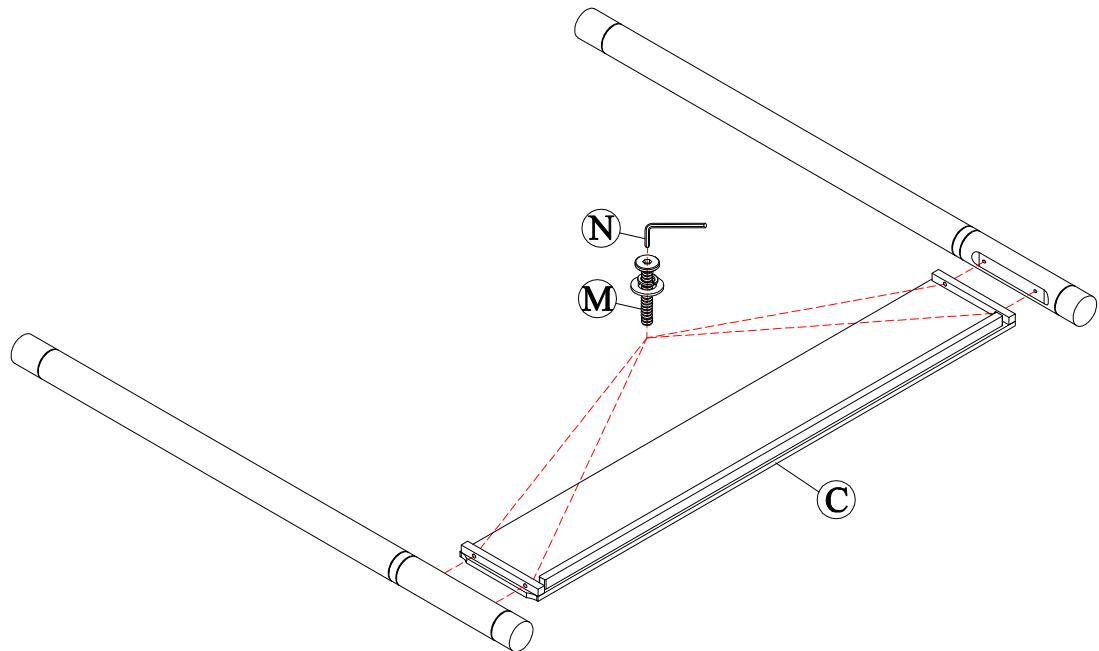

Attach Footboard Leg (L&R) to Footboard (C) by using Bolt (M) and tighten with Allen Key (N).

Step 4:

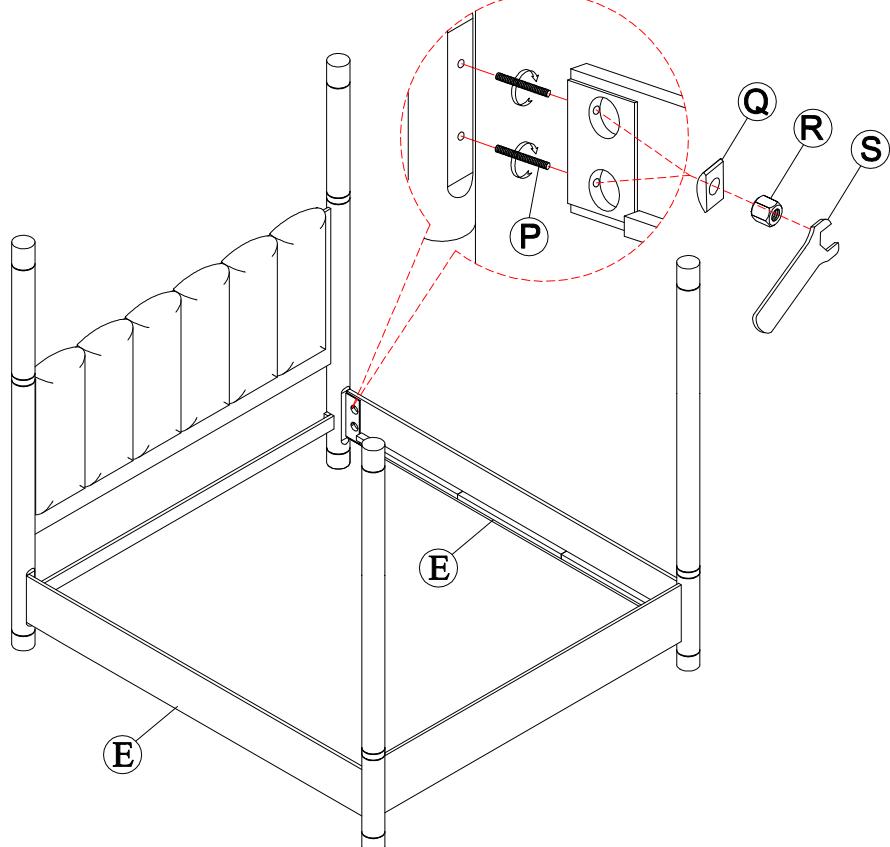

Attach Threaded Rods (P) to the Headboard and Footboard, then align side rail (E) to the Threaded Rods (P). Secure by using Nuts (R) with Half Moon Nut (Q).


ASSEMBLY INSTRUCTION

Model : SANTO-BROWN-KB-HB/SR/FB/POSTS

Description : King Bed


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment.

Step 5:

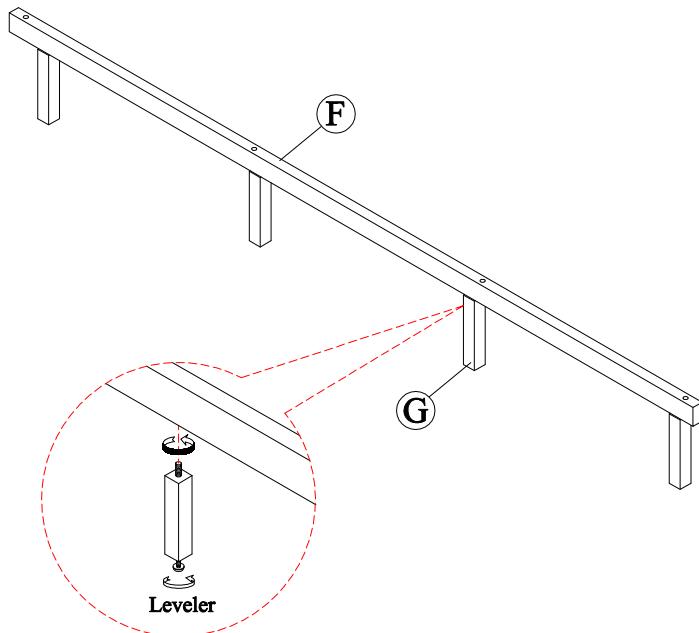

Attach Support Leg (G) to Center Support (F) by turning as clockwise direction.

Step 6:

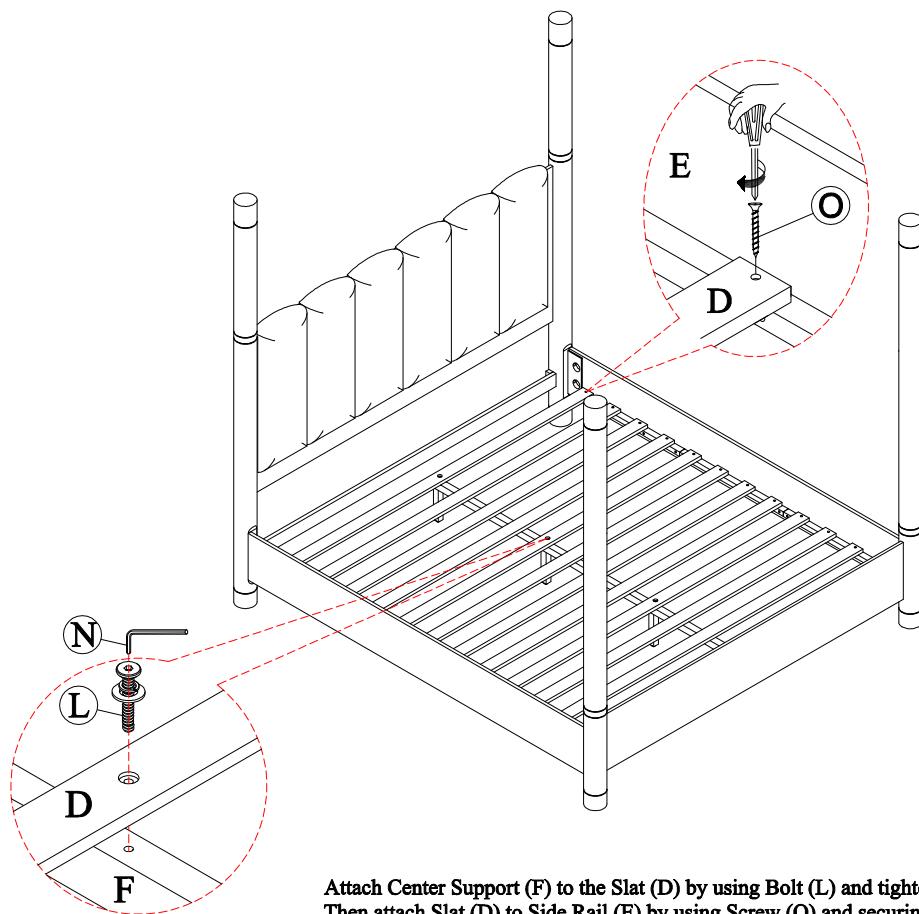

Attach Center Support (F) to the Slat (D) by using Bolt (L) and tighten with Allen Key (N). Then attach Slat (D) to Side Rail (E) by using Screw (O) and securing with Screw - driver (not included).